



# LEGEND Installation Manual

Be sure to store this manual in a secure location together with the operation manual as it describes items that must be understood by the customer.

## Installation Procedures

### 1 Move the chair to the installation location.



- Move the chair by holding the skid.  
(Carrying the chair by the upper part is dangerous because the base could come off and drop.)
- Remove the chair from the skid. Raise the chair off the floor by holding up the metal plate under the foot switch. Move the chair by holding the base.

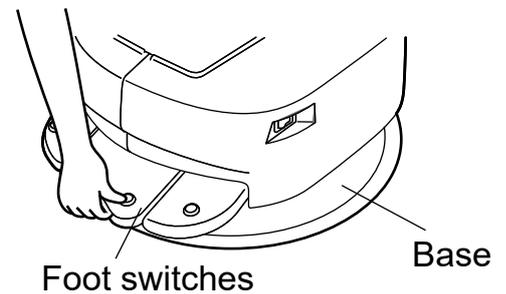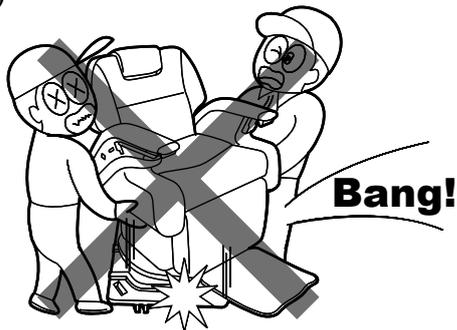

### 2 Attach the rubber ring to the base.


Determine the installation location. Lift the base off the floor and attach the rubber ring to the rim of the base.

- It's easier to lift it up one side at a time.

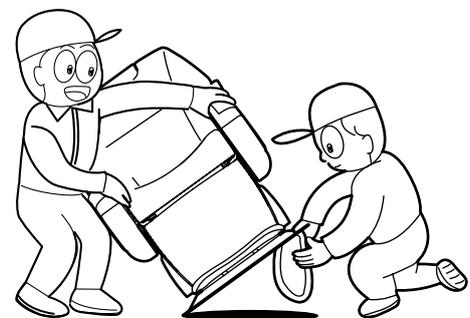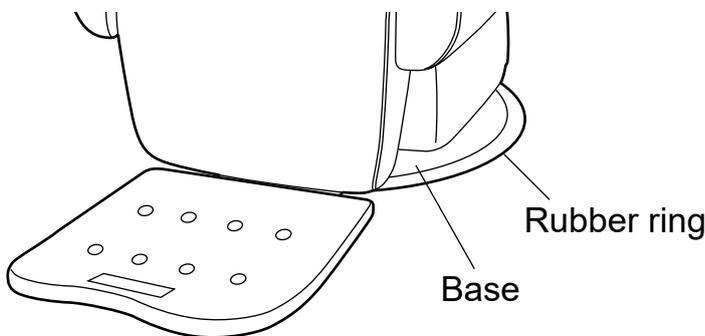

### ⚠ CAUTION

When it is difficult to carry the chair, attach the rubber ring or align the position while holding the base and foot switch, hold the armrest instead and perform the work. When doing so, pay attention to deformation of the cape holder, wrinkles and dirt of the leather, and coming-off of the base. Even if the armrest is held, the product may be damaged when excessive force is applied.

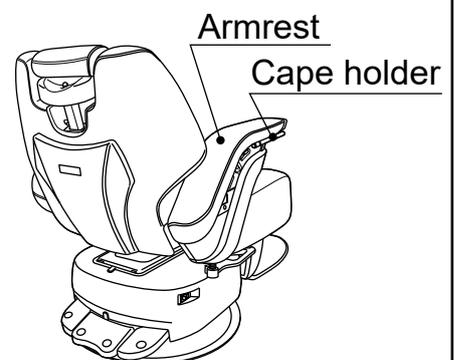

# LEGEND Installation Manual

## 3 Connect the power plug to the outlet with ground terminal


The chair must absolutely be grounded in order to prevent electric shock.

## 4 Check that the chair operates normally.

Turn the power on and check that the chair body, backrest and legrest operate normally. Especially the backrest is at a more upright position than a normal usage angle when shipped from the factory. Recline the backrest to a certain degree and raise again to return to a normal position, and then check for normal operation.

## 5 Install the step.

- Holding the step fixture against the positioning stoppers, attach the step fixture to the guide, and securely insert the nuts on the underside of the step into the two insertion holes.
- The adjuster is located on the underside of the step. To extend the adjuster, loosen the nut for the adjuster by using a wrench (No. 17) and turn the adjuster counterclockwise to adjust the height of the adjuster, and then tighten the nut for the adjuster by using a wrench (No. 17).

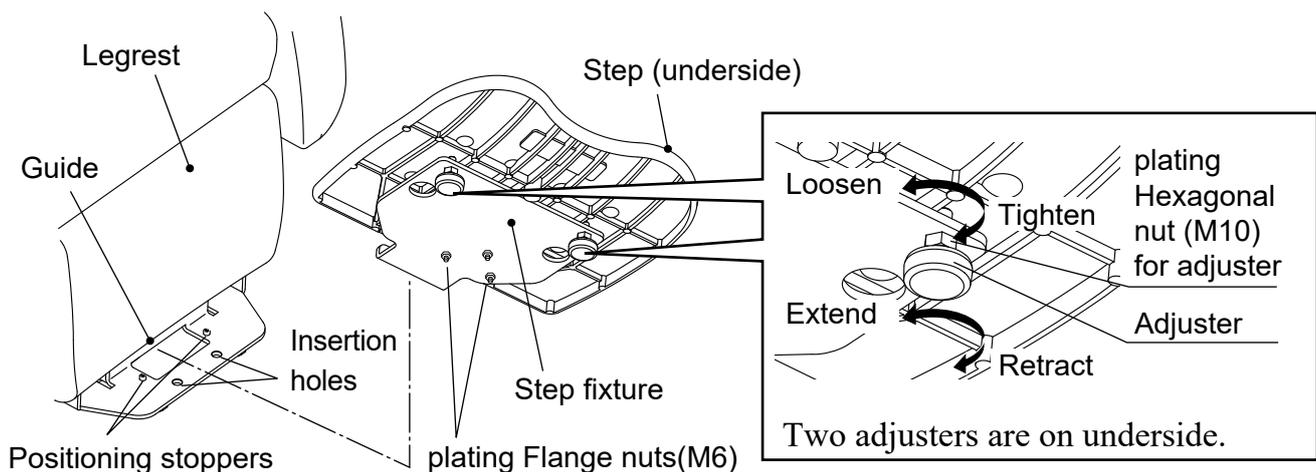

### **⚠ WARNING**

- After installing the step, check that the step fixture is securely held by the guide, the plating Flange nuts(M6) are inserted in the insertion holes, and the step is not loose. Be careful that there is no looseness as this could result in instability when the customer is getting in and out of the chair, and in rubbing against the upper surface of the step when the legrest is raised.
- Be careful when lifting and carrying the step, and of where you place it because the step is heavy. Dropping the step could result in serious injury.

### **⚠ CAUTION**

When extending the adjuster, be careful that the adjuster does not rub the floor or catch on the power cord during rotating the chair.

# LEGEND Installation Manual


## Adjusting Preset Positions

Although chair settings are previously set when shipped from the factory, you can reset them to positions that suit your needs.



\* The legrest is set to the lowest position (folded up) in order to prevent interfering with surrounding equipment due to faulty or unintentional operation during installation.

1 Turn on the power switch and move the chair to the desired position.


UP/DOWN foot switch

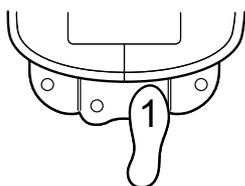

Control Panel

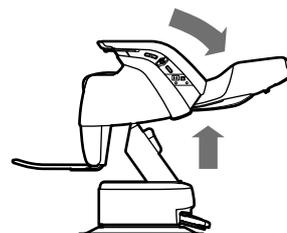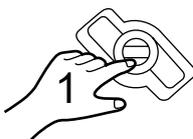

2 With the chair in that position, turn off the power switch.

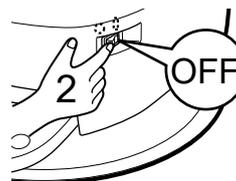


3 Press and hold the preset switch where you want to save the setting (P1 or P2), and turn on the power switch. Keep pressing the preset switch for approximately three seconds.

Approx. 3 seconds ▼


Electronic beep is emitted.

Keep pressing until you hear an electronic beep.

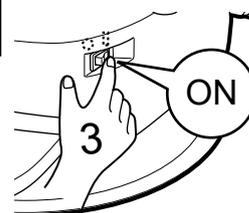

Control Panel

4 Setting is completed when the electronic beep is emitted. Return the chair to its original position by using the auto-return switch, and use the preset switch to check the set position.

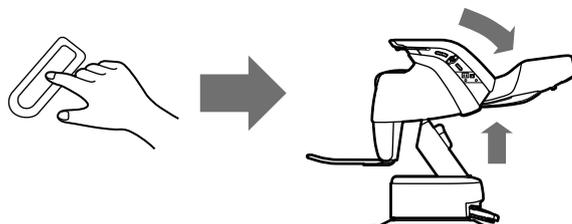

### ⚠ WARNING

Be very careful when setting the position of the legrest that the customer's leg will not contact equipment or other items near the chair or other items.

### NOTICE

Perform desired position setting of the preset function with a person sitting in the chair. As this chair is equipped with a shockless device, setting the desired position without someone sitting in the chair will result in slight variation of the final operating position.

# **LEGEND Installation Manual**

## **Usage environment**

Temperature 0 ~ 40°C

Humidity 10 ~ 95% (No condensation)

Air pressure 700 ~ 1060 hPa

## **Transportation / Storage environment**

Temperature -20 ~ 70°C

Humidity 10 ~ 95% (No condensation)

Air pressure 700 ~ 1060 hPa