

# LUAR Installation Manual



Although this manual is a separate document from the operation manual, as it describes items that must be understood by the customer, be sure to store this manual in a secure location together with the operation manual.

## Installation Procedures

### 1. Move the chair to the installation location.



- Remove the chair from the wood box. Raise the chair off the floor by holding the metal plate under the foot switch (do not hold the plastic parts). Move the chair by holding the base and body, or the metal plate of the foot switches. Do not hold the chair by the skirt.

- Carrying the chair by the upper part is dangerous because the base could come off and drop.

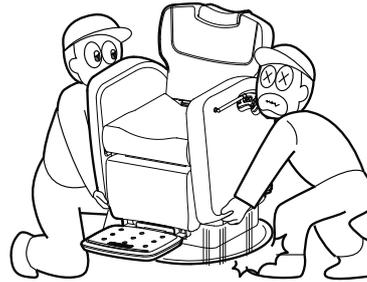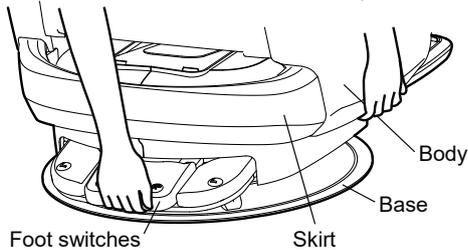

### 2. Attach the rubber ring to the base.

Determine the installation location. Lift the base off the floor and attach the rubber ring to the rim of the base.

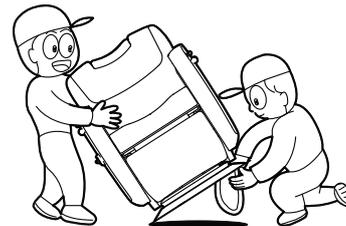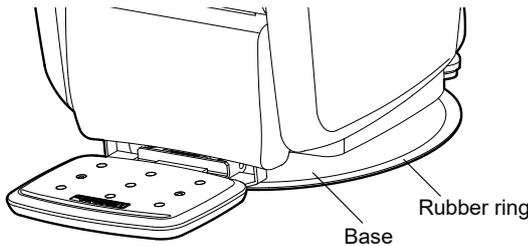

- It's easier to lift it up one side at a time.

### 3. If assembling together with the Yume Swing bowl:

Lock rotation at the Yume Swing setting position where the Yume Swing position setting and the bowl position are optimally aligned. At that position, manually align the positions of the chair and bowl, and set the preset setting. After completing the setting, return the chair to its original position by using the auto-return switch, and use the preset switch to check the set position.


### 4. Connect the power plug to the outlet with ground terminal.

The chair must absolutely be grounded in order to prevent electric shock.


### 5. Install the footrest.

1. Raise the legrest. (Refer to "Raising the legrest" of the operation manual for the legrest raising procedures.)
2. Holding the footrest fixture against the positioning stoppers, attach the footrest fixture to the guide, and securely insert the nuts on the underside of the footrest into the two (three for independent legrest type) insertion holes.

(Legrest-footrest linked type)

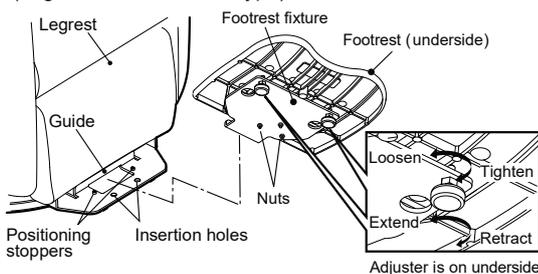

(Independent legrest type)

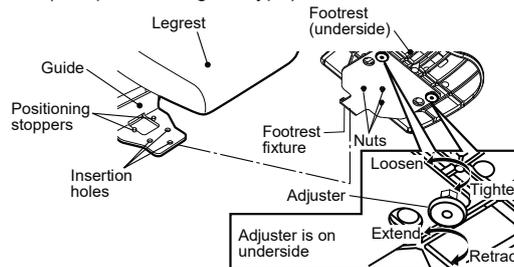

### CAUTION

#### Precautions when extending the adjuster

Adjust the adjuster so that the power cord is not caught or pulled, and the chair does not rub on the floor when rotating the chair with someone seated in it. Failure to follow this caution can result in an unexpected accident or damage to the floor.




# LUAR Installation Manual

## Adjusting Preset Positions


Although chair settings are previously set\* when shipped from the factory, you can reset them to positions that suit your needs.

\* The legrest is set to the lowest position (folded up) in order to prevent interfering with surrounding equipment due to faulty or unintentional operation during installation.

1. Turn on the power switch and move the chair to the desired position.

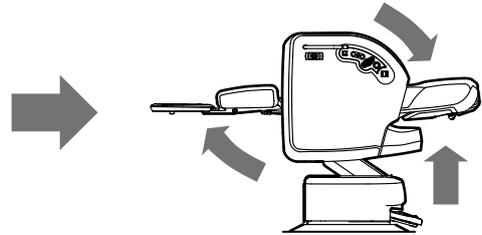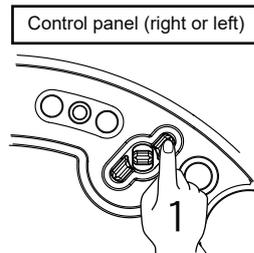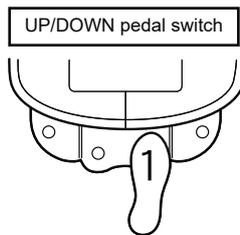


2. With the chair in that position, turn off the power switch.

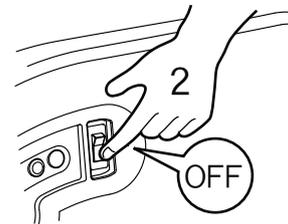


3. Press and hold the preset switch where you want to save the setting (P1, P2, or P3), and turn on the power switch. Keep pressing the preset switch for approximately three seconds.

Electronic beep is emitted.

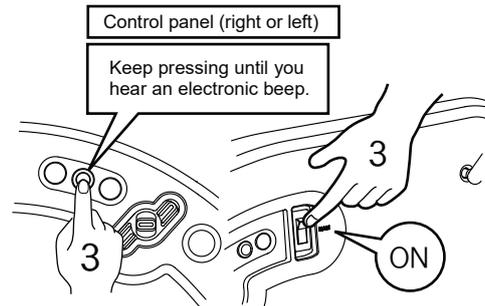

4. Setting is completed when the electronic beep is emitted. Return the chair to its original position by using the auto-return switch, and use the preset switch to check the set position.

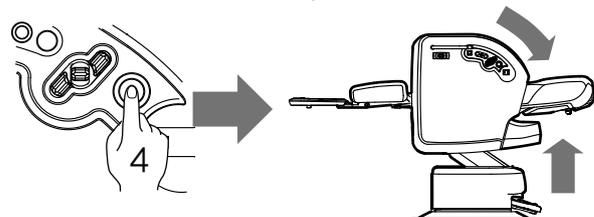

### ⚠ WARNING

- Be very careful when setting the position of the legrest that the customer's leg will not contact equipment or other items near the chair or other items.
- Perform position setting with a person sitting in the chair. The chair is equipped with a shockless device. Accordingly, the final operating position varies slightly if position setting is performed without a person sitting in the chair.

## Usage environment

Temperature 0 ~ 40°C  
Humidity 10 ~ 95% (No condensation)  
Air pressure 700 ~ 1060 hPa

## Transportation / Storage environment

Temperature -20 ~ 70°C  
Humidity 10 ~ 95% (No condensation)  
Air pressure 700 ~ 1060 hPa