


Takara Belmont Relaxation Chair

CALME

Model **SC-RXB**
SC-RXBL
SC-RXBR

Operating Instructions

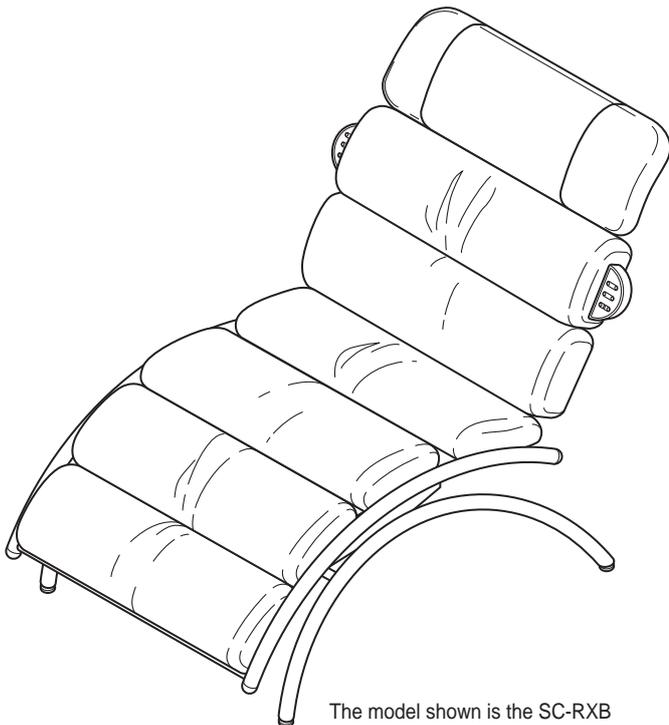

The model shown is the SC-RXB

Thank you for purchasing our product. Please read through this manual and this note carefully before installing or using. These instructions provide important information for correct usage of the product to avoid personal injuries or property damages against you or your clients.

This product is intended for the exclusive use in hair salon or esthetic salon for their treatment and service, and must be operated or handled by the qualified/professional hairdressers or by their staff under the supervision of hairdressers.

CONTENTS

Safety Precautions (Warnings and Cautions)	1
Positions of Warning Labels	3
Operating Precautions	3
Component Parts	4
Getting Started	
Installation Position	5
Power Supply	6
Operating Procedures	
1 First Step	7
2 Sliding Seat	7
3 Headrest Mode	8
4 Reclining/Raising the Chair	8
5 Using the Automatic Setting/Resetting Functions	9
6 Using the Utility Outlet	10
Maintenance Procedures	11
Troubleshooting	12
Specifications	13

Safety Precautions (Warning and Caution)

You must observe the safety precautions.

■ Before operating the product

Please carefully read the "Safety Precautions" and operate the product correctly. In order to ensure safe, appropriate use of the product and prevent personal injury of the operator and other persons as well as property damage, precautionary symbols are used with the product and the manual.

These symbols and meanings are stated below. Please read and understand the meaning of the precautions before reading this manual, observe all precautions.



This symbol refers to precautions: "Should this Warning be ignored, there is the possibility of fatal or serious injuries."



This symbol refers to precautions: "Should this caution be ignored, there is the possibility of serious or moderate injury or property damage."



This symbol indicates notices of warning and danger in general.



This symbol indicates compulsory actions or instructions for general operators.



This symbol indicates notices of caution in general.



This symbol indicates the instruction to disconnect the power plug from a wall outlet.



This symbol indicates prohibited actions in general.



This symbol indicates the instruction to ensure the connection of the grounding wire.



This symbol indicates prohibition of disassembly, repair, or modification.



MANUFACTURER

Warning

Be sure to connect a grounding wire.



Failure to heed this warning may result in electric shock hazard if the product malfunctions or an electric short occurs. For the installation of the grounding wire, ask a specialist.

Observe the correct handling of the power cord.




- When disconnecting the power plug, pull it by holding the power plug, not the cord. Failure to heed this warning may result in damage to the wire.
- Do not operate the product if the power cord or plug is damaged, or if the plug is loose at the wall outlet. Failure to heed this warning may result in electrical shock hazard or fire.

Observe the following instructions when operating the chair:




Be sure to check that no other persons are near the chair. Failure to heed this warning may cause the chair to hit the person, resulting in personal injury.

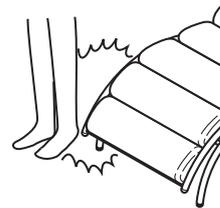

Observe the following when relocating the chair:



Be sure to hold the chair with the pipe portion instead of holding it at the control panel.

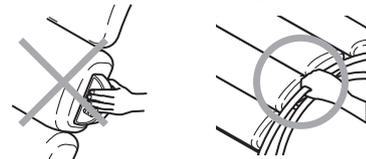

Observe the following when handling the power plug:



- Use electric power of specified voltage.
- Be sure to fully insert the power plug into the outlet.

Disconnect the power plug when the product will not be used for a long period of time.




For safety reasons, be sure to disconnect the power plug when the product will not be used for a long period of time, e.g., at the end of operations for the day or taking the day off. Failure to follow this instruction could result in electric shock hazard or fire due to deteriorated insulation.

Pay attention to the clearance between the seat and the wall in front of the seat.



Before operating the chair, check that adequate clearance is ensured between the customer's legs and the wall. Failure to follow this instruction could result in personal injury.

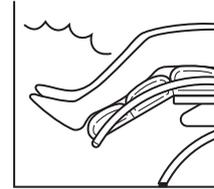

Do not disassemble, repair, or modify the product.



Disassembly, repair, or modification must be performed only by qualified service engineers. Failure to follow this instruction could result in electrical shock hazard, ignition, or injuries due to unusual operations.



Take care when operating this product.



When operating this product, ensure that the customer is seated deeply in the seat and that their feet are on the leg rest, and keep an eye on them during operation. If you notice anything unusual, stop the operation immediately, especially if elderly customers or small children are seated in the seat, as the change in posture caused by the Auto Mode operation may cause unexpected strain.



Caution

Be sure get on and get off the chair when the chair is in the home position.



Be sure get on and get off the chair when the chair is in the home position. If you do this when the chair is in the fully reclined position, the chair may tip up, resulting in personal injury.

Do not sit on the leg rest.



Do not sit on the leg rest. Sitting on the leg rest could cause the chair to tip up.

Pay attention to the surroundings when relocating the chair.




Check for persons or any obstacles when operating the chair. If the chair hits a person, he or she may be injured.

Install the chair on a stable floor.



Be sure to install the chair on a flat, rigid floor, otherwise, the chair may tip over.

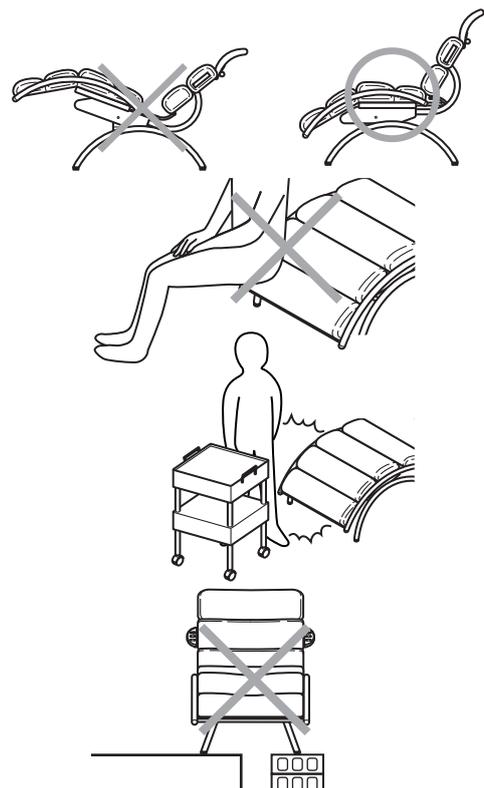


Safety Precautions (Warning and Caution)

Do not allow customers to touch the switches.



- Do not allow customers to touch the switches as this may cause personal injury.
- If the chair is not in use, disconnect the power plug so that other persons will not operate it by accident.

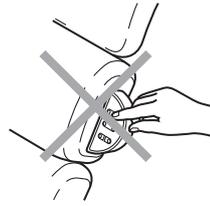

Do not stand on the chair.




Failure to follow this instruction could result in the breakage of the chair or personal injury.



Positions of Warning Labels


▲ 警告 WARNING	▲ 警告 WARNING	▲ 警告 WARNING	▲ 警告 WARNING
作動時にはさみ込みのおそれあり 周囲に障害物があるときは機器を作動させない Risk of Pinching KEEP OFF hands or obstacles when adjusting angle.	漏電のおそれあり 水などをかけて掃除をしない Risk of Electric Leakage. DO NOT drench the unit.	誤作動や漏電火災のおそれあり 使用しない場合は電源プラグを必ず抜く Disconnect power supply plug when unit is not in use.	感電や発火・異常作動のおそれあり 分解や修理・改造は絶対に行わない Risk of Electric Shock and Malfunction. DO NOT attempt to disassemble, repair or modify.
上記以外の注意事項については取扱説明書をよくお読みください Please read the Operating Manual carefully for other safety cautions.			

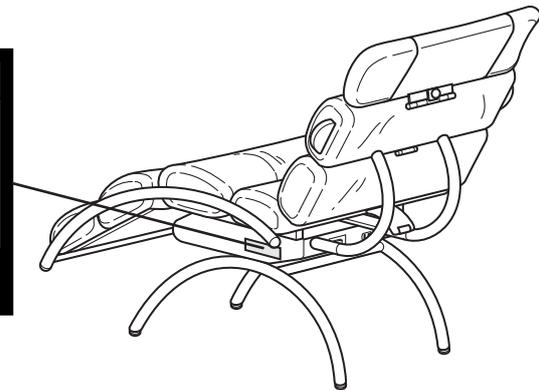

Operating Precautions


Do not clean the chair with chemicals, nor apply heat.

If chemicals contact the leather portions or covers, immediately wipe them off. Failure to follow this instruction could result in damage or staining.

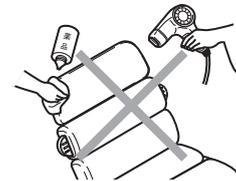

Do not place objects on the seat.



Do not place objects on the seat. Failure to follow this instruction could result in the deformation, breakage, or corrosion of leather parts.

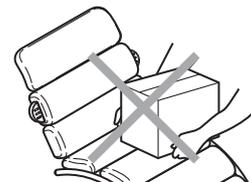

Component Parts

Main Unit

* The model shown is the SC-RXB.

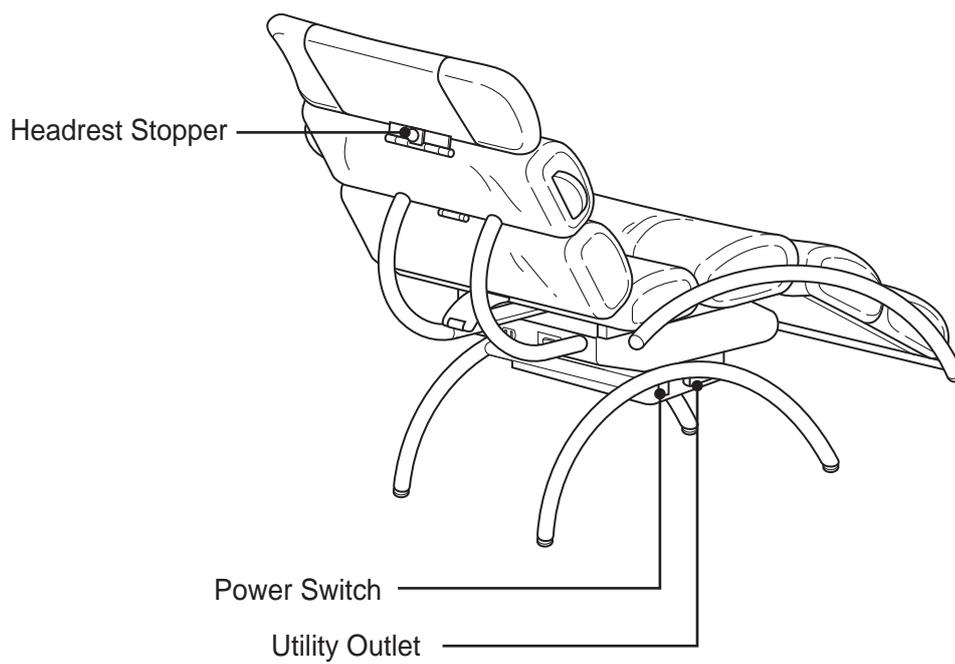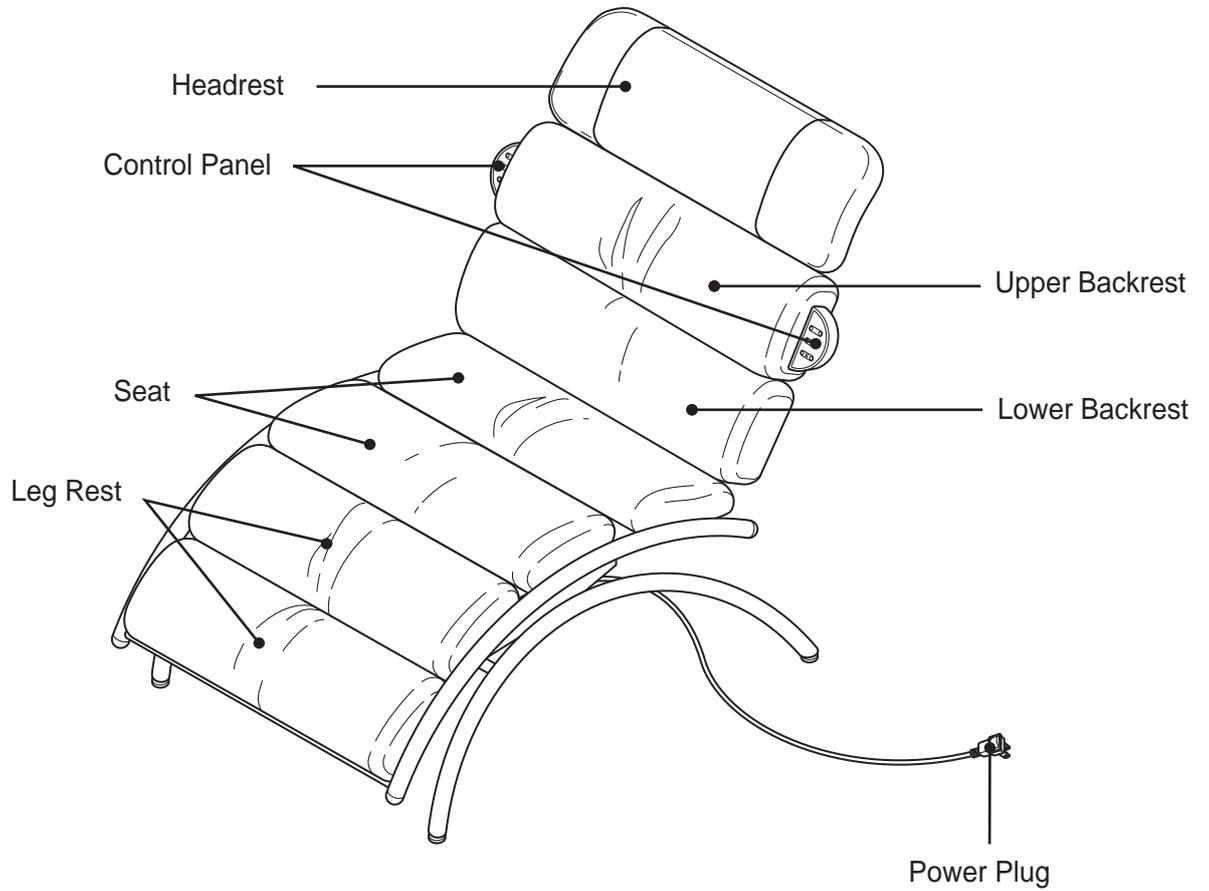


Component Parts

Operating Unit


Control Panel

Left Side

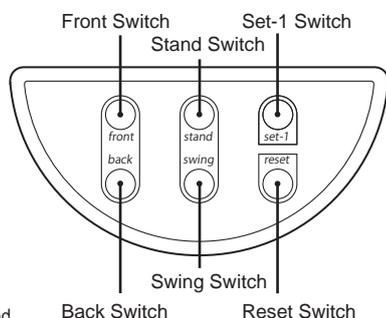

* The models shown are the SC-RXB and SC-RXBL.

Right Side

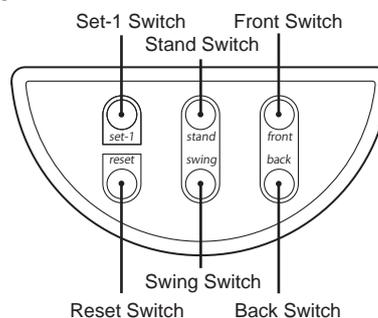


* The models shown are the SC-RXB and SC-RXBR.

Getting Started

Installation Position

(When working on shampoo in the rear shampoo swing mode). Install the chair leaving a clearance of about a palm thickness between the chair and the bowl.

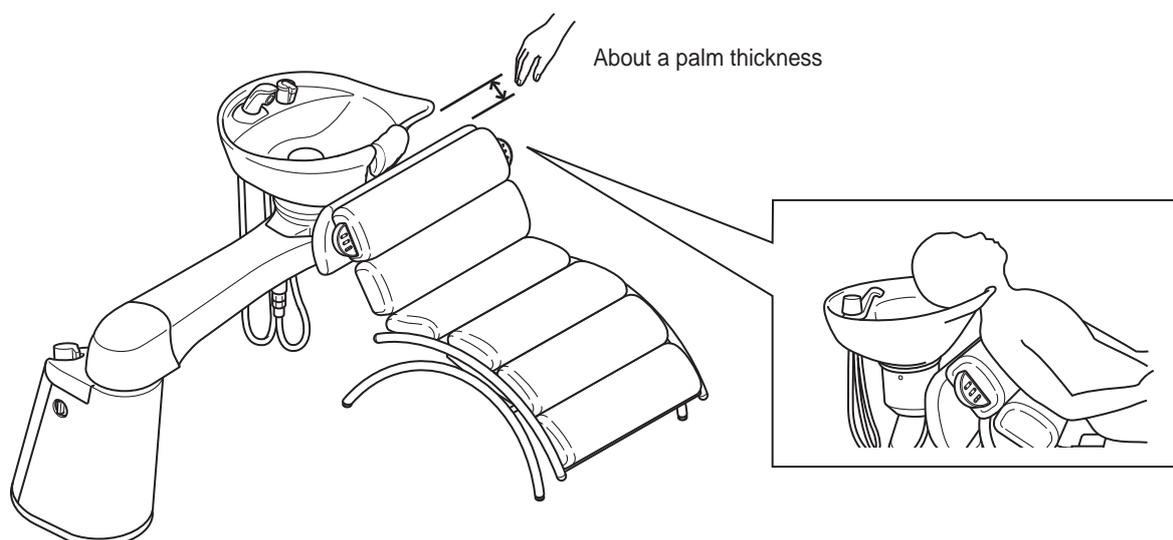

Adjust the shampoo position by sliding the seat back and forth with the headrest down and the seatback up.

- Note
- Install the chair so that the chair does not come in contact with the bowl. If the chair contacts the bowl, this may result in personal injury or property damage.
 - Be careful not to allow your hands, etc. to be caught between the bowl and the chair.

Power Supply

1. Firmly insert the power plug into the wall outlet.


 **Warning**

- Use electric power of specified voltage. Do not connect another electrical appliance to the same wall outlet.
- Fully insert the power plug into the outlet. To disconnect the power plug, be sure to pull it by holding the power plug instead of holding the cord.
- Do not connect the grounding wire to the following points:-Gas pipe, water pipe, lightning rod, or ground wire for the telephone.
- Electrical wiring requires qualified personnel. Contact a specialized shop.



Be sure to connect the grounding wire as it prevents unexpected electrical shock hazard.

2. Turning on the Power

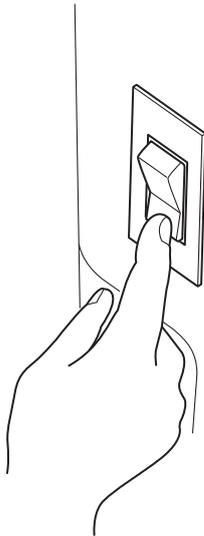

- A power switch (with the breaker function) is provided on the back of the chair. A press on the right side of the switch turns on the power.

 **Warning**

- Disconnect the power plug when the product will not be used for a long period of time, e.g., at the end of operation for the day or taking the day off.

Note

- The power switch should be operated by hand.

Operating Procedures


1 First Step

Set the chair in the home position so that the customer can take a seat easily.


1 Press the “Back” switch on the control panel, and then press the “Stand” switch.

Press and hold the two switches until the chair stops moving. This will bring the chair back to the home position.

*Alternatively, you can press the “Reset” switch twice to return the chair to the home position.

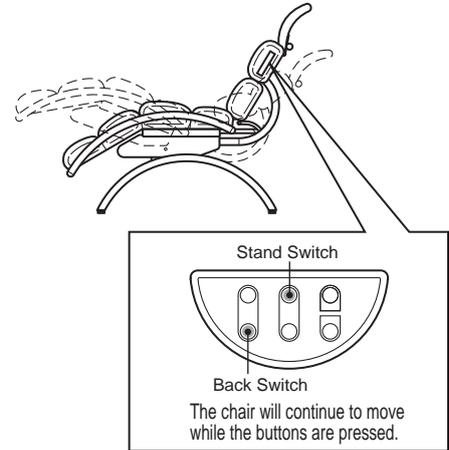

2 Allow the customer to take a seat from the side of the chair.

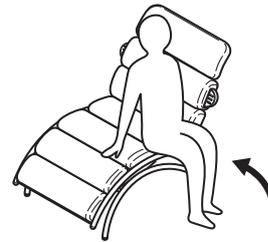


Caution

- When the customer is taking a seat, ensure they do not sit on the leg rest. The chair may become unbalanced, resulting in it tipping up.

2 Sliding Seat

Sliding the seat, press the “Front” switch.

This will move the seat forward. Stop the seat at a position adequate for the seated height of the customer. To slide the seat backward, press the “Back” switch.

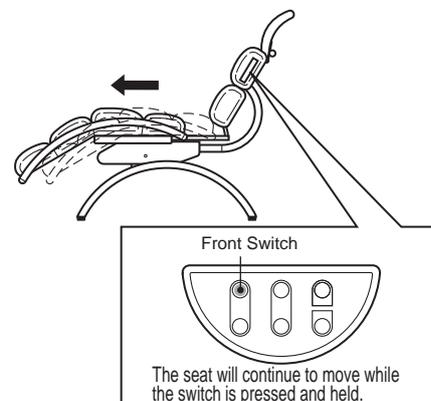


Warning

- When sliding the seat, be sure to check that there is no person around the chair before operating the seat. Also, check that adequate clearance is ensured between the customer's legs and the wall, etc. in front of the customer. Failure to heed this warning may cause personal injury.

3 Operating the Headrest

● Taking down the Headrest

Slide the Headrest stopper and release the lock.

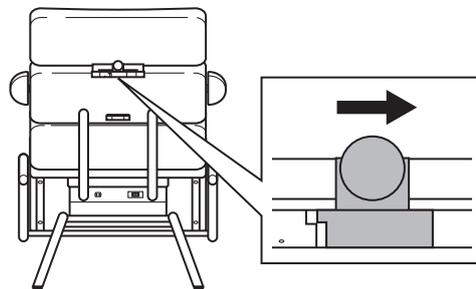


Turn the Headrest down backward.



● Raising the Headrest

Lift the headrest forward until the stopper is firmly locked.

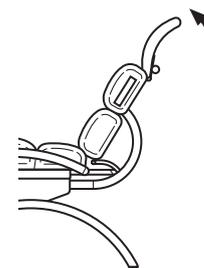

Visually check that the stopper has been locked.



Warning

- Do not use the chair unless the headrest is locked. Failure to heed this warning may result in personal injury.

4 Reclining / Raising the Chair



The entire chair will recline.

● Reclining the Chair

Be sure to raise the headrest before reclining the chair.
Press the "Swing" switch.

● Raising the Chair


Press the "Stand" switch.

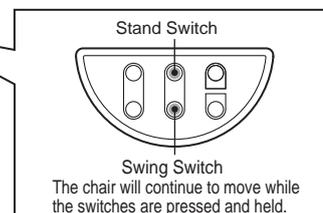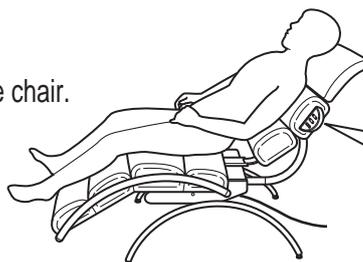

5 Using the Automatic Setting / Resetting Functions

● Using the Automatic Setting Function

Pressing “Set-1” switch on the control panel initiates the reclining of the chair to a preset position.

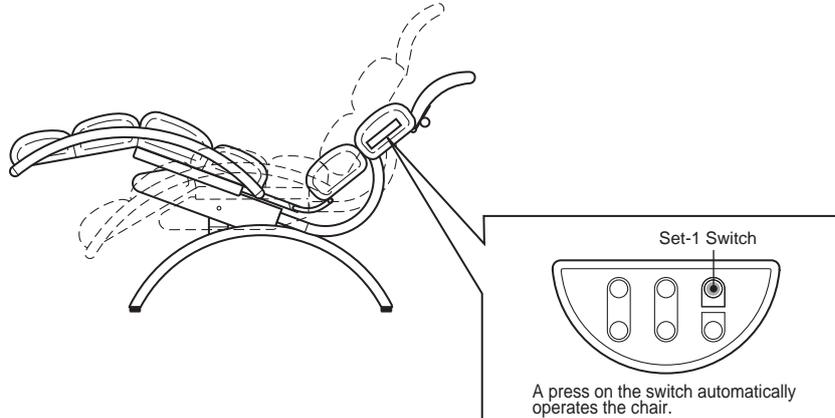


Adjusting the automatic set position

The standard automatic set position has been adjusted at the factory. You can change the automatic set position using the following procedures:

1. Recline the chair to the desired position.
2. Turn off the power switch.
3. Turn on the power switch while pressing and holding the “Set-1” switch.
4. As you press and hold the “Set-1” switch, you will hear a beep. This completes the setting.
5. Check that the chair will recline to the specified position by pressing the “Set-1” switch.

● Using the Automatic Resetting Function

Pressing “Reset” switch on the control panel will restore the backrest to the full upright position. Pressing “Reset” switch will bring the seat back to the home position.

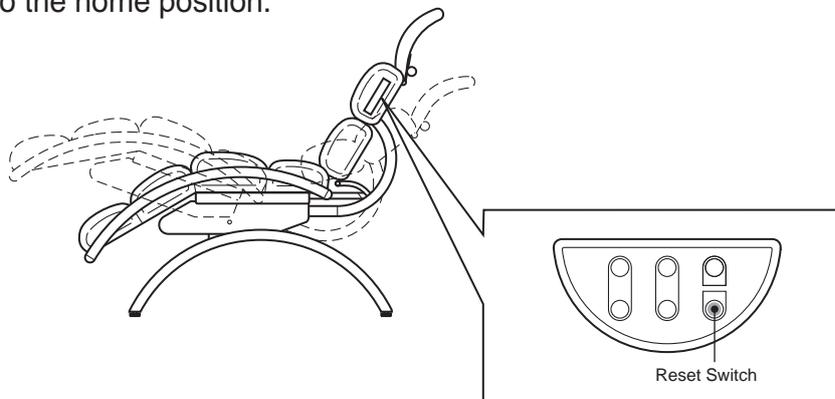


Cancel Function

If you want to stop the chair movement initiated by pressing either the “Set-1” switch or the “Reset” switch, press either one of the switches. This will activate the cancel function to stop the chair movement.

6 Using the Utility Outlet

A utility outlet with an AC 230V 5A rating is provided on the right side of the chair.


When the outlet is overloaded, the power switch is automatically disconnected. When this happens, stop using the apparatus connected to the outlet, and press the power switch again to resume power.

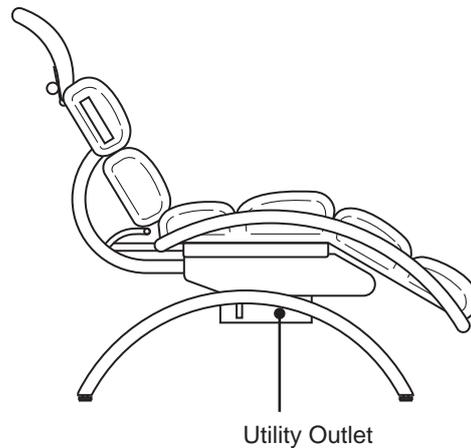

Maintenance Procedures

■ Leather Part

Wipe with a dry soft cloth.

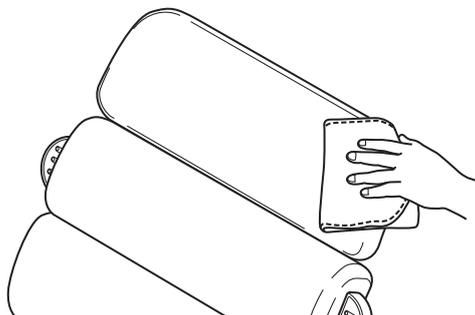


If heavily soiled,

Wipe the soiled area with diluted natural detergent.

■ Control Unit / Metal Part

Wipe with a dry soft cloth.

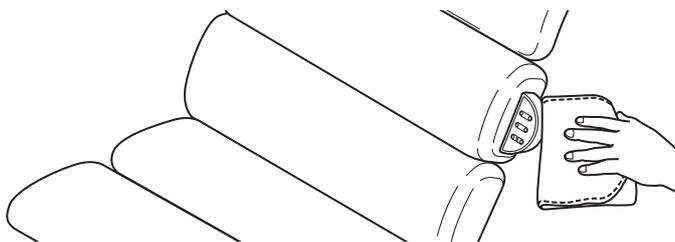


If water splashes on it, immediately wipe it up.
Otherwise, the water may cause rest or failure of the electrical parts.

Note:

Do not use the following for cleaning:

Volatile chemicals, such as thinner, alcohol, gasoline, and kerosene, or wax or sponges containing abrasives.

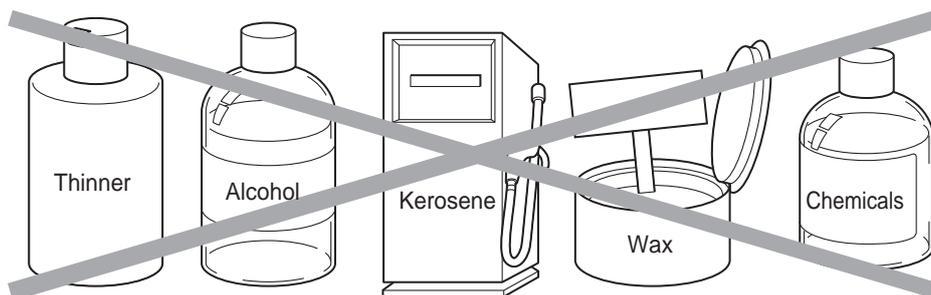


Troubleshooting

In The Case Of

Please check the following.

- The seat or the chair does not operate.

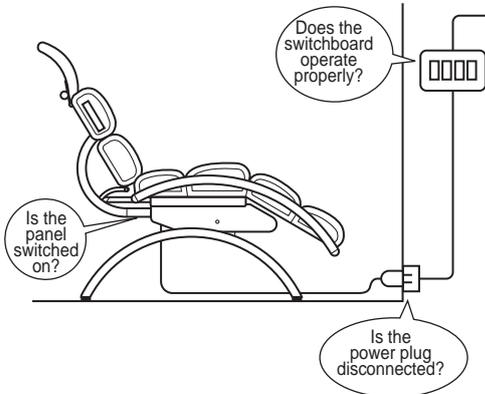

- The power switch is turned off when the utility outlet is used.

- Is the power plug correctly inserted into an outlet?
- Is the power switch turned on?
- Is the fuse in the distribution panel of the shop blown out, or is the breaker disconnected?
- Have you been operating the chair continuously for a long period of time?
 - ⇒ The overheat protection device may have been activated. Leave the chair unoperated for about 10 minutes, and the normal operating condition will be restored.


Overheating Protection Device

Failure of internal apparatus due to continuous operation, etc.
This is a protection circuit to prevent overheating.
The chair may not be operable temporarily.

- Is the rated power consumption 500 W or below?
- Is there a short circuit within the apparatus?
 - ⇒ Connect another apparatus to the outlet to see if the problem occurs again.

**If you are still experiencing problems,
please contact our Service Center or Sales Office.**

Dimensions

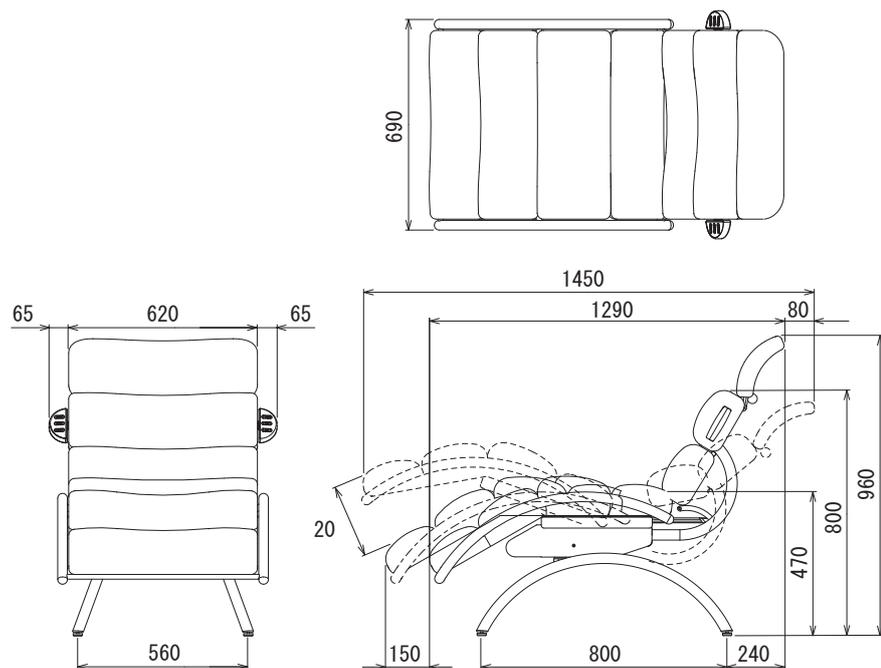

Type	SC-RXB SC-RXBL SC-RXBR
Rated voltage and frequency	110V/120V 220V/230V/240V 50/60 Hz
Rated electricity consumption	240/220W
Weight	56 kg

 Caution	
 <p>Be careful of use. Children shall not play with the appliance.</p>	 <p>Be careful of use. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.</p>
 <p>Be careful of use. Cleaning and user maintenance shall not be made by children without supervision.</p>	

IMPORTER INFORMATION

COUNTRY		REGISTERED PLACE OF BUSINESS & ADDRESS
GBR	Importer in UK	TAKARA BELMONT(U.K.)LTD. BELMONT HOUSE, ONE ST.ANDREWS WAY, BOW LONDON E3 3PA, ENGLAND
DEU	Importeur in Deutschland	TAKARA COMPANY EUROPE GmbH BERNER STRASSE 18, 60437 FRANKFURT/M, GERMANY
FRA	Importateur en France	TAKARA COMPAGNIE PARIS S.A.R.L. 56 rue des Hautes Pâtures 92009 NANTERRE Cedex France
ITA	Importatore in Italia	TAKARA BELMONT ITALY S.R.L. Via Marino Mazzacurati No.4/1, 42019 Scandiano RE, Italy

EU Declaration of Conformity

We hereby declare that the product listed below complies with the essential requirements of the EMC (electromagnetic compatibility) Directive : 2014/30/EU, Low Voltage Directive : 2014/35/EU, Machinery Directive : 2006/42/EC and RoHS Directive : 2011/65/EU based on category 11 of Annex I.

Product : RELAXATION CHAIR

Model : CALME (SC-RXBL, SC-RXBR, SC-RXB)

The product has been designed and manufactured in accordance with the European standards as the listed in the Declaration of Conformity.

UK DECLARATION OF CONFORMITY

We declare under sole responsibility that the device that is covered by the present declaration is in conformity with the following regulations and, if applicable, with any other relevant UK legislation that provides for the issuing of an UK declaration of conformity.

Product : RELAXATION CHAIR

Model : CALME (SC-RXBL, SC-RXBR, SC-RXB)

Regulations this product conforms to:

The Electrical Equipment (Safety) Regulations 2016, S.I. 2016/110

The Electromagnetic Compatibility Regulations 2016, S.I. 2016/1091

The Supply of Machinery (Safety) Regulations 2008, S.I. 2008/1597

The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, S.I. 2012/3032 based on category 11 of PART 1, SCHEDULE I

EU Authorised representative

TAKARA COMPANY EUROPE GmbH

Berner Strasse 18, 60437

Frankfurt am Main, Germany



UK Authorised representative

TAKARA BELMONT(U.K.)LTD.

BELMONT HOUSE, ONE ST.ANDREWS WAY, BOW

LONDON E3 3PA, ENGLAND



**TAKARA
BELMONT**



TAKARA BELMONT CORPORATION

2-1-1, Higashishinsaibashi, Chuo-ku, Osaka, 542-0083, Japan