

TAKARA BELMONT BEAUTY CHAIR

# OASIS CHAIR Mee

Model No.AY-OAYM

## Operating Instructions

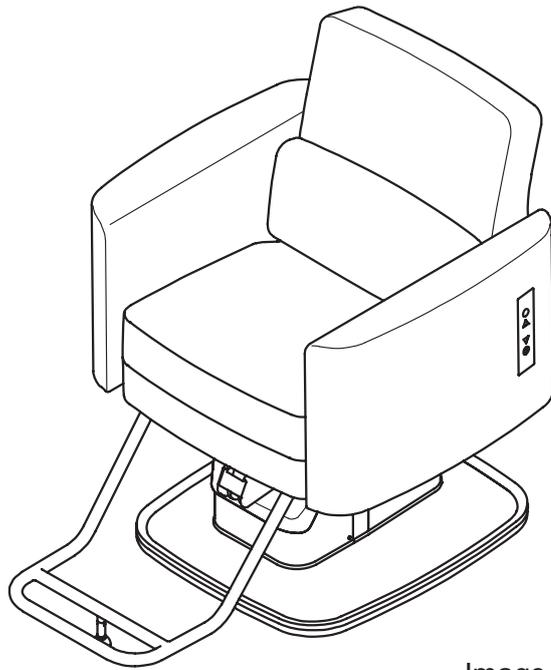


Image is AY-OAYMS,EA-OAYMC

Thank you for purchasing this Takara Belmont product.  
The instructions contained in this booklet should be thoroughly read and understood before use.  
Using this product before reading this operating instructions may result in an accident.  
Only use this product for its intended purpose and do not use it for non-hairdressing work.  
Keep this instruction and refer back to them when required.

# Table of Contents

## Introduction

Description of Warning Symbols .....	3
Safety Precautions .....	4
Precautions for Use .....	9
Precautions for Handling Synthetic Leather .....	9
Position of Warning Labels .....	10
Accessories .....	10
Name of Parts .....	11

## Preparation

Installation .....	12
Using the Lumbar Cushion .....	15
How to Use the Adjuster .....	15
Power Source .....	16

## How to Use

Turning the Chair .....	17
Raising/Lowering the Chair .....	18
Adjusting the Headrest .....	19
Reclining/Raising the Backrest .....	20
Moving the Chair to a Preset Position .....	21

## Maintenance

Maintenance .....	25
-------------------	----

## When Necessary

Before Requesting Repairs .....	26
Daily Inspections .....	27
Standard Duration of Use .....	29
Parts out of the coverage of warranty .....	29
Disposing of This Product .....	29
After-sales Service .....	29
Specifications .....	30

# Description of Warning Symbols

## ■ Before using this product

The "Safety Precautions", "Precautions for Use" and "Precautions for Handling Synthetic Leather" contained in this booklet should be thoroughly read and understood before use.

## ■ Precautions listed here

The precautions listed here are to ensure that this product can be used safely, and to prevent any danger or risk to the person using this product or those around them.

These precautions are important for ensuring safety. Adhere to these precautions at all times.

Takara Belmont is not responsible for any damage or risk to the person using this product or those around them due to accidents if this product is used without adhering to the "Safety Precautions", "Precautions for Use" and "Precautions for Handling Synthetic Leather". In this case, the person failing to adhere to the "Safety Precautions", "Precautions for Use" and "Precautions for Handling Synthetic Leather" will be responsible for any damage or risk incurred.

Detailed descriptions of symbols are provided below. Read and understand these symbols thoroughly before reading this instruction.

Classification	Level and urgency of harm or damage
 <b>Warning</b>	If this symbol is ignored and the product is used, "there is the risk of death or serious injury to the user".
 <b>Caution</b>	If this symbol is ignored and the product is used, "there is the risk of light or moderate injury or physical damage".

The specific points that are to be abided by are explained using the following symbols.

Symbols of prohibited matter	Symbols of guidance or instruction
 Common prohibited actions	 Guidance or instruction regarding common user actions
 Prohibited disassembly or repairs/modifications	 Remove power plug from the power outlet

# Safety Precautions (Adhere to these precautions at all times)

## Warning

### Cautions on Power Plugs/Power Cords



- **The grounding wire shall not be connected to the following**
  - Water pipe  
(Imperfect grounding because usually hard plastics are used.)
  - Gas pipes (Risk of explosion/ignition)
  - Lightning rods or telephone grounding lines (Danger when lightning strike)

- **Do not put anything on the power cord**

The power cord may be damaged and cause an electrical shock or ignition due to breaking of the line or short-circuiting.

- **Do not pull-out or insert a power plug with a wet hand**

Touching a power plug or outlet with a wet hand may cause an electrical shock.



- **Use a dedicated power outlet for power plug**

Use a dedicated and grounded power outlet. Simultaneous use with other appliances may cause ignition by abnormal heating of the outlet.

- **Securely insert the power plug**

Insert the power plug into the power outlet all the way to the base.  
Insecure insertion may cause ignition due to short-circuiting or heating.

- **Hold onto the power plug for pulling**

When removing the power plug, hold the power plug, instead of the cord itself, and pull to remove. Pulling the power cord may damage the power cord and cause an electrical shock or ignition.

- **Pay attention to damage to the power cords and power plugs**

If the power cords or power plugs are damaged or the fitting of the power outlet is loose, stop using. There is a risk of short-circuiting or ignition.

- **Securely connect the grounding wire**

Without connecting the ground, it may cause electric shock when there is a malfunction or ground leakage. Contact a professional for grounding.

- **Regularly remove dusts on the power plugs**

If dust adheres to the power plugs and outlets, thoroughly wipe off using a dry cloth.  
Use as is may cause ignition.



- **Pull off power plug when not used**

When not using, turn OFF the power switch and pull the power plug from the outlet.  
Careless operation may cause an unanticipated accident or a fire from short-circuiting due to degraded insulation.

# Safety Precautions (Adhere to these precautions at all times)

## Warning

### Precautions on Installation/Moving



#### ●Precautions for installation

- The installation of this product shall be conducted in accordance with the installation manual.
- The mounting and installation of this product shall be conducted by professional personnel (our company or a contractor designated by our company or our distributor).
- The installation shall be on a horizontal and firm floor.  
Installation on a floor tilted more than 5 degrees may cause overturning.
- Please set up a chair where there is nothing that hits around it.

#### ●Pay attention to the position for holding when the chair is moved

When moving this product, hold the chair base firmly. Carrying only the chair part is dangerous because the base could come off and drop.

### Precautions for Use/Maintenance



#### ●Do not allow the hands, fingers, part of body/clothes of the customer and the user to approach the movable portion and its periphery

There is a risk of pinching injury.

#### ●Do not allow a customer to lie with face down

There is a risk of injury if the chair moves unexpectedly.

#### ●Do not get on the tip of the step

There is a risk of injury or property damage by overturning of the chair or by an unexpected movement of the step.

#### ●Do not stand on the chair

There is a risk of injury or property damage by overturning of the chair.

#### ●Do not sit on the backrest

Do not sit on or apply an excessive load on the backrest. There is a risk of injury or property damage by overturning.

#### ●Do not lean on or sit on the armrest

There is a risk of injury or property damage from disengagement of the simplified lock and falling caused by turning of the chair.

#### ●Do not sit on anything other than the seat

Do not sit on anything other than the seat, such as the headrest, armrest, the tip zone of the backrest, or the step, or apply an excessive load. There is a risk of injury or property damage due to overturning.

#### ●Do not apply an excessive load on the armrest

There is a risk of injury or property damage due to overturning.

#### ●Do not use in an environment where there is electromagnetic interference

Do not set up a chair in the periphery of a device that generates electromagnetic waves, such as communication facility or elevators. Furthermore, do not use an instrument that generates electromagnetic waves, such as mobile phones, near the periphery of this product. There is a risk of malfunctioning.

# Safety Precautions (Adhere to these precautions at all times)

## Warning

### Precautions for Use/Maintenance



- **Do not wash with water**

There is a risk of failure or electrical shock.

- **Do not use the auto return function when an elderly customer or a small child is seated**

There is a risk of injury by forcing the customer to assume an improper posture or applying a force. Use the manual switches and operate while securely observing customer conditions.



- **Disassembly and repairs/modifications are prohibited**

- Never disassemble or repair the chair by anyone other than the after-sale service personnel of our company. There is a risk of accident, failure, electrical shock, or fire.
- It is dangerous to remodel this product. Never remodel it.



- **Cautions on turning the chair**

- Slowly turn after confirming the absence of a person or interference.
- After turning, be sure to return the chair to the position facing front.
- When giving a treatment, be sure to return and lock the chair in the front position.
- Do not turn the chair with its backrest reclined.
- Set up the adjuster in such a way that the power cord will not be hooked by the adjuster on the back of the step and will prevent overturning of the chair when getting on the step.
- Confirm that the customer is sitting back in the seat and the feet are on the step before turning the chair. Failure to heed this warning will result in a risk of injury.

- **Cautions on reclining/raising the backrest**

- When reclining the backrest, confirm the absence of the arms and hands of the customer between the backrest and the seat before operation. There is a risk of causing an injury by pinching.
- When reclining the backrest, pay attention to the interference of the headrest and the backrest with the shampoo bowl or peripheral devices before operation.
- When raising the backrest, confirm the absence of the arms and hands between the backrest and the armrest or rear cover before operation. There is a risk of causing an injury by pinching.

- **Pay attention to not touching a switch during operation**

Pay special attention to avoid an unintended operation by touching the switches on the operation panel of the armrest or base or tripping over on the base operation zone or base. There is a risk of injury by a false operation by an unintended contact.

- **Pay attention to not treading on the power cord with the adjuster**

Pay attention to not treading on the power cord with the adjuster.  
It may cause an electrical shock or ignition by breaking of the wire or short-circuiting.

- **Pay attention to the customer and children**

- During the use of this product, pay attention to keeping the eyes on the customer.  
There is a risk of unexpected accident by false operation due to unintended contact by the customer (especially a child).
- Do not let a child approach this product except during the treatment.

# Safety Precautions (Adhere to these precautions at all times)

## Warning

### Precautions for Use/Maintenance



#### ●Cautions for getting on/off

- When the customer gets on or off, be sure to lower the chair to the bottom and lock the turning and securely support in such a way that the lock of the chair is not disengaged. Especially when getting on/off a wheelchair, simultaneously confirm that the wheelchair is not within the operational range of the chair. There is a risk of injury or property damage from a sudden movement of the chair caused by contact with the pedal type switch with a foot or caster.
- Guide the customer to prevent tripping on the power cord and falling when getting on/off.

#### ●Precautions for operation and setting up the presetting position of chair

- Before and during the operation of chair, pay a special attention to the absence of the human body, limbs, or objects within the operational range (rising/descending direction of seat, reclining/raising direction of backrest, or turning direction of chair). It will be a cause of injury or property damage by being pinched by the chair.
- When the chair is operated, confirm that the customer is sitting back in the seat and the feet are on the step; keep your eyes on the customer during the operation. If you notice anything unusual, stop the operation immediately, especially if elderly customers or small children are seated in the seat, as the change in posture caused by the Auto Mode operation may cause unexpected strain.
- Do not touch an operation switch with a wet hand. There is a risk of electrical shock.

#### ●Never neglect the daily checks

- Using without conducting the daily check may cause injury or property damage. Refer to [page 27 to 28] for daily checks.



#### ●Turn OFF power switch and pull off power plug for a maintenance

- It may cause an electrical shock or ignition. Unexpected action of this product may cause an injury.

#### ●In case of power outage

- For prevention of an unexpected action when the power is restored from an outage, turn OFF power switch and pull off the power plug of this product from the outlet.
- When the power went out when the chair was at a high position, the descending operation will not be possible. Pay special attention to prevent injury to the customer or overturning of the chair by helping the customer get off in such a situation.

## Caution

### Precautions for Use/Maintenance



#### ●Do not allow a person that weigh more than 135 kg to get on

- It may cause an overturning accident or defective operation.

#### ●Do not severely hit or scuff

- It may cause damage to the covers and malfunctioning of the chair.

#### ●Do not operate with a hand contaminated with chemicals

- The operation switches may be discolored.

# Safety Precautions (Adhere to these precautions at all times)

## Caution

### Precautions for Use/Maintenance



- **Do not use while the cover is damaged**

If a cover is damaged by any chance, promptly contact closest dealer or Takara Belmont for a replacement. The continuous use may cause a failure or accident.

- **Do not forcibly pull up the upper part of chair or backrest**

It will cause a defective operation or failure of this product.



- **Make sure all functions work properly before use**

Always pay attention to loosening, backlash, tilting, vibration, noise, temperature, odors, etc., while checking. If the slightest abnormality is observed, promptly stop using, turn OFF power, pull off the power plug, and contact closest dealer or Takara Belmont.

- **Operate the switches only with a hand**

Excluding the elevation pedal switch operated with a foot, be sure to use your hand for operation of the switches.

The use of other than the hands may cause damage or a malfunction.

- **Carefully operate the switches for prevention of operational mistake**

The person who operates shall pay a special attention, call out, and carefully operate to prevent mistakes.

- **Precautions for using the headrest**

- Pay attention to the disengagement of the headrest by too much pulling up.

- Pay attention to not applying water or chemicals on the headrest support frame.

If water or chemical adheres, promptly wipe it off. The corrosion due to rusting or decreased friction may degrade the fixing performance of the headrest.

- Pay attention to not pinching the fingers between the periphery of the operation levers and the headrest or backrest when operating the headrest.

- **Precautions for setting up the adjuster on the step**

When the adjuster is to be extended, pay attention to not scuffing the floor with the adjuster or hooking on the power cords when the chair is turned.

- **When reclining the backrest, support the head of the customer with one hand**

When reclining the backrest, support the head of the customer and call out.

The head may hit the bowl.

- **Promptly wipe off when chemicals or water has adhered**

Adhesion to operational part may cause a malfunction or electrical leakage.

When chemicals or water have adhered, promptly turn OFF power switch and wipe off with a soft and dry cloth.

- **Precautions for maintenance**

The metallic parts or mechanical structure of this product has the sharp edges. Pay attention to avoid hurting the hands or fingers when cleaning.

- **Always wipe off when the floor is wet**

If the floor surface is wet after shampooing, promptly wipe off. It will be a cause for deterioration of floor surface or malfunction.

- **When finished using, turn OFF power switch**

It may cause injury or damage from a malfunction due to unintended contact.

## Precautions for Use

- **Promptly wipe off when chemicals have adhered**

When the chemicals have adhered to the leather, base covers, etc., promptly wipe off. It may cause a change in quality/color.

- **Do not apply heat**

It will be the cause for the alteration of quality/color.

- **Do not put an object other than human on the seat**

It may cause the deformation or breaking of leather or corrosion.

- **Lower the chair to the lowest position after working hours**

Lower the chair to the lowest position after working hours.

As it does not load the cylinder, it lasts longer.

- **Do not use for purposes other than beauty/barber treatment**

This product is a professional device intended for the use in beauty and barber salons.

Shall not be used by persons other than specialists in barber/beauty treatment or a person qualified as an esthetician.

- **Do not use outdoors**

It may cause a failure.

- **The maximum load is 1,350 N (135 kgf)**

The rising speed may be slower when the load is near the maximum value.

- **Do not allow a sharp object to contact the leather**

If a sharp object, such as scissors, contacts the leather, it may tear.

## Precautions for Handling Synthetic Leather



- **Stains caused by clothing dyes**

The synthetic leather of this product may become stained by direct contact with clothes or belts. If there is stains, wipe clean as quickly as possible with a 10% detergent solution diluted using water to prevent permanent staining. Then, wipe using water and conduct a thorough dry wiping after that.

- **Take care of deformation or stains due to direct contact**

- Direct contact with other objects such as plastic products, painted items, solvents or adhesive tape may cause changes to the surface luster, cracking, deformation or peeling.
- Direct contact with newspaper or printed paper may cause stains.
- Direct contact with items of clothing such as printed images of t-shirts, or jeans may cause discoloration of the synthetic leather of this product.
- Direct contact with solvents such as benzene, nail polish remover, alcohol, oil (including beauty treatment oils) may cause discoloration, melting of the surface, elution of the plasticizing agent, changes to surface luster, hardening/softening or peeling.
- Using bleach or bleached sheets may cause changes to surface luster or discoloration.
- Installing this product next to sources of excess heat such as irons or heaters may cause deformation or discoloration.
- Protect this product from direct sunlight by installing curtains. Failure to follow this instruction may cause changes, shrinking, discoloration or fading of the leather surface.
- Placing heavy objects for a long period of time may leave an imprint or wrinkles on the synthetic leather that cannot be removed.

# Position of Warning Labels

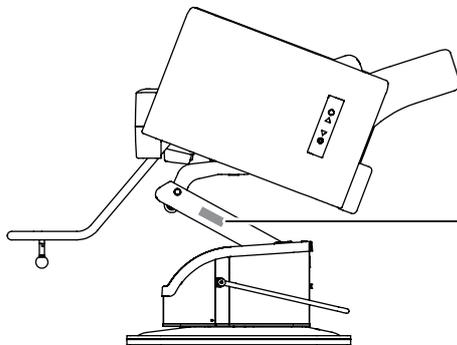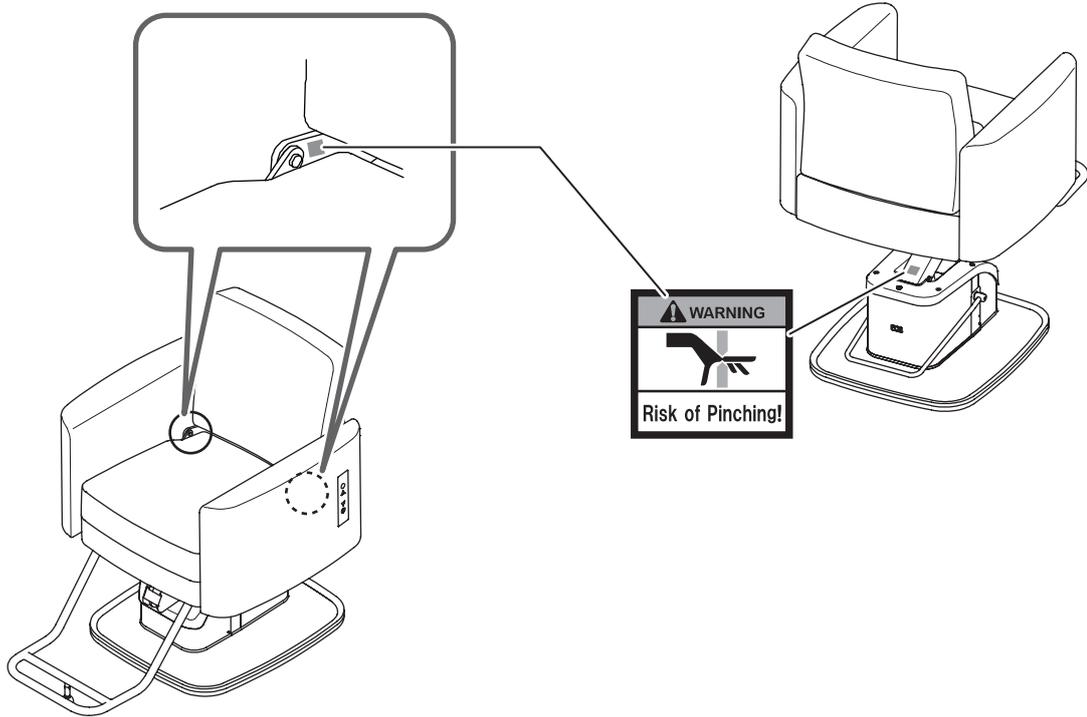

<b>⚠ WARNING</b> Risk of Pinching KEEP OFF hands or obstacles when adjusting angle.	<b>⚠ WARNING</b> Risk of Electric Leakage. DO NOT drench the unit.	<b>⚠ WARNING</b> Disconnect power supply plug when unit is not in use.	<b>⚠ WARNING</b> Risk of Electric Shock and mal- function. DO NOT disassemble, repair or modify.
Please read the Operating Manual carefully for other safety cautions.			



# Accessories

- Operating Instructions
- Installation Manual
- Headrest (Only model No.AY-OAYMM)

\*A cushion is not included (sold separately)


# Name of Parts

## Main body

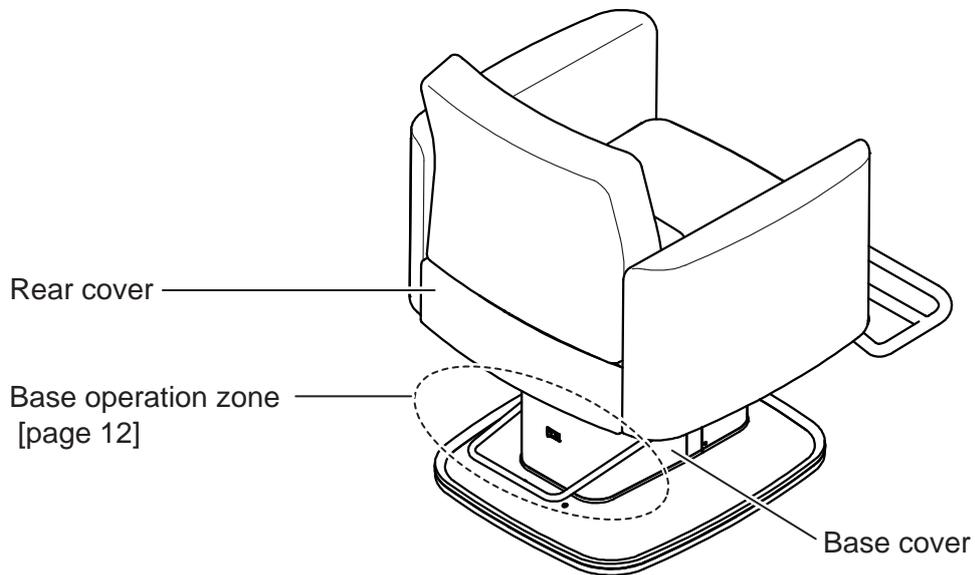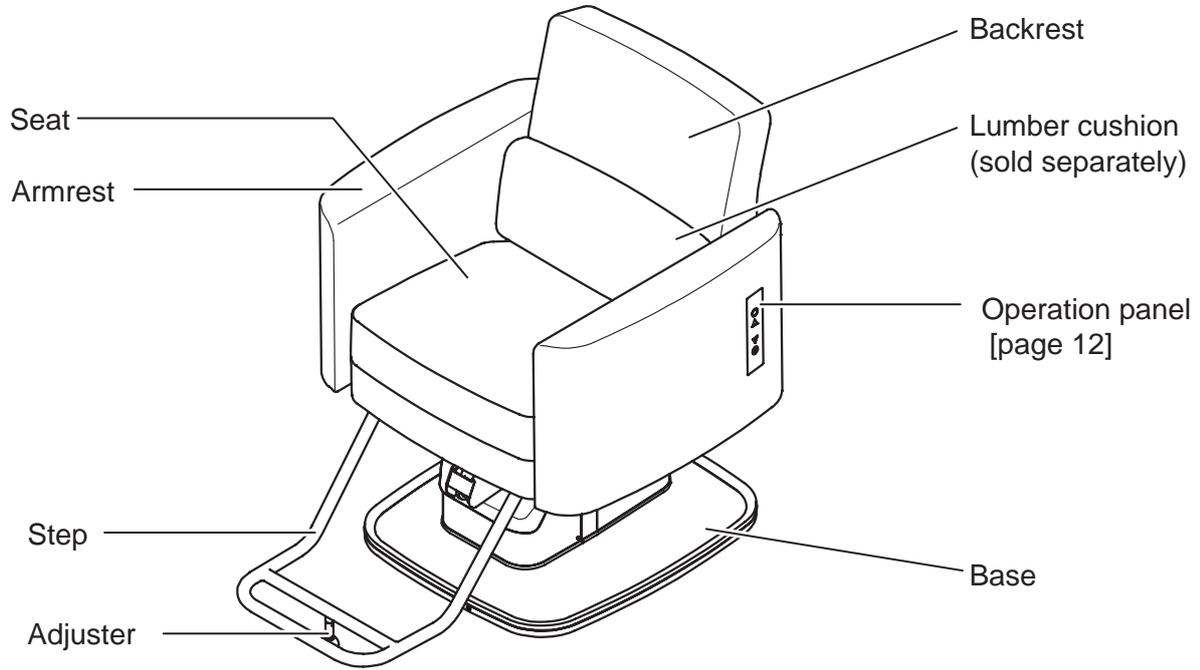


### 【With headrest】

- Headrest
- Headrest support frame
- Headrest operation button [page 19]

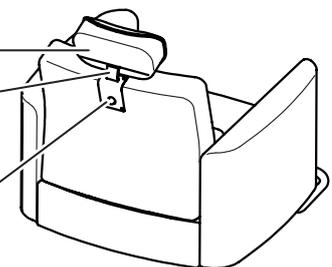


# Name of Parts

## Operation panel

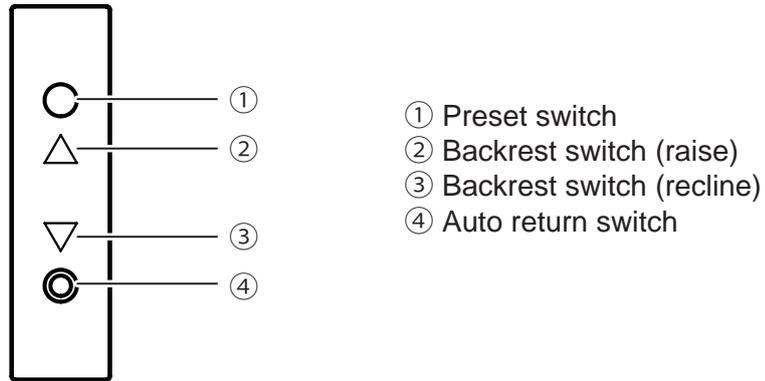

## Base operation zone

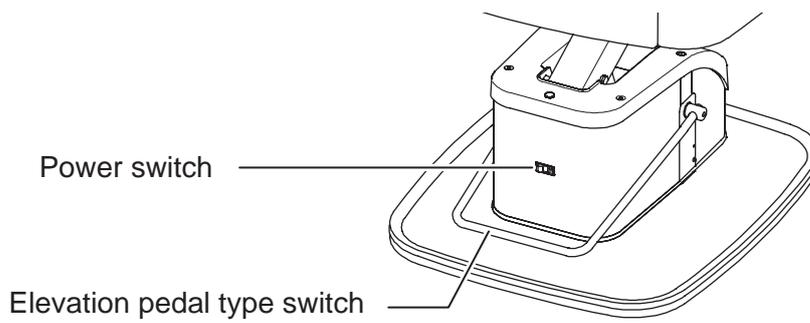

## ■Type List

**Body** AY-OAYM①

①	M	S
Headrest	○	—

## Lumber cushion

**EA-OAYMC**

# Installation

## <When using with YUME OASIS >

Install the chair in reference to the figure below:

### \*What are the Lie-Flat and Flat Shampooings?


Shampoo techniques which is provided by stylist or assistant standing behind the basin. (Rear position)

(The lie-flat shampooing is intended for an installation in a reduced space; accordingly, the backrest is raised more than that for the flat shampooing.)


### \*What is the Side wash shampooing?

Shampoo technique which is provided by a stylist or an assistant standing next to the basin.

### ● Lie-Flat Shampooing (YUME OASIS : Model AY-OAYMYM)

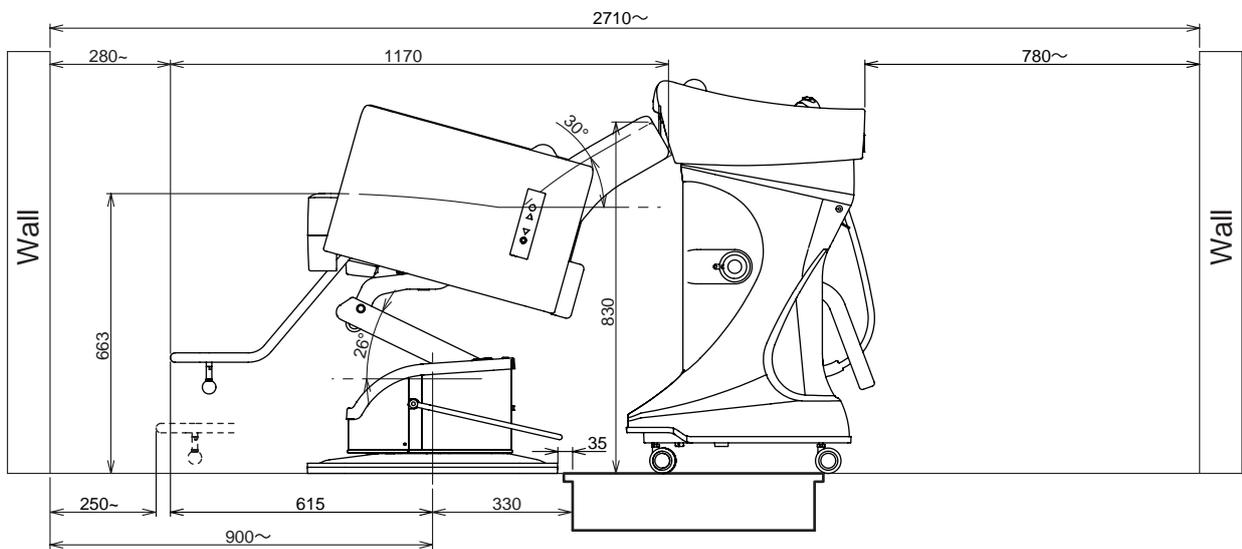


### ● Flat Shampooing (YUME OASIS:Model AY-OAYMYM)

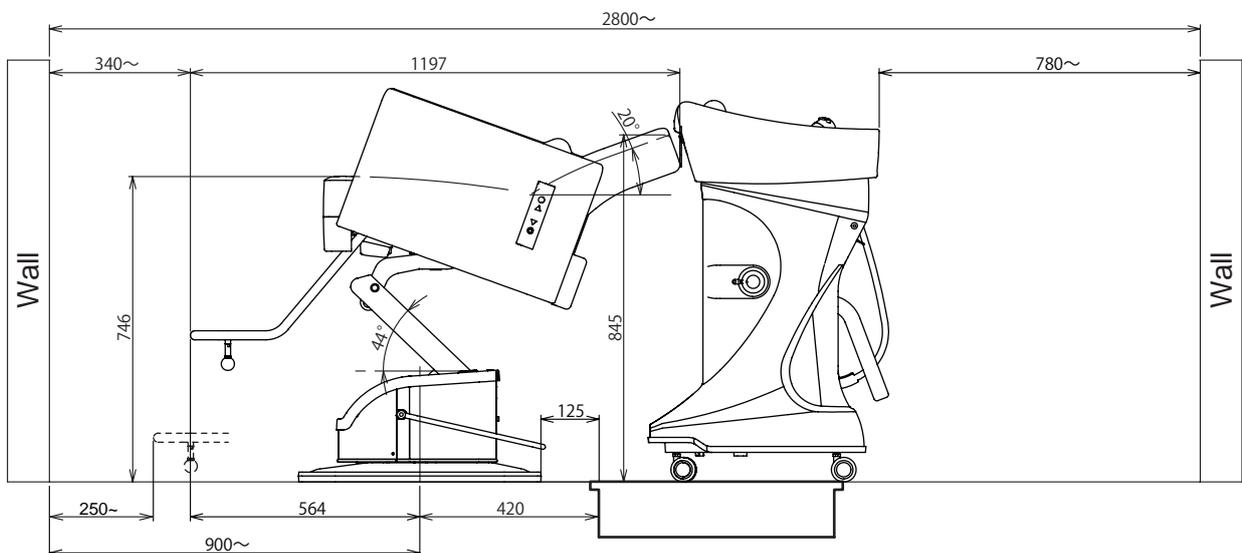

[Unit : mm ]

# Installation


## ● Side Shampooing (YUME OASIS:Model AY-OAYMSS)

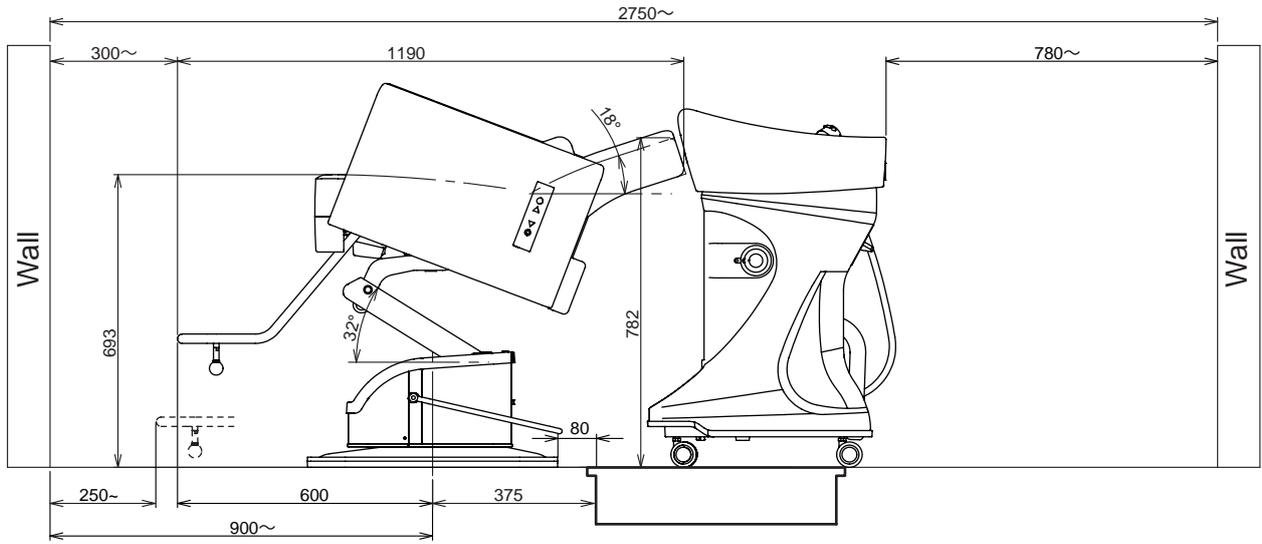


[Unit : mm ]

# Using the Lumbar Cushion

Use a lumbar cushion (sold separately) placed in the position and direction shown in the figure below:

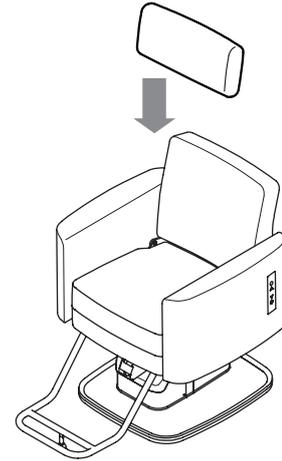


## Position of lumbar cushion

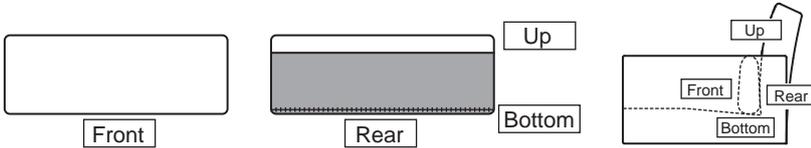

### Warning

- Use the lumbar cushion placed on the backrest in such a way that the zipper of the backrest is hidden. If the lumbar cushion is placed in the horizontal direction or removed, the zipper of the backrest may tear or damage the clothes from contact. Furthermore, the amenity of seating state will be degraded.
- Be sure to place the lumbar cushion for using with its back on the backrest. Continued use with the front surface of lumbar cushion on the backrest may damage the leather on the surface.

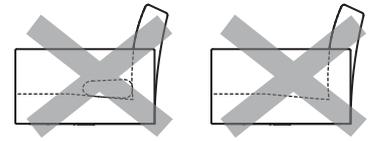

# How to Use the Adjuster


An adjuster is mounted on the step for overturning prevention. Set the adjuster at 25mm gap from the floor according to the following explanation.

## 1 Loosen the nut

Turn the nut CCW and loosen using a spanner (width across flats 13 mm).

## 2 Set up to acquire approximately 25 mm of gap between the adjuster and the floor (at the lowest position of chair)

Turn the adjuster for setting the height (Turn the adjuster clockwise [CW] for raising and turn counterclockwise [CCW] for lowering).

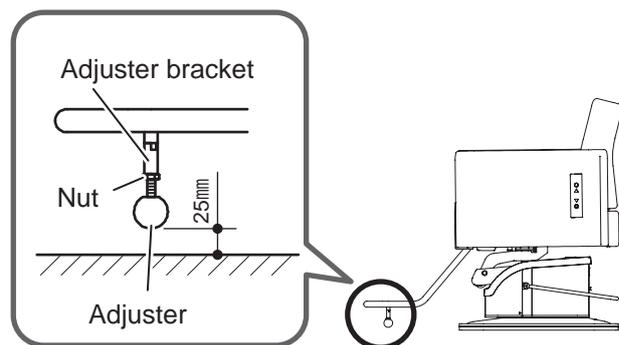

## 3 Securely tighten the nut


After adjusting the height, turn CW and securely tighten the nut using a spanner.

### Caution

When the adjuster is extended, pay attention to not scuffing on the floor or hooking the power cords with the adjuster when turning the chair.

# Power Source

## Insert the power plug into a power outlet

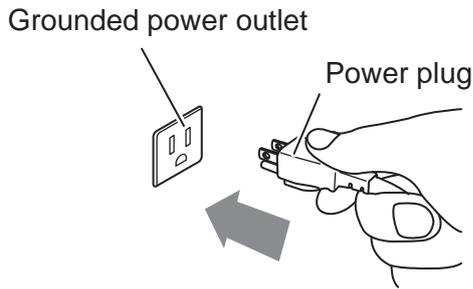

Insert the power plug in a grounded power outlet.


### **Warning**

- Use a dedicated and grounded power outlet.  
Do not simultaneously use other electrical appliances in the same outlet.
- Insert the power plug into the power outlet all the way to the base.
- When removing the power plug, hold the power plug, instead of the cable itself, and pull to remove.
- Do not touch the power plug or the outlet with a wet hand.
- The grounding wire shall not be connected to the following:  
Water pipe, Gas pipes, Lightning rods, telephone grounding lines
- Securely connect the grounding wire. Contact a professional for grounding.
- When not using, turn OFF the power switch and pull the power plug from the outlet.

## Turn the power on

The power switch is on the base cover (rear).

Press the “I” side of the power switch for turning ON the power, press the “O” side for turning OFF the power.

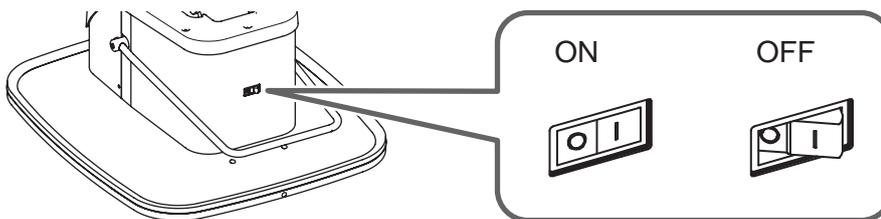

### **Warning**


- Always turn the power off after work, if this product is not going to be used for a long period of time.
- Remove the power plug from the power outlet if this product is not going to be used for a long period of time, such as when the shop is closed. Dust and moisture may cause faulty insulation, leading to a ground leakage fire.

### **Caution**


Operate the power switch by hand. Do not turn ON the power switch while carelessly pressing on an operation switch. The setups of preset position may change.

# Turning the Chair

This product is turned by approximately 130° to left/right from the front. Hold onto the backrest or the armrest when turning. No locking function is on this product to securely lock the turning except for the purpose of facilitating a proper setting to the front position; a function to detect the front position is integrated into the turning component of the chair.

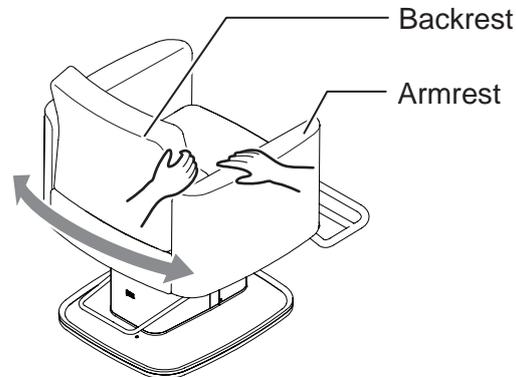

Hold either the backrest or armrest when turning.

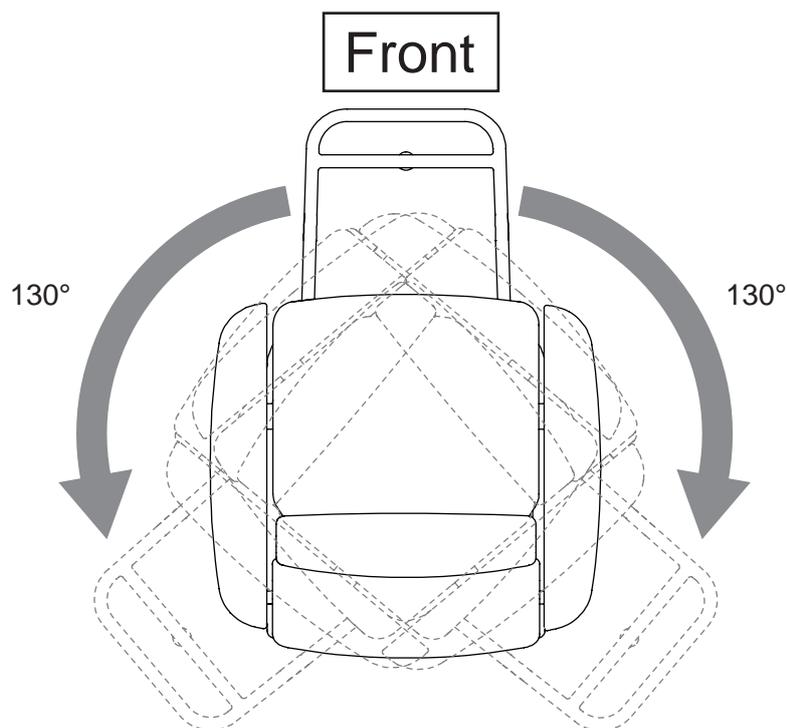



## Warning

- The front position detection function is a simplified lock. The lock will release from a light force. Do not carelessly apply an excessive load to the product.
- Before giving a treatment, be sure to set the chair to the front position and return it to the locked condition.
- When turning the chair, pay attention to the following for safety:
  - Return the chair to the lowest position before turning.
  - Do not abruptly turn.
  - Do not turn more than 130°
  - Always check that no person or object is present near the product and prevent the step from contacting the customer or peripheral devices.

# Raising/Lowering the Chair

The chair is raised and lowered by operating the elevation pedal.

The chair will be raised and lowered while the elevation pedal is continuously pressed down or pulled up.

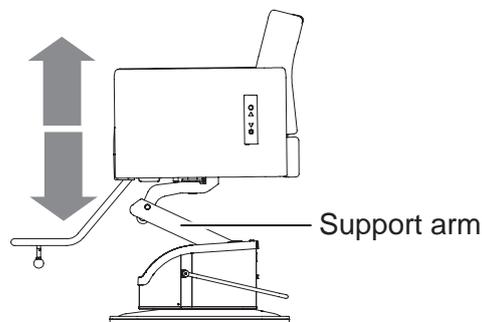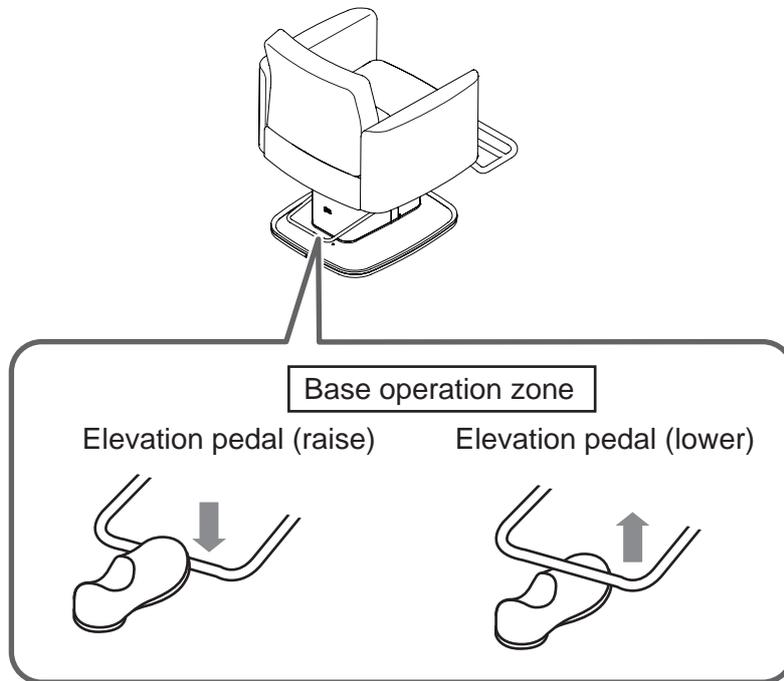

## Warning

- When raising and lowering the chair, confirm that the human body, limbs, or objects are not present near the chair, step, or gap of the support arm before operation.
- This chair component moves backward as it is raised and forward as it is lowered. Thoroughly check whether any obstacle is present in the front/rear before operation.
- The pedal is operated with a light force. Do not apply an excessive load. There is a risk of damage.
- When operating the pedal, pay attention to avoid excessively moving the operating foot forward. The power switch may be damaged.

# Adjusting the Headrest

## <Model with headrest (AY-OAYMM) >

Use the headrest when it is necessary to support the head of the customer for facial treatment. The headrest is not used when it is not necessary to support the head for shampooing.

### 1 Raise the headrest



The height of the headrest is adjustable in five stages. When pulling up the headrest, it is not necessary to press the headrest operation button.

When the headrest is pulled up too much, lower the headrest once using the operation button, then readjust.

The positions where a clicking sound is heard while raising are the positions for securing the position.


\*If the headrest is removed, insert the headrest support frame into the original position while pressing the headrest operation button.

Press the headrest from the top and confirm that the headrest is stopped at the proper position.

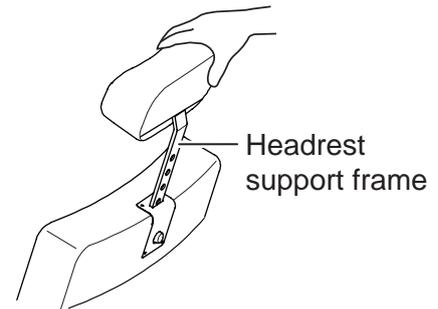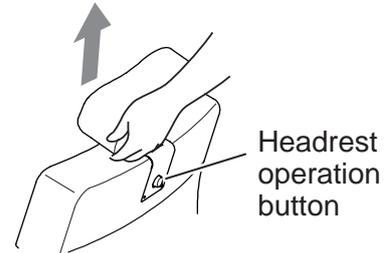

### 2 Retract the headrest after use

- ① Hold onto the headrest and press the headrest operation button.
- ② Return the headrest to the original position.

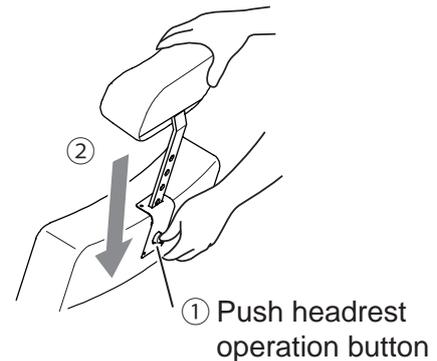

#### Warning


- Pay attention to the hair or clothes of the customer when the headrest is mounted, removed, or the height is adjusted. There is a risk of injury if the hair or clothes are pinched.
- Do not apply an excessive load or hit the headrest from the top while it is in a pulled out position. It may cause a failure.
- Be sure to remove the headrest for the shampoo treatment. The shampoo bowl and the headrest may interfere and be damaged.

#### Caution

- Pay attention to avoid removing the headrest by excessively pulling out.
- Pay attention to avoid splashing water or chemicals on the headrest support frame.
- When water or chemicals have adhered, promptly wipe off. The secure attachment of the headrest will not be possible due to corrosion from rust.
- Pay a special attention when touching the metal components of the headrest. There is a risk of injury such as cutting a finger.

# Reclining/Raising the Backrest

The backrest is reclined and raised by the backrest switch operation.  
The backrest is reclined and raised while the backrest switch is pressed.

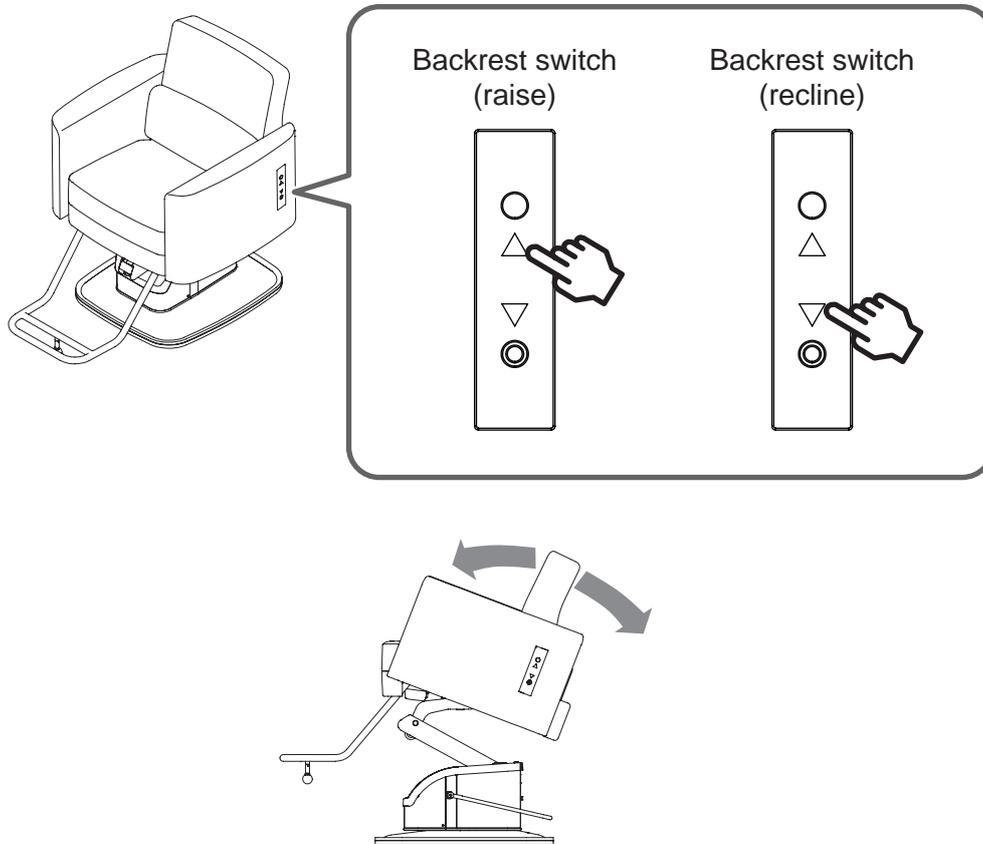

## Warning

- When reclining the backrest, confirm the absence of the arms or hands of the customer between the backrest and the seat before operating.
- When reclining the backrest, pay attention to not letting the headrest or backrest contact the shampoo bowl or peripheral devices before operating.
- When raising the backrest, confirm the absence of the arms or hands of the customer between the backrest, armrest or rear cover before operating.
- When the backrest is reclined without a headrest, be sure to hold a hand to the head of the customer while operating to prevent the customer's body from contacting the shampoo bowl.

## Caution

- Do not press the switches while the chemicals are adhering on the hands. Leather may be discolored.



# Moving the Chair to a Preset Position

## Use the preset function

### What is the preset function?

A function that operates the chair to the preset servicing position by pressing the preset switch only one time.

One arbitrary preset position is provided for this chair.

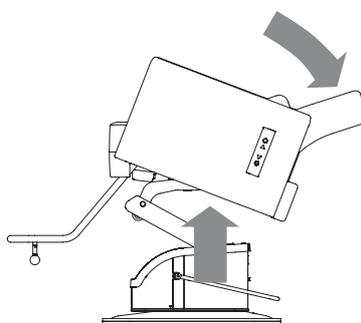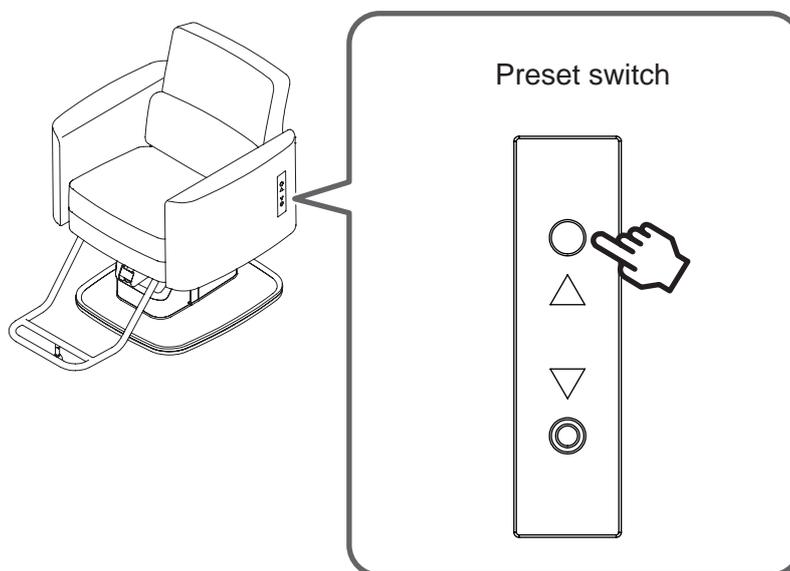

### <Model with headrest (AY-OAYMM) >

\* When the headrest is necessary, it has to be pulled out to the desired position in advance.





### Caution

Do not press the switches while the chemicals are adhering on the hands.  
Leather may be discolored.

# Moving the Chair to a Preset Position

## Use the auto return function

The height of chair and the angle of backrest will be returned to the position for getting on/off.

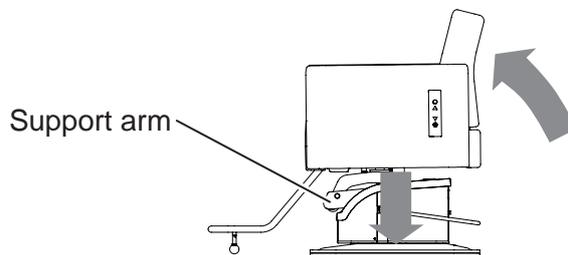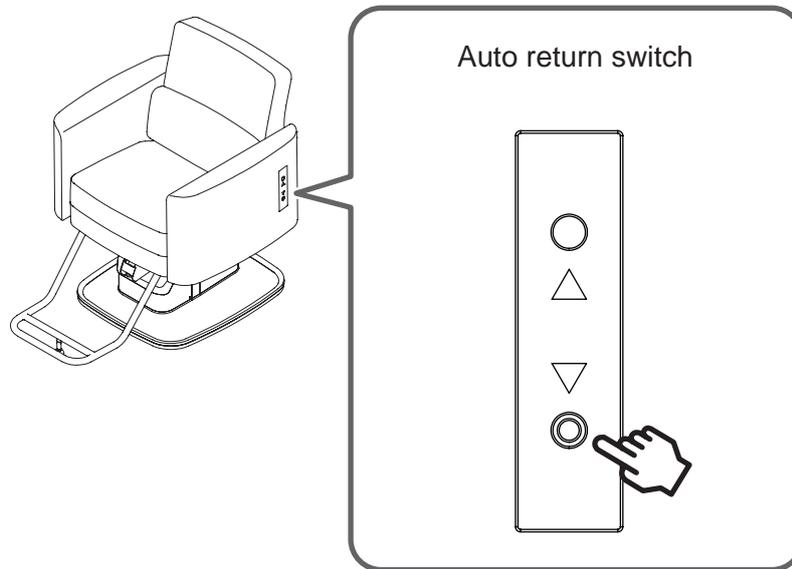

**Warning** When using the preset function or the auto return function, make sure that there is no human body, limbs, or objects in the gap between the chair or step or in the support arm, and operate it.

**Caution** Do not press the switches while the chemicals are adhering on the hands. Leather may be discolored.

## Canceling the operation


If the operation of the chair using the preset switch or auto return switch is to be stopped midway, press either the elevation pedal type switch or one of the operation switches on the operation panel.

# Moving the Chair to a Preset Position

## How to set the preset position

The standard preset position is adjusted in advance when the product is shipped. To change the preset position, follow the procedure below to set the new position.

- 1** Move the seat of the chair and the backrest to the desired setting position and temporarily turn the power OFF in that condition.
- 2** Turn the power switch on while pressing the preset button.
- 3** Continuously press the preset switch for 5 seconds.  
A “beep” sounds, and the position is memorized as a setup position.

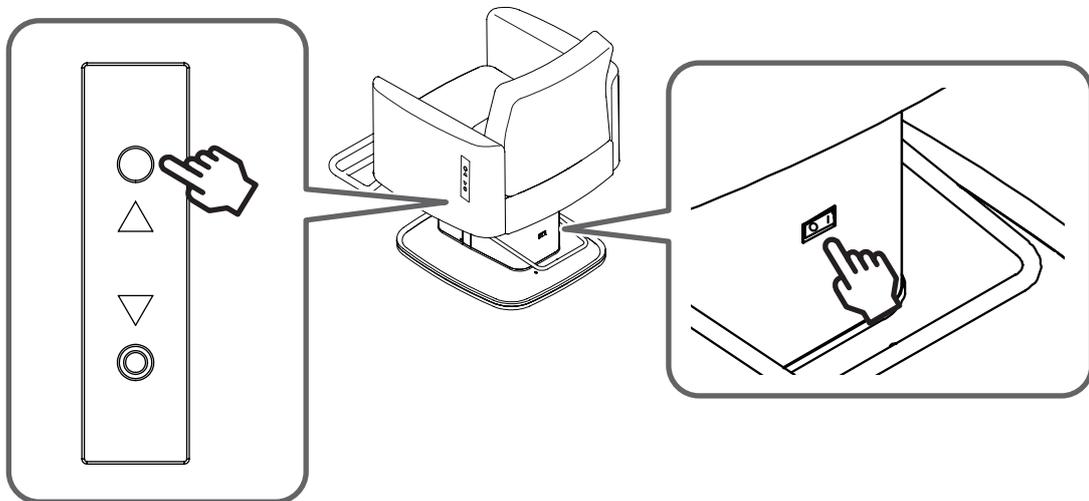


- 4** After the setting is complete, use the automatic return function to lower the seat to its initial position, press the preset button and check that the seat has been lifted to the set position.

# Moving the Chair to a Preset Position


## How to set the preset position (When matching the position with YUME OASIS)

A proper setting position for the chair is easily called up according to the various shampooing postures for YUME OASIS.

- 1 Turn the power switch off.**
- 2 Turn ON the power switch while pressing the desired shampooing posture button as shown in the figure below:**

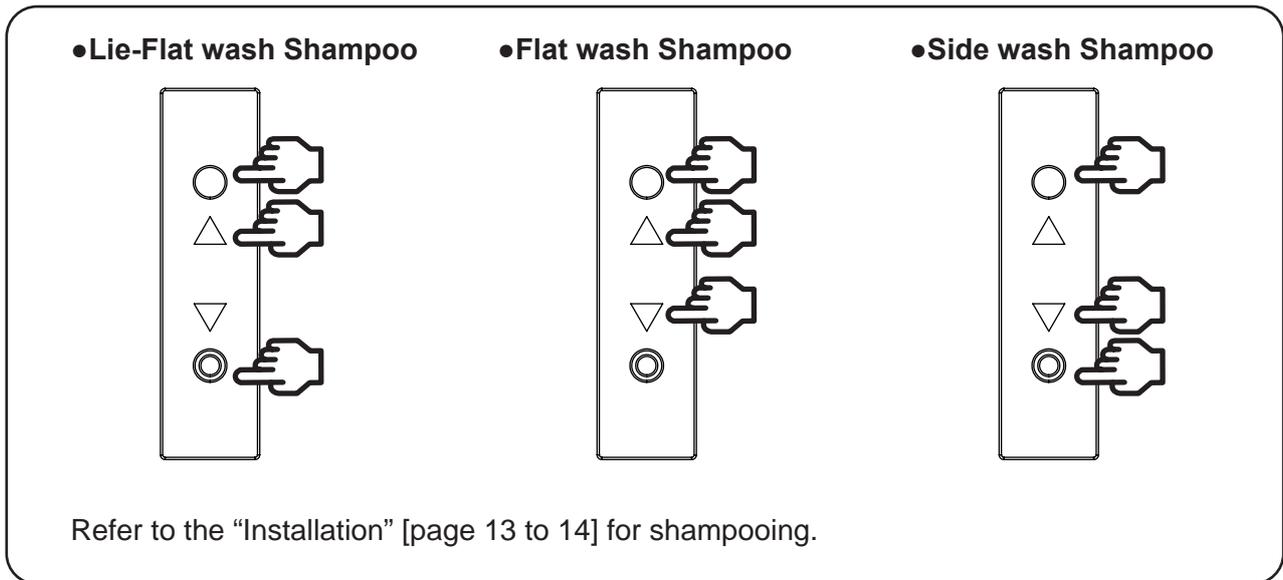

+

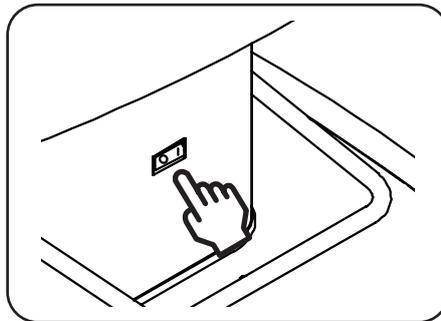

- 3 Continuously press switches for 5 seconds.**

A "beep" setting sound will be emitted five seconds after turning the power switch on while pressing the preset button. [Setting complete]

- 4 After the setting is complete, use the automatic return function to lower the seat to its initial position, press the preset button and check that the seat has been lifted to the set position.**

Check the correlational chart with YUME OASIS [page 13 to 14]. When the fine adjustment is necessary, make the fine adjustment of the chair position and reset the preset position in accordance with the procedures on [page 23].

# Maintenance

Conduct the after-use care and always keep this product clean for later use.  
The untreated stains may cause mold.

## **Warning**

- Turn off the power switch and pull off the power plug when conducting maintenance. There is a risk of electrical shock or ignition. Furthermore, an unexpected action of this product may cause an injury.
- Do not splash water for washing. There is a risk of failure or electrical shock.

## **Caution**

The metallic parts or mechanical structure of this product has sharp edges. Pay attention to avoid hurting the hands or fingers when cleaning.

## Maintenance of various components

### **leather component** (except operation panel) , **Resin component**

Conduct dry wiping using a soft, dry cloth.

For severe stains

Wipe using a soft cloth dipped in neutral detergent diluted ten times with water, then wipe with water, then wipe with a dry cloth thoroughly.

### **Operational component , Metallic component**

Wipe dry using a soft, dry cloth.

Do not conduct water wiping because the device hates humidity or water. When water is splashed, promptly wipe off. It may cause failure of the electrical components.

- Never use the following substances:

The volatile chemicals, such as thinner, alcohol, remover, gasoline, and kerosene, acid, alkaline or chloric detergents, antiseptic solution strongly corrosive to metals (povidone iodine [iodine solution], sodium hypochlorite, etc.), waxes containing abrading agent, sponges containing abrading agent, etc.

- Do not use brushes, scrubbers, etc., for maintenance. It may leave scratches or stains.

- Do not use detergents that contain organic solvent or abrading agent, breaching agent, etc., for cleaning the leather components.

The surfaces may deteriorate, and the quality and gloss may change.

When restarting the use of this product after not using for a certain period, clean before using.  
After cleaning, be sure to confirm normal operation of this product.

# Maintenance

## Spray type hair-setting agents (especially the hard types)


When the spray type hair-setting agents (especially the hard types) are used, check whether the hair-setting agent adheres to the overall external surfaces of this product (including leather) and promptly wipe off if any adhesion is observed. Leaving as is may cause a rough touch due to the adhered hair-setting agent.

### \* When the hair-setting agent stuck on

When the hair-setting agent has adhered, remove using ethanol. However, too frequent wiping with ethanol on the resin or leather components, such as the base cover, will deteriorate the surfaces and peel the coating, which then degrades the gloss or causes cracks in the surface. The best way to prevent problems is to promptly wipe off the adhered hair-setting agents.

## Before Requesting Repairs

If the following problems occur, check the product before asking for repairs. If normal operation is not restored, immediately stop using the chair, turn OFF the power switch, pull the power plug, and contact our agent.

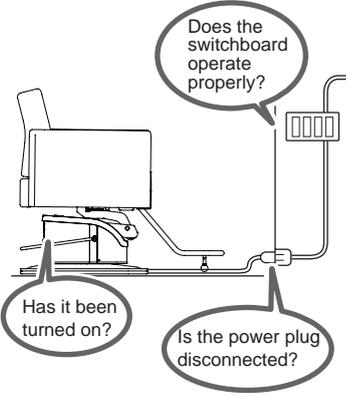Symptom	Check this	Solution
<p>The seat or backrest does not move</p> 	Is the power plug completely inserted to the end?	Insert the power plug into the power outlet all the way to the base. [page 16]
	Is the power turned on?	Turn the power switch on. [page 16]
	Has the fuse or circuit breaker in the store's switchboard blown or tripped?	Replace the fuse or turn the circuit breaker ON.
	Has this product been used continuously for long periods of time?	<p>This is due to the overheat protection system operating. ⇒Leaving the product to stand for 10 minutes will make it return to normal.</p> <div style="border: 1px solid black; padding: 5px; margin: 5px 0;">Overheat protection system</div> <p>Protective circuit that stops the motor if the product has been used continuously, to prevent overheating of the internal mechanisms. This product may be temporarily unresponsive when the overheat protection system has been activated.</p>

### A time like this is not failure.

A noise is heard at startup.	A phenomenon that occurs due to the cold lubricant inside. Not problematic for functioning and will disappear after some time.
Slow speed of chair.	A phenomenon that occurs due to the cold hydraulic fluid inside. It will be restored by raising the room temperature or by continuing the operation for a while.

# Daily Inspections

Conduct the check below for safe use of the product.



## Warning

Be sure to conduct the daily check in accordance with the following.  
Use without conducting the daily check may cause injury or property damage.

### Inspect the product every day

Inspect item	Inspection method	If the inspection results show defects
Does the backrest or seat rattle?	Slowly push the rear end of the basin, top of the backrest or the front end of the seat in each direction, and check whether they rattle.	Rattling may cause incorrect operation or damage in the main body, or cause it to fall over. Stop using the product.
Whether the step has backlash.	Gently press or shake the step up/down and left/right and confirm the eliminated backlash.	Rattling may cause incorrect operation or damage in the main body, or cause it to fall over. Stop using the product.
Is the seat operating properly?	Turn the power switch on and check that a warning sound is not emitted intermittently.	Turn the power switch off, and turn the power on again after 5 seconds. If the warning sound continues to be emitted, Stop using the product and turn the power switch off.
	Check that the simplified lock works when the chair is turned to the front.	Operate in accordance with "Turning the Chair" [page 17]. If the simplified lock does not work, stop using.
	Check that the seat moves properly to the position set by the preset function.	Follow the procedures outlined in "Use the preset function" [page 21] to change the preset position and operate the seat. If the seat still does not operate properly, stop using the product and turn the power switch off.
	Check that the seat returns properly to the initial position using the automatic return function.	Follow the procedures outlined in "Use the auto return function" [page 22] to change the preset position and operate the seat. If the seat still does not operate properly, stop using the product and turn the power switch off.
	Confirm the rising and lowering using the elevation pedal type switch.	Follow the procedures outlined in "Raising/Lowering the Chair" [page 18] to change the preset position and operate the seat. If the seat still does not operate properly, stop using the product and turn the power switch off.
	Confirm the reclining and rising of the backrest using the backrest switch.	Follow the procedures outlined in "Reclining/Raising the Back" [page 20] to change the preset position and operate the seat. If the seat still does not operate properly, stop using the product and turn the power switch off.
	Check that wobbling or abnormal noise is not recognized when operated.	If any wobbling or abnormal noise is recognized during operation, stop using, turn OFF the power switch, and pull the plug.
	Move the seat to any position, and check that it has stopped and has not lowered after a certain period of time.	Stop using the product if the seat does not stop a certain period of time and lowers.

# Daily Inspections

Inspect item	Inspection method	If the inspection results show defects
Is there an abnormal odor from the seat?	Is there an abnormal odor from the seat?	If abnormal odors or smoke is recognized, stop using the chair, turn OFF the power switch, and pull the power plug.
Is there any oil leaking?	Confirm no dripping of oil on the upper surface of the base or leaching from the base cover.	If oil is dripping or leaching, stop using the chair, turn OFF the power switch, and pull the power plug.
Any deformation on the thread of adjuster for the step.	Visually check for any deformation on the thread of the adjuster for the step.	There is a risk of damaging this product or causing an overturning accident. Stop using the chair.
Any rust on the thread of the adjuster for the step.	Visually check for any rust on the thread of the adjuster for the step.	There is a risk of damaging this product or causing an overturning accident. Stop using the chair.
Mixing of air in the hydraulic mechanism. (Air may be mixed in if the chair is lifted holding onto the armrest or backrest for relocation.)	The whole chair softly sinks when a load is applied to the seat while the chair is in the lowest position.	Customers may not be able to get on or off the seat safely. If the seat does not operate properly, stop using the product and turn the power switch off.

## Standard Duration of Use

The standard period of use of this product is seven years.

The standard period of use is "a guide for the standard period that this product can be used properly from a safety perspective, when conducting appropriate maintenance and inspections (including replacement of parts) for the standard usage conditions for each product."

This is not the same as the warranty period.

## Parts out of the coverage of warranty

The following parts are "Parts out of the coverage of warranty" and wear, degradation, changes in external appearance and damage are expected.

Parts out of the coverage of warranty

(The following parts are outside the coverage of the warranty and supplied on a paid basis.)

- Power cord      -Operation panel
- Exterior parts (leather components, metallic component, resin component etc...)

## Disposing of This Product

When disposing of this product or replaced parts, adhere with current regulations and dispose of them appropriately.


## After-sales Service

To request after-sales service, contact your closest dealer or Takara Belmont directly.


# Specifications

Model No. ....	AY-OAYM [lumber cushion] model No. EA-OAYMC
Rated voltage .....	AC110V AC120V AC230V AC240V
Rated frequency .....	50/60 Hz
Rated power consumption .....	420/540 W
Weight .....	58 kg
Load .....	1350 N (135 kgf)
Usage environment .....	Temperature 0~40°C
	Humidity 10~95%
	Atmospheric pressure 700~1060 hPa

## AY-OAYMS

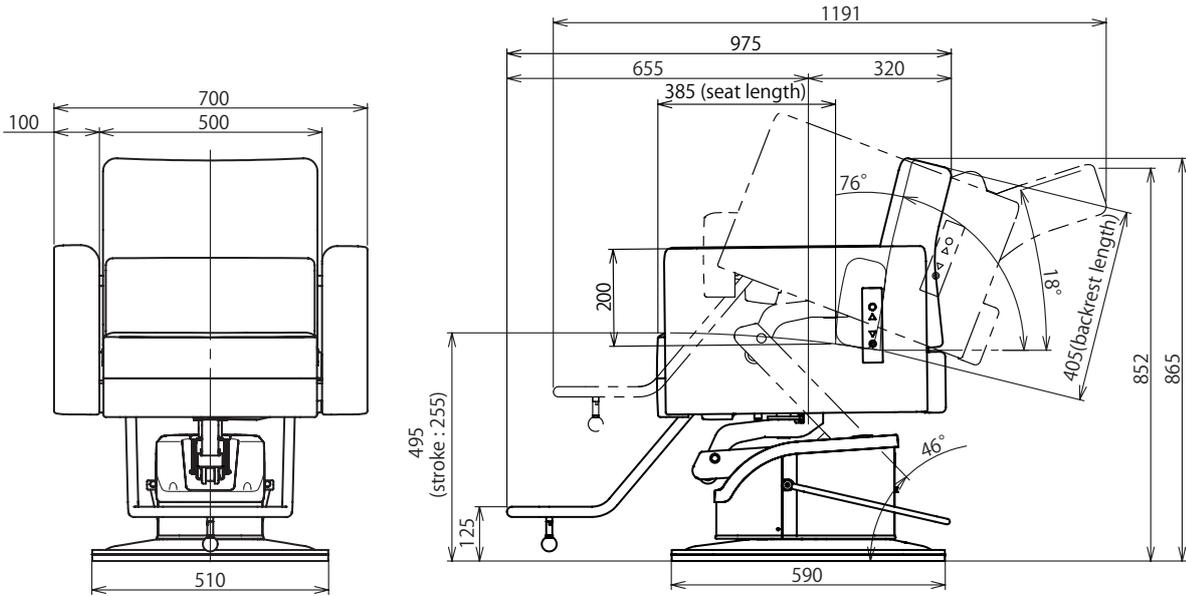

## AY-OAYM (with headrest)

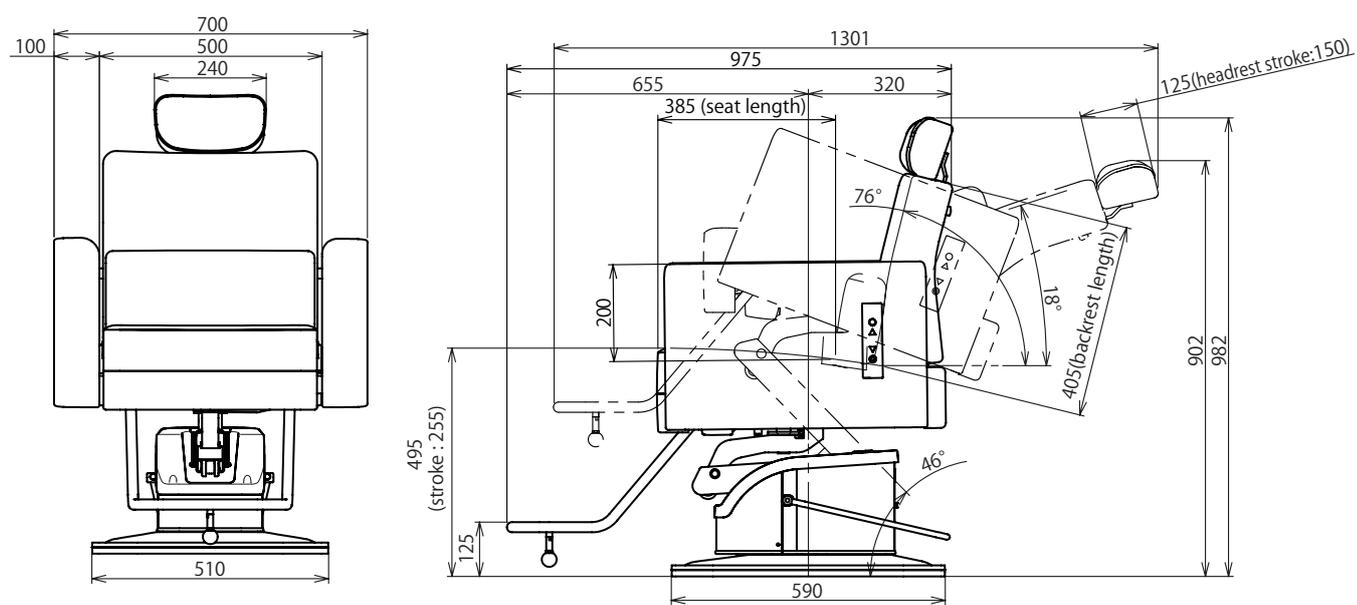

\*The dimensions/specifications are subject to change for improvement without notice.  
The figures show the standard values. [unit : mm]





TAKARA BELMONT CORPORATION  
1-1, 2-Chome, Higashi-shinsaibashi, Chuo-ku, Osaka, Japan  
TEL : (06) 6213-5945 FAX : (06) 6212-3680

Printed in Japan