

Installation Manual



07.2011 1E0459A0
(Request No.)

Installation should be performed by a qualified technician and should meet local codes and ordinances.
Takara Belmont does not take any responsibility or liability for installation

Item Code

SR-AS2SD, SR-AS2SN, SR-AS2MD, SR-AS2MN, SR-AS2LD, SR-AS2LN, SR-ATS, SR-ATM, SR-ATL

Material and Parts


■ SR-AS 2 ASISTA II

- ☐ Arm
- ☐ Table
- ☐ Dryer Holder (SR-AS2SD, SR-AS2MD, SR-AS2LD Only)
- ☐ Screws (4pcs of M4 x 10mm)
- ☐ Adjuster Bolt
- ☐ Felt Cushion (2pcs., One for extra)


■ SR-AT ATTENDA

- ☐ Table with Arm
- ☐ Adjuster Bolt
- ☐ Felt (2pcs., One for extra)

■ SR-AS2 ASISTA II

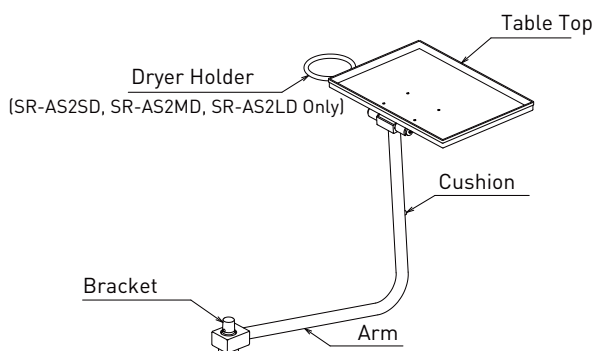

■ SR-AT ATTENDA

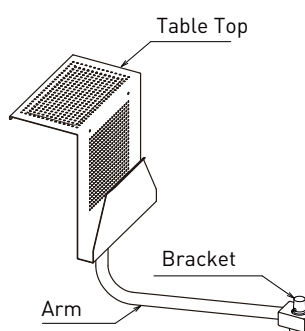

Product Chart

Chair Top


	SR-AS2 ASISTA II			SR-AT ATTENDA		
	Short	Midium	Long	Short	Midium	Long
SU-D1E (ma)	○			○		
SU-D1F (ori)	○				○	
SU-D1G (ai)	○				○	
SU-D1A(CHOCO)			○		○	
SU-D1B(HARP)		○		○		
SU-D91(minamo)	○			○		
SU-D92(nagi)	○			○		
SU-D93(nami)	○			○		
SU-D83(LIM01)		○			○	
SU-D84(LIM02)		○			○	
SU-D85(LIM03)		○			○	
SU-D0A(Coff)			○			○
SU-D0B(Morb)		○			○	

Chair Base

SP-CHSN, CHPN, CHDN, SF, AB, AC, AD, AG
SP-202C, ASC, ASD, YSS, YAE, YASE, YEE
SP-YA, YC, YD, Y5, Y5A, Y5B, YK, YS, YE, YT
SP-YFS, YFL, FM, FT, FD, SF

■ Diameter



	SR-AS2 ASISTA II	SR-AT ATTENDA
Short	685mm	625mm
Midium	715mm	655mm
Long	745mm	685mm

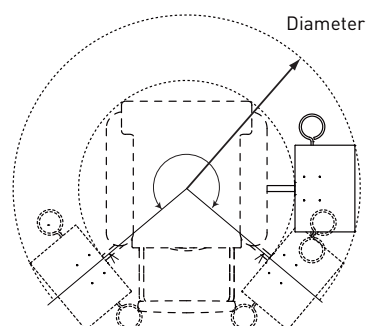

Assembling Instruction


Assembling Dryer Holder for Asista II

- 1, Take off the nuts and washers from the table top
- 2, Assemble the Dryer Holder and screw up.

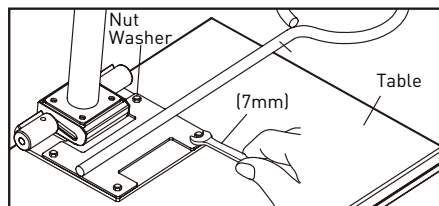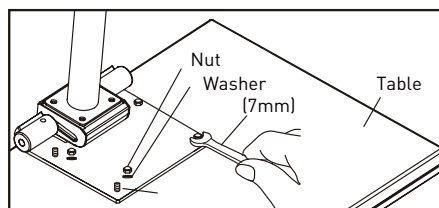




Assembling Table top on the Arm

- 1, Assemble the table on the arm by 4pcs pf M4x10mm


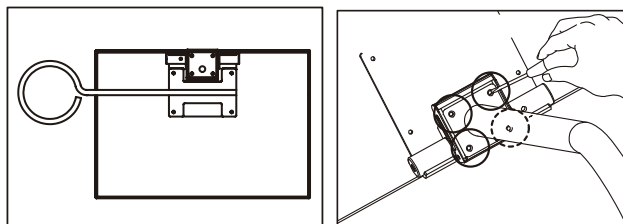


Installation

- 1, Make brake of chair base work, otherwise ram shaft of base may comes off or oil may leak.
- 2, Take chair top off from the chair base.
- 3, Put the bracket of Asista II / Attnda on the Ram shaft of chair base.
- 4, Put the chair top on the bracket of Asista II / Attenda. Please make sure to adjust the guide of seat bracket of chair top with the guide of Asista II bracket.
- 5, Please add the adjuster bolt for footrest, if necessary. (Adjustable footrest only)

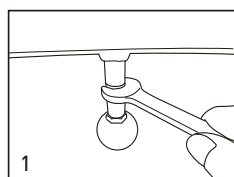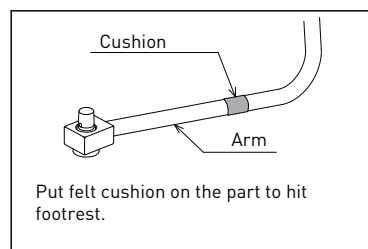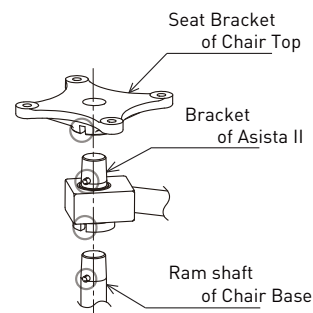

Adjuster Bolt
(Additional)

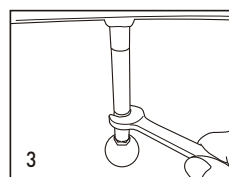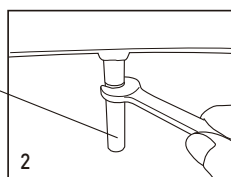

In case of disassembling

- 1, Make brake of chair base work, otherwise ram shaft of base may comes off or oil may leak.
- 2, Take chair top off
- 3, Hold the Asista II.
- 4, Take of the Assista II. Use plastic/rubber hammer and hit from the bottom of bracket of Assista II.