


Shampoo Chair MIRAKU

Product Code	● Shampoo Chair	
[Long Legrest Type]		
SC-S81XL	SC-S81XM	SC-S81XH
[Legrest Type]		
SC-S81LL	SC-S81LM	SC-S81LH
[Step Type]		
SC-S81SL	SC-S81SM	SC-S81SH

Operating Manual

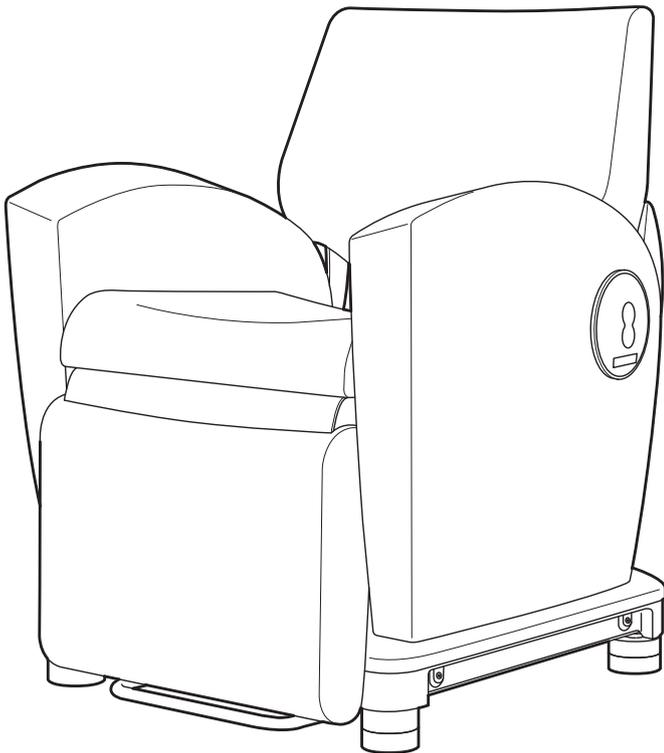

(Image is of SC-S81LM Legrest Type)

Thank you for purchasing Takara Belmont product.

The instructions contained in this booklet should be thoroughly read and understood before use.

This product is an industrial shampoo unit designed for barbers and hair salons. Only use this product for its intended purpose and do not use it for non-hairdressing work.

Keep this manual and refer back to it when required.

2023.07

1A0JN4A0

Ver. 2

Table of Contents

Safety Precautions	2
Precautions for Use	6
Precautions for Handling Synthetic leather	7
Position of Warning Labels	7
Before Using this Product	7
Name of Parts	8
Preparation	9
1 Installation	9
2 Adjusting the Adjuster	10
3 Height of the Adjuster	10
4 Attaching the Step Adjuster of the Step Type	11
5 Power	12
How to Use	13
1 Guiding Customers	13
2 Setting to Shampooing Position	13
3 Return to the Initial Position	15
Maintenance	16
Daily Inspections	16
Before Requesting Repairs	16
Specification	17
Standard Period of Use	18
Consumable Supplies	18
Disposing of this Product	18
Memo	19
Procedures for Daily Inspections	20

Safety Precautions (Must be followed)

■ Before using this product

The “Safety Precautions” and “Precautions for Use” contained in this manual should be thoroughly read and understood before use.

■ Precautions listed here

The precautions listed here are to ensure that this product can be used safely, and to prevent any danger or risk to the person using this product or those around them. These precautions are important for ensuring safety. Adhere to these precautions at all times. Takara Belmont is not responsible for any damage or risk to the person using this product or those around them due to accidents if this product is used without adhering to the “Safety Precautions” and “Precautions for Use”. In this case, the person failing to adhere to these precautions will be responsible for any damage or risk incurred. Detailed descriptions of symbols are provided below.

Read and understand these symbols thoroughly before reading this manual.



If this symbol is ignored and the product is used, there is a risk of death or serious injury to the user” .



If this symbol is ignored and the product is used, “there is a risk of light or moderate injury or physical damage”.



Common danger, warning, and caution notifications



Common prohibited actions



Prohibited disassembly or repairs/modifications



Guidance or instruction regarding common user actions




Remove power plug from the power outlet



Always connect a ground cable


⚠ Warning

Ground items properly.

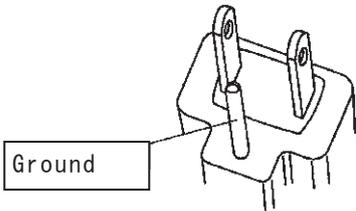

Failure to follow this instructions may cause electric shock if there is a malfunction or ground leakage. Contact a professional for grounding.

Adhere to the following when handling power plugs.

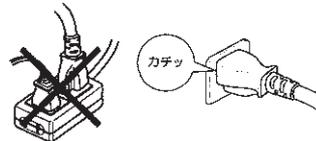


- Ensure that this product is the only appliance connected to the outlet.
- Insert the plug into the outlet all the way to the base.

Adhere to the followings when handling power cables.



- When removing the power plug, hold the plug at the head and do not pull the cable. Failure to follow this instruction may cause electric shock or short circuit.
- Do not use power cables or plugs if they are damaged, or if the connection with the outlet is loose. Failure to follow this instruction may cause electric shock or fire.

Remove the plug if the product will not be used for a long period of time.

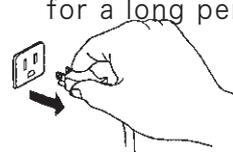

Remove the power plug if the product will not be used for a long period of time, such as after work or when the shop is closed. Dust and moisture may cause faulty insulation, leading to a ground leakage fire.

Always remove the plug during maintenance.




Always remove plug from outlet before maintenance. Do not handle the plug with wet hands. Failure to follow this instruction may cause electric shock or burns.

Periodically remove dust from the power plug.



Periodically remove any dust or dirt from the plug and outlet. Moisture may lead to faulty insulation, and cause a fire.

Adhere to the following when raising/lowering the chair.

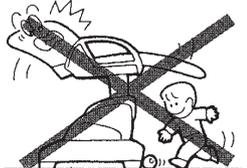

When raising/lowering the chair, ensure that there are no people around the chair or the step. The chair is very heavy and a great force is applied to the base part. If pinched in between, a serious injury will be caused.

Adhere to the following when raising/lowering the legrest.




When raising/lowering the legrest, ensure that there is enough space between customer's leg and any objects in front of it before operation. Failure to follow this instruction may cause a serious injury.

Be careful where to hold the chair when carrying it.



Hold the chair at the base when carrying it. If the chair is carried with holding the upper part of the chair, the base may drop off, leading to a serious injury.

Disassembly and repairs/modifications are prohibited.

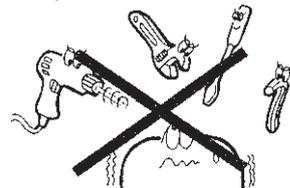

Disassembly, repairs and modifications must not be conducted by people other than qualified repair technicians. Failure to follow this instruction may cause electric shock, fire or abnormal operation, leading to injury.

Always turn OFF the power after use.



Turn the power off when the product is not in use to prevent accidents.

Stop using if the chair does not move or feels something is abnormal.



Stop using this product and contact your nearest dealer or Takara Belmont if the chair does not move or there is something abnormal.



Warning

Due to the mechanism of the chair, there is a gap around the movable parts. Touching metallic parts of the inner part of the chair from this gap may result in cutting hands or fingers or pinching injury while operation, leading to serious injury. Especially, hands and fingers of small children may easily be trapped by the gap, and will be more likely to cause a serious injury.


We shall ask salon workers and parents to pay maximum attention to avoid such danger.

A serious injury may happen in the following cases.


Pinched by the movable part.

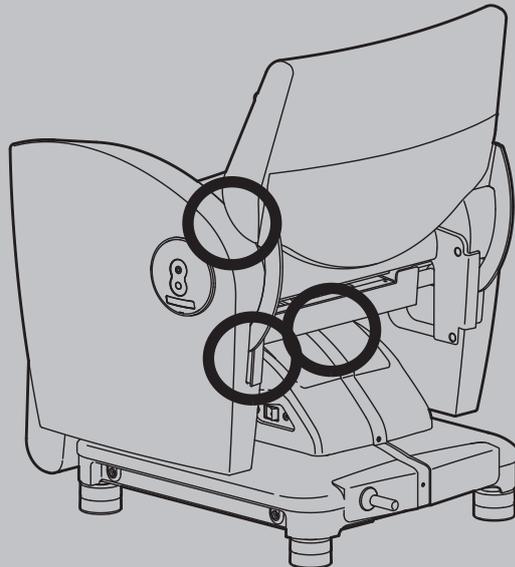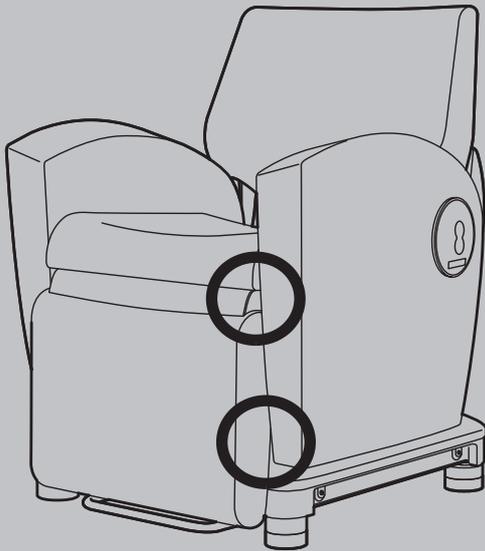

Pinched by the movable part.

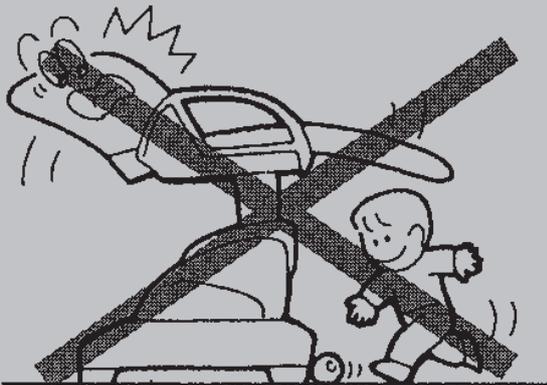


Customer or equipment may fall.

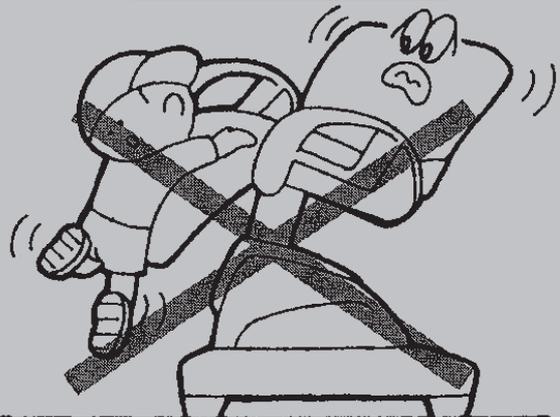


⚠ Warning

Be careful not to touch the switches during shampooing.

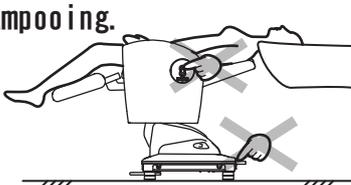

Take care not to accidentally operate the foot switch or manual switch, or trip over the foot switch or base part during shampooing a customer. Failure to follow this instruction may cause the unit to operate suddenly, leading to injury.

Do not apply load with the legrest raised.

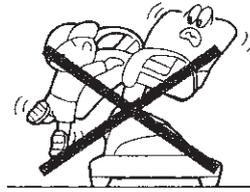


Do not get on or apply load to the legrest when it is in the raised position. Failure to follow this instruction may cause the chair to fall over, leading to injury, or damage the chair.

Do not use the auto return function for elderly customers or children.



Using auto return function for elderly customers or children may injure them by giving improper posture or body pressure. Always use manual switches for elderly customers or children. If you notice anything unusual, stop the operation immediately, especially if elderly customers or small children are seated in the seat, as the change in posture caused by the Auto Mode operation may cause unexpected strain.

Do not insert hands and fingers in the gaps of the chair as shown below.

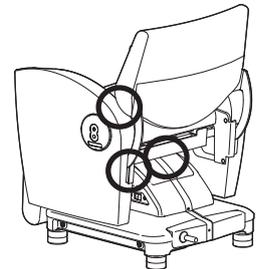

- Gap of legrest upper part.
- Gap between legrest and side part of seat.

- Gap between backrest frame and armrest movable part.
- Gap between seat and base part.

Pay utmost care of customers' s hands and arms. It would lead to big injury if customer' s hands, arms, and fingers get caught in the gaps of the chair.

Do not allow more than one person to sit in the chair.



The seat must not be seated by two or more people at the same time. The maximum load of this chair is 135kg or less. Using the chair in an unstable condition or with a load exceeding its limit may cause malfunctions or damage, leading to injury.

Do not climb on the backrest when it is reclined.



Do not climb on or apply excessive force to the backrest when it is reclined. Failure to follow this instruction may damage the product or cause it to fall over.

Be careful of the fall-prevention bar when getting on/off the chair.



Be careful not to trip over the fall-prevention bar when getting on/off the chair.

Be careful of the chair step when getting on/off the chair.



For a chair with step, do not step on the tip or the side of the step, which can cause the chair to tilt. Failure to follow this instruction may cause the customer to lose their balance and fall over.


⚠ Caution

Get on/off the chair always with the seat at its lowest position.



Always get on/off the seat when the seat is at its lowest position. Getting on/off the seat when it is raised may cause the chair to fall over, leading to injury.

Install the chair to a stable surface.

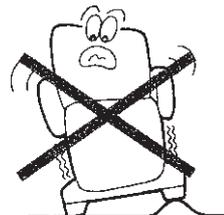



Install the chair on a flat, firm floor. Failure to follow this instruction may cause the chair to fall over.

Take care so that customers and other people do not touch the switches.



- Take care that no one will carelessly operate the chair.
- Unplug the chair when the chair is not in use, in order to prevent accidental operation.

Precautions for Use

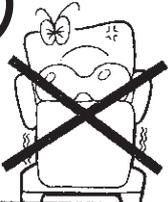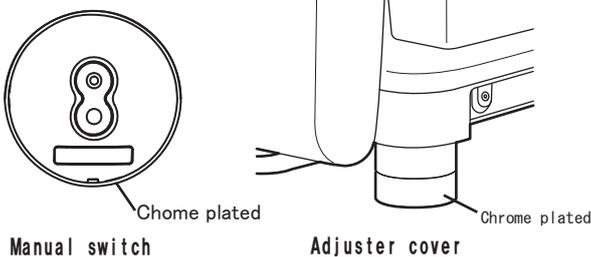 <p>People only allowed to sit in the chair.</p> <p>Allow only people to sit in the chair. Placing any other heavy objects on the seat may cause deformation and damage, leading to injury.</p> 	 <p>Be careful of the chrome plated parts when it becomes peeled off.</p>  <p>Manual switch Adjuster cover</p> <p>The manual switch and adjuster cover is chrome plated as a design. It is likely to peel off by scratches. Take care not to injure your hands and foot with the peeled part when operating or cleaning the chair. Also, replace the parts when it becomes peeled off.</p>
 <p>Do not use with a cover broken.</p> <p>Replace any covers if it breaks. Continuing to use the chair with a broken cover may cause malfunction or an accident.</p>	 <p>Avoid direct sunlight or heat from stove.</p> <p>Failure to follow this instructions may cause discoloration or degradation to the leather.</p>
 <p>Do not use outdoors.</p> <p>This product is designed for indoor use. Do not install this product outdoors or within a vehicle. Be sure to only use this product inside a barber or hair salon. Failure to follow this instruction may cause malfunctions or damage to the product.</p>	 <p>Always operate the power switch with your hand only.</p> <p>Failure to follow this instructions may damage the product.</p>
 <p>Do not subject the unit to shocks.</p> <p>Failure to follow this instruction may cause damage, leading to injury.</p>	 <p>Always support customer's head with your hand when reclining/raising the backrest.</p>  <p>Failure to follow this instructions may cause customer's head to hit the basin.</p>
 <p>Immediately wipe off any chemicals adhere to the product.</p> <p>If chemicals such as hair dyes adhere to the product, wipe them off immediately. Failure to follow this instruction may cause discoloration, deterioration, or deformation. Also, immediately wipe off any chemicals spilled on the floor.</p>	 <p>Do not wipe the product with chemicals or apply heat.</p> <p>Failure to follow this instruction may cause deformation or discoloration. If chemicals adhere to the product, wipe them off immediately.</p>
 <p>After use, completely wipe off any water on the product.</p> <p>Leaving the product wet may cause damage, and make dirt difficult to remove.</p>	 <p>Pay attention when customer is getting on/off the chair.</p> <p>Guide customers so they will not fall over.</p>

● For using this product safely, make sure to perform the “Procedures for Dainly Inspections” (page 20) of this manual.

Precautions for Handling Synthetic Leather


● Stains caused by clothing dyes.

The synthetic leather of this product may become stained by direct contact with clothes or belts. If it became stained, wipe clean as quickly as possible with a 10% detergent solution diluted using water to prevent permanent staining.

● Take care of deformation or stains due to direct contact.

- Direct contact with other objects such as plastic products, painted items, solvents or adhesive tape may cause changes to the surface luster, cracking, deformation, or peeling.
- Direct contact with newspapers or printed paper may cause stains.
- Direct contact with items of clothing such as printed images of t-shirts or jeans may cause discoloration of the synthetic leather of this product.
- Direct contact with solvents such as benzene, nail polish remover, alcohol, oil (including beauty treatment oils) may cause discoloration, melting of the surface, elution of the plasticizing agent, changes to surface luster, hardening/softening or peeling.
- Using bleach or bleached sheets may cause changes to surface luster or discoloration.
- Installing this product next to sources of excess heat such as irons or heaters may cause deformation or discoloration.
- Protect this product from direct sunlight by installing curtains. Failure to follow this instruction may cause changes, shrinking, discoloration, or fading of the leather surface.
- Placing heavy objects for a long period of time may leave an imprint or wrinkles on the synthetic leather that cannot be removed.

Position of Warning Labels

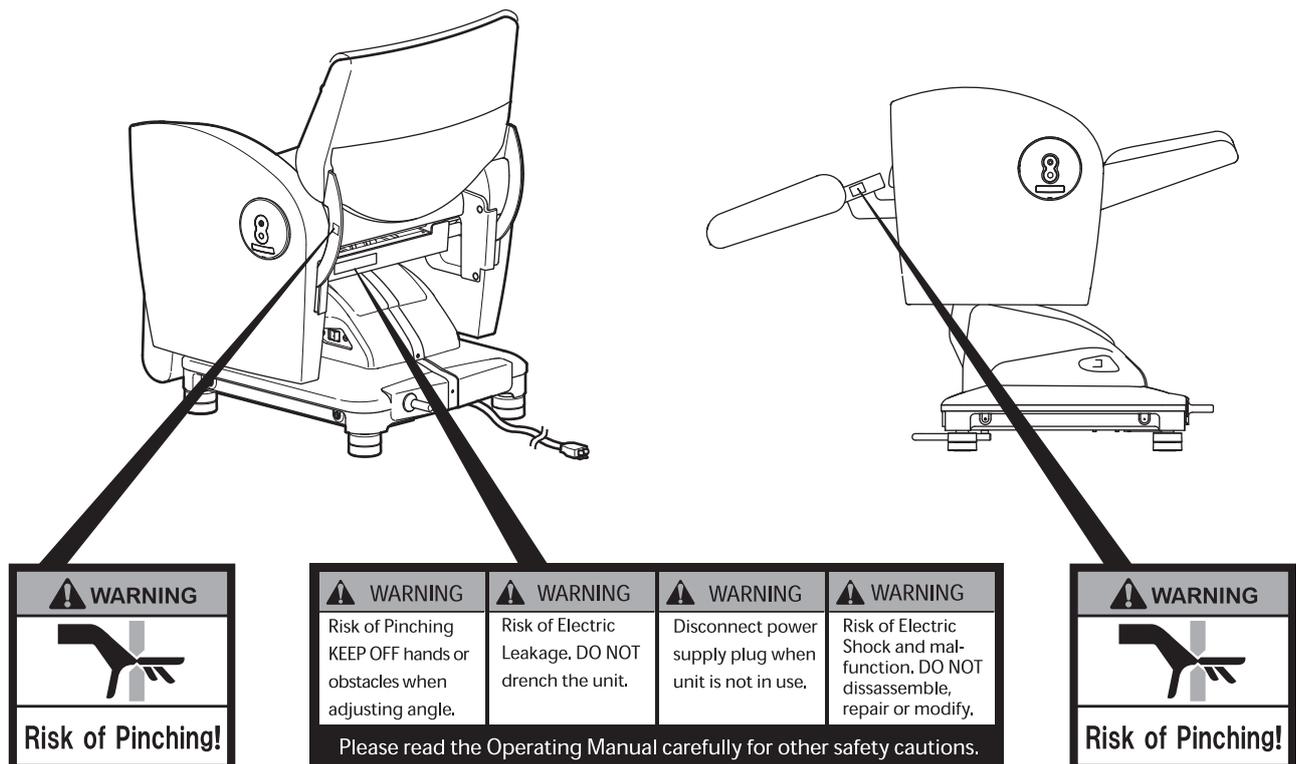


Before Using this Product

This product is a chair designed for using with a shampoo basin used in hairdressing salons for performing side shampooing. Using this product properly with a shampoo basin enables to perform shampooing safely and comfortably.


When using this product, thoroughly read this manual and operating manual of a shampoo basin to be used together with this product, and use them safely.

Name of Parts


Main body

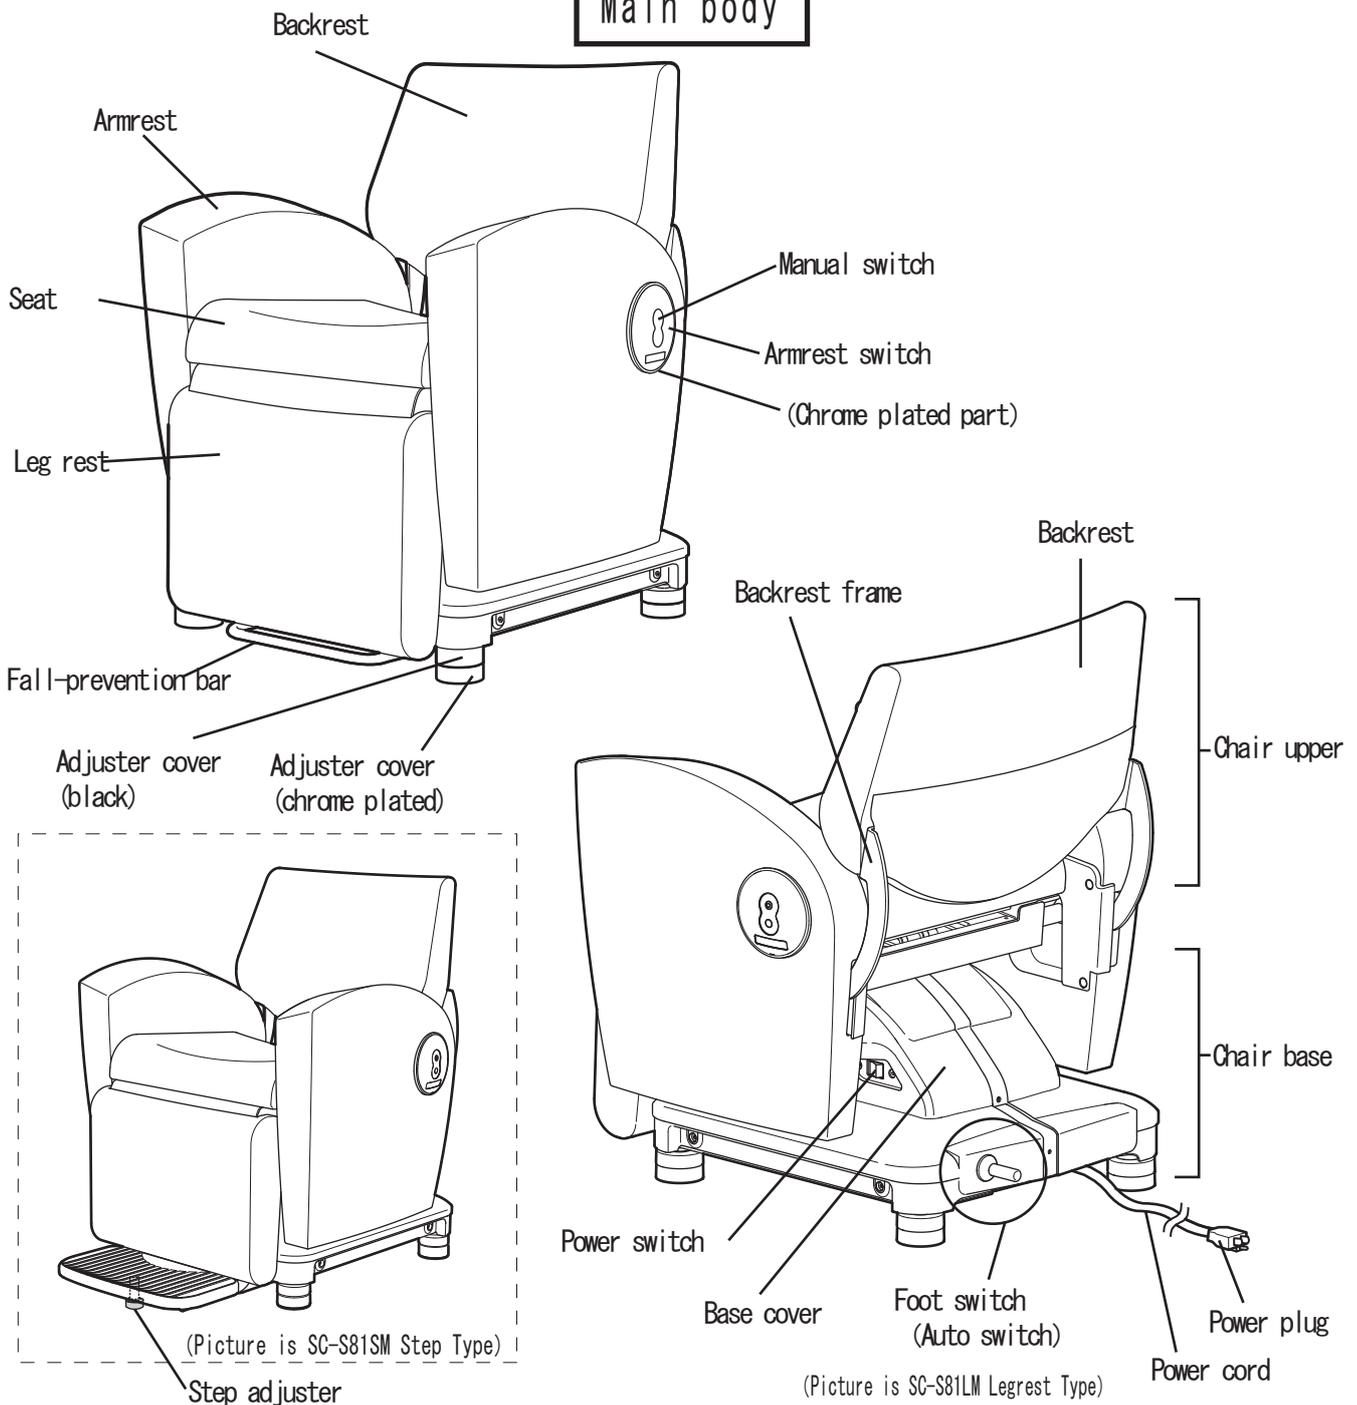

Armrest Switch

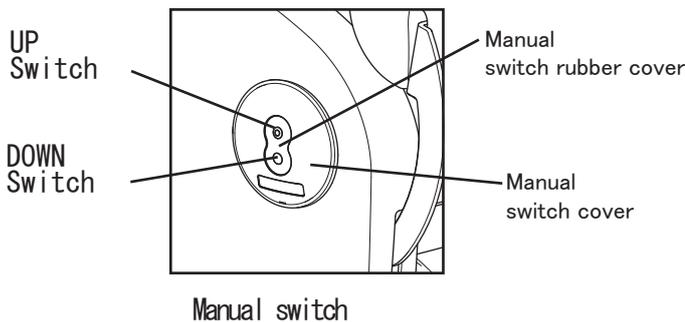


Foot Switch

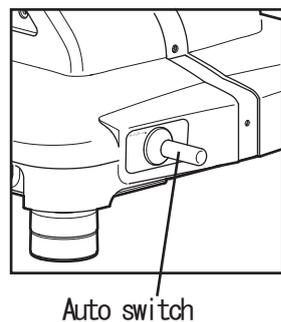

Preparation

1 Installation

Install the chair as per below correlation diagram.

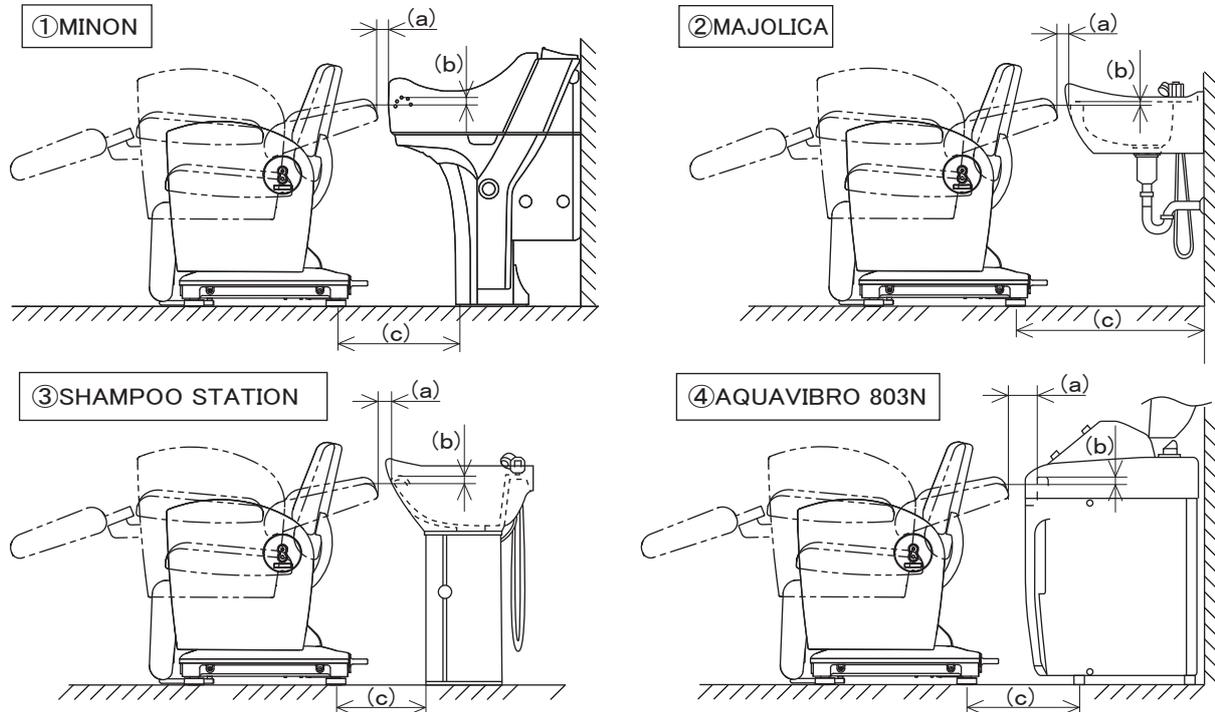

	Name of basin	(a) From top of backrest - Front end of basin	(b) Height difference of backrest - neck (without neck cushion)	(c) From center of back side adjuster - Front end of the base
①	MINON (※In the case of wall mount type)	20 (※From top of backrest to front end of neck core : 50 ⇒Guide: Space that a showerhead can be inserted)	0 (※Adjuster height needs to be adjusted)	435
②	MAJOLICA	50	30 (※Adjuster height needs to be adjusted)	695 (※From center of back side adjuster - wall)
③	SHAMPOO STATION	50	30 (※Adjuster height needs to be adjusted)	295
④	AQUAVIBRO 803N	50	30 (※Adjuster height needs to be adjusted)	400 (※From center of back side adjuster - Center of front adjuster)

(Unit: mm)

Note


- The above measurements are actual measured value. Including dimensional tolerance of basin and chair upholstery, the actual value may slightly differ from the above from product to product.
- After installing the basin, install the chair according to the measurements of (a) and (b).
- If the correlation of basin and chair is inappropriate, excessive load may be applied to customer's hip or back which may make them feel uncomfortable. Especially, when the gap between backrest and neck part of the basin is too narrow, customer's shoulder may touch the basin or customer's back may become painful, so make sure to have an appropriate gap.
- Always have the chair carried by two people or more. Carry the chair by holding it at the bottom of the base. Do not tilt, drag, or push the chair. Failure to follow this instruction may damage the floor surface, deform and break the chair adjuster, leading to malfunction, product breakage, or falling over injury. Also, carrying the chair by holding the armrest or backrest may cause product malfunction or breakage. Please ensure to always carry the chair by holding it at the bottom of the base.

2 Adjusting the Adjuster

After installation, if the chair may rattle due to floor, adjust the adjuster so to make the chair stable and horizontal to floor.

1 Turn the adjuster cover to the loosen direction (as per the picture at the right).

2 Tilt up the chair base, turn and adjust the adjuster and make it stable to the floor.

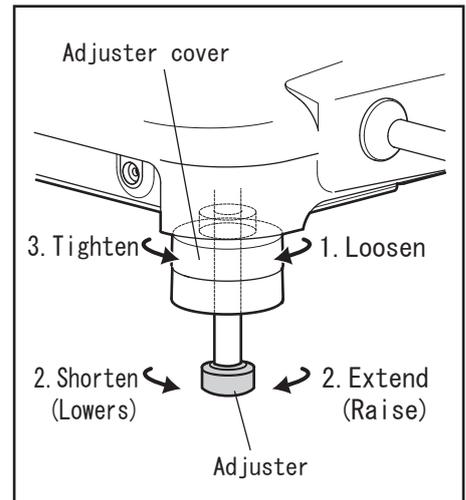


(Picture is of SC-S81LM Legrest Type)



Do not tilt the chair too much as it may cause deformation or breakage to the adjuster or adjuster cover. Also, tilting the chair by holding it at the armrest or backrest will cause product malfunction or breakage. Always tilt the chair by holding it at the bottom of the base.

3 After adjusting is finished, turn the adjuster cover to the tighten direction (as per the above picture) and fix it tightly.

 ※Make sure that the 2nd and 3rd adjusters are also fixed tightly.




Always check and make sure that the chair does not rattle after moving it for maintenance or cleaning the salon. When adjusting the height of the chair, adjust the adjuster after loosening the adjuster cover. With the adjuster cover in the tightened state, adjuster cannot be properly adjusted.

3 Height of the Adjuster

Product Code	Basin neck height	X distance (from bottom of base to floor)
[Low] SC-S81XL, SC-S81LL, SC-S81SL	750~770	34~54
[Medium] SC-S81XM, SC-S81LM, SC-S81SM	765~785	49~69
[High] SC-S81XH, SC-S81XM, SC-S81SH	780~800	64~84


(Unit: mm)

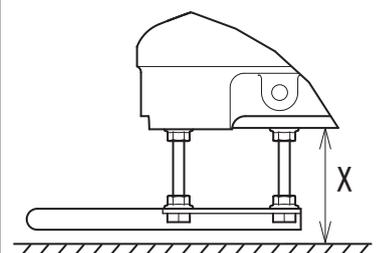

4


Attaching the Step Adjuster of the Step Type

(Product Code of the Step Type : SC-S81SL, SC-S81SM, SC-S81SH)

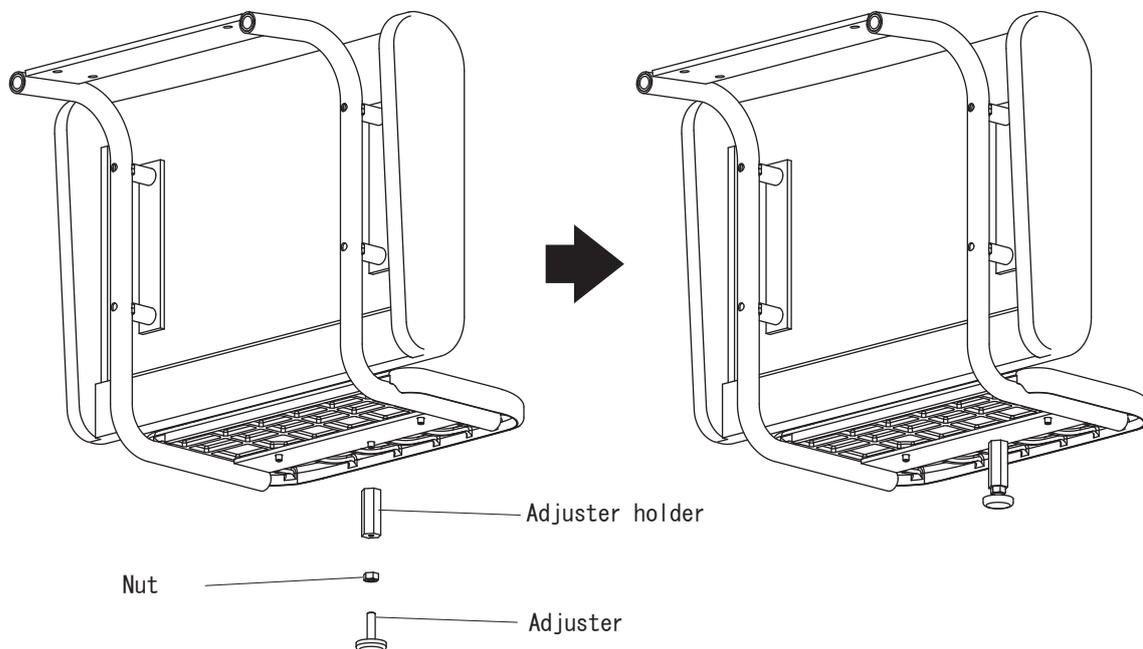

Attach the step adjuster as per the above illustration.

The parts to use and the attachment distance should be referred to the below.

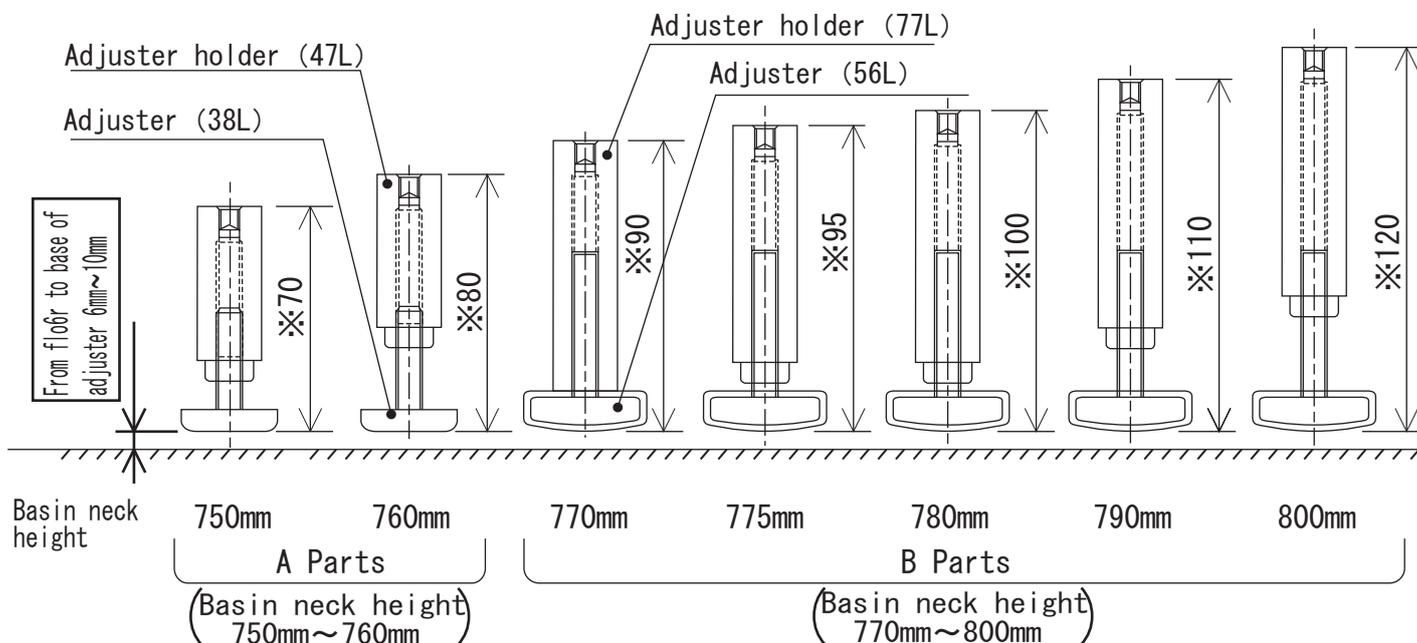


©The above ※value is just for reference. Please adjust the adjuster so the distance from floor to base of adjuster would be 6mm~10mm.

(Note) In the case of 770mm neck height, remove the nut and tighten the adjuster to use.

For Step type, each 2 kinds of adjuster and adjuster holder are supplied with the product. Keep and store the ones not in use for future use when changing the height of the product.

5 Power


1. Insert the power plug into an outlet.

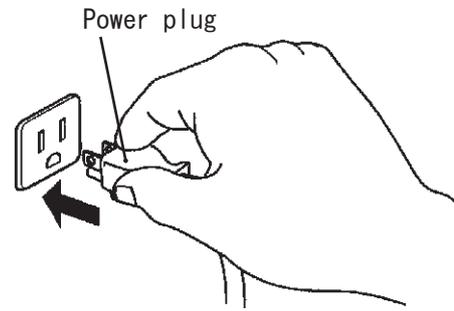

- Ensure that this product is the only appliance connected to the outlet.
- Insert the power plug into an outlet all the way to the base. When unplugging, hold the plug at its head and do not pull it at the cord.
- Electric works should be done by a professional.
-  Ground items properly. Failure to follow this instruction may cause electric shock if there is a malfunction or ground leakage.


2. Turn ON/OFF the power switch.

Power switch

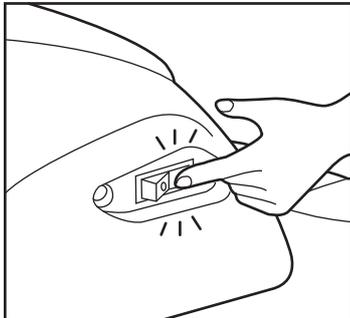

- The power switch is located at the left side of the base. The power turns ON if the right side (I mark) is pushed, and turns OFF if the left side (O mark) is pushed.

Enlarged view

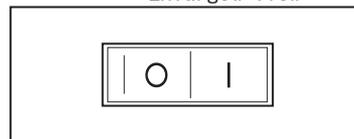

- Always turn the power OFF when the product is not in use.
- Unplug the unit when it is not going to be used for a long time, such as when the shop is closed. Dust and moisture may cause faulty insulation, leading to a ground leakage fire.
- Always operate the power switch with your hands only.



Do not turn the power switch ON while pressing the foot switch or manual switch. Turning the power ON while pressing foot switch or manual switch will reset the setting positions.

How to Use


1 Guiding Customers

Check and ensure that the seat is at its lowest position.

(Refer to page. 15, Return to the initial position)

Guide the customer to sit.

For small customers, it would be easier to set to appropriate shampooing position, if customers would sit fully back in the seat.

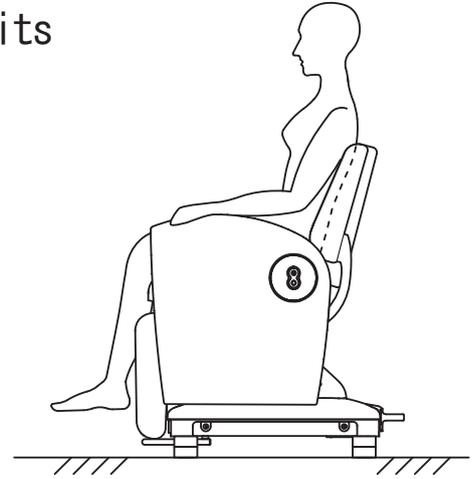

2 Setting to Shampooing Position

1. Recline the chair. The chair moves to the preset shampooing position automatically.


One press of the auto switch will automatically bring the chair to the preset shampooing position.

(The backrest reclines while the seat raises.


Simultaneously, the legrest rises.*)

※Legrest does not move and stays fixed for step type (SC-S81SL, SC-S81SM, SC-S81SH).

Just one press will operate the chair.

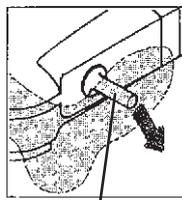

Auto switch

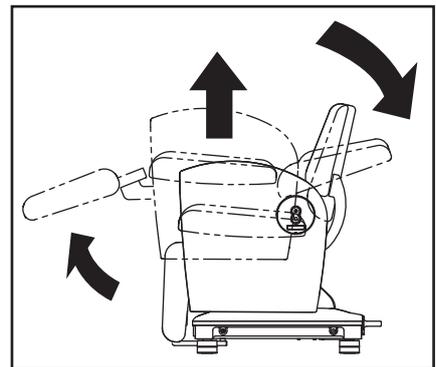

Auto set function ⇒ One press of the switch automatically brings the chair to the preset shampooing position.

Cancellation function

To stop the chair movement while the chair is moving in the automatic mode (auto set / auto return), press either the auto or the manual switch once. This will immediately stop the chair movement. Pressing the switch again will regain the chair movement.


Setting to Shampooing Position Continuation from the previous page

How to adjust the preset shampooing position

The standard preset shampooing position available with auto switch is already set at factory. However, you can change this position according to your needs.

- 1 Use the manual switch and move the chair to your desired preset shampooing position.
- 2 Turn OFF the power switch.
- 3 While pressing down the auto switch, turn the power ON.
- 4 Keep pressing the auto switch till you hear a beep sound. Setting is completed.
- 5 Use the auto switch to confirm that the preset position is set at your desired position.

*Based on each usage environment, the set position and actual position may slightly differ.

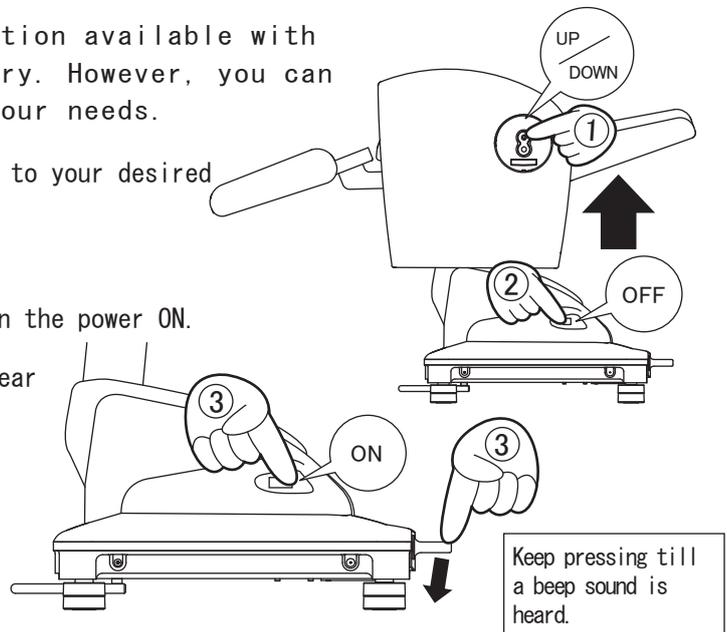

2. Manually adjust the shampooing position.


Minor adjustment of the shampooing position can be done by the armrest manual switch.

1 Raise the seat to bring the backrest closer to the basin.


Press the UP switch of the manual switch. (The chair moves while the switch is pressed.)

When the customer's neck comes to a suitable position to the basin, release the switch to stop the chair movement.

UP switch

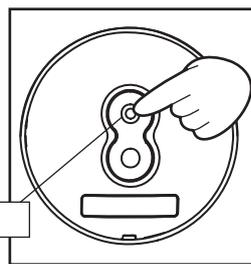

Manual switch

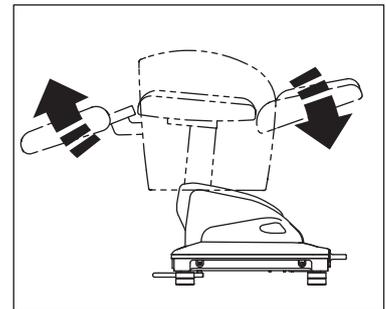


2 Lower the seat to bring the backrest farther from the basin.


Press the DOWN switch of the manual switch. (The chair moves while the switch is pressed.)

When the customer's neck comes to a suitable position to the basin, release the switch to stop the chair movement.

DOWN switch

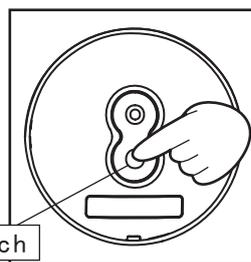

Manual switch

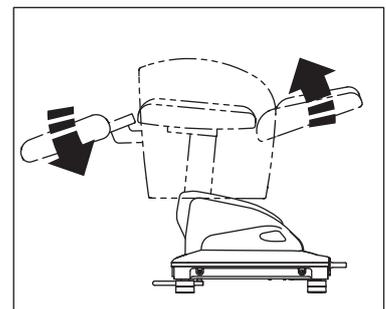


3

Return to the Initial Position (Using the auto return function)


Pressing up the auto switch will automatically bring the chair back to the initial position.

(The backrest raises while the seat lowers. Simultaneously, the leg rest lowers.※)

※Leg rest does not move and stays fixed for the step type (SC-S81SL, SC-S81SM, SC-S81SH).

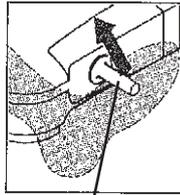

Auto switch

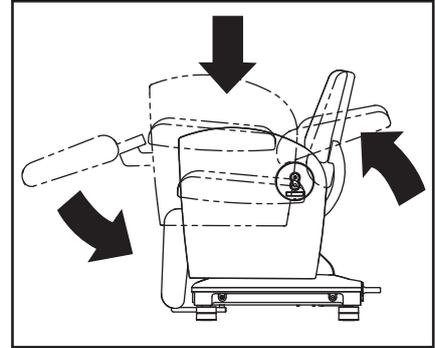

Auto return function⇒Pressing up the auto switch once will automatically bring the chair back to the initial position.



Warning

- Take care of the surroundings before operating the chair. Make sure that no one is near the chair. Getting pinched by the moving chair will lead to injury.
- This chair has a leg rest that moves along with the backrest movement. When moving the backrest, take care of customer's legs and surrounding equipment.
- Do not use the auto return function for elderly customers and children. Using this function for elderly customers and children may injure them by giving improper posture or body pressure. Please always use the manual switch to return the chair back to the initial position.
- Take care of customer's arms and hands when moving the backrest. Make sure not to pinch them between the backrest and the armrest.

Cancellation function

To stop the chair movement while the chair is moving in the automatic mode (auto set / auto return), press either the auto or manual switch once.

This will immediately stop the chair movement.

Pressing the switch again will regain the chair movement.

Maintenance

Resin cover parts (except plating parts)

Wipe with a soft, damp cloth.

If extremely dirty;

Wipe with a detergent solution diluted using water

Synthetic leather parts

Lightly wipe with a soft, dry cloth.

If extremely dirty;

Wipe with a detergent solution diluted using water.

Control switch/Metal parts/Resin cover (plating parts)

Lightly wipe with a soft, dry cloth.

When moisture adheres, wipe it off immediately. Failure to follow this will cause rust or malfunction to the electric parts.

Note

Never use the followings:

- Volatile chemicals such as thinner, alcohol, gasoline, or kerosene.
- Wax with scourer, a sponge with scourer, detergents that include organic solvents, acidic, alkaline, or chlorine-based detergents, or scouring pads.

Daily Inspections

- To ensure long and safe use of this product, perform daily inspections following the “Procedures for Daily Inspections” in page 19. of this manual.



Always perform daily inspections following the procedures in “Procedures for Daily Inspections”. Continuing to use this product without performing daily inspections may cause malfunctions or accidents.

Before Requesting Repairs

Symptom	Check points	Solution
<ul style="list-style-type: none"> ■ Chair is not moving. 	<ul style="list-style-type: none"> ■ Is the plug inserted properly? ■ Is the power ON? ■ Is the fuse or circuit breaker of the shop blown or tripped? ■ Has the product been used continuously or for long period? 	<ul style="list-style-type: none"> ■ Insert the plug into an outlet (see page. 10) ■ Turn ON the power (see page.10) ■ Replace the fuse or turn ON the circuit breaker. ■ This is due to the overheat protection system activated. Leaving the product still for 10 min. will regain its normal operation. <div style="border: 1px dashed black; padding: 5px; margin-top: 10px;"> <p style="text-align: center;">Overheat protection system</p> <p>This is a protective circuit that stops the motor if the product has been used continuously, to prevent overheating of the internal mechanisms. This product may be temporarily unresponsive when the overheat protection system has been activated.</p> </div>

- If the product does not still operate properly after checking and repairing the above points, stop using the product immediately and contact your nearest dealer or Takara Belmont.

This is not a malfunction of the product.


■ Abnormal sound appears at the start of the day.

■ This is caused by the grease inside the product cooling down over the night, and is not a mechanical fault. The sound will disappear after a while.

- To request after-sales services, contact your nearest dealer or Takara Belmont.


Specification

Product Code	SC-S81		
Rated Voltage	AC 220V	AC 230V	AC 240V
Rated Frequency	50/60Hz	50/60Hz	50/60Hz
Rated Current	1.7/1.8A	2.0/1.9A	2.1/1.9A
Net Weight	90kg		
Drive Method	Electro hydraulic		
Seat Stroke	215mm		
Reclining Angle	12° ~ 68°		
Leg rest Angle	28° ~ 84°		
Usage Environment	Operating temperature 10 ~ 40°C Operating humidity 95% or less (ensure no condensation)		
Maximum Withstand Load	135kg		

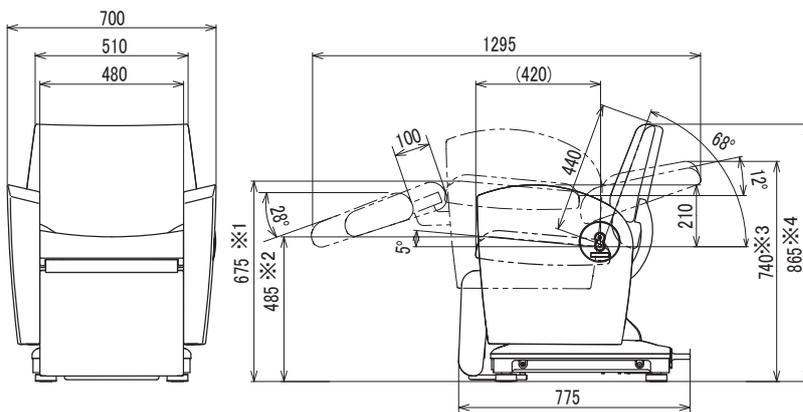


【SC-S81XL Long Legrest Type】

※1~4 measurements will vary depending on the type of adjuster to be used.

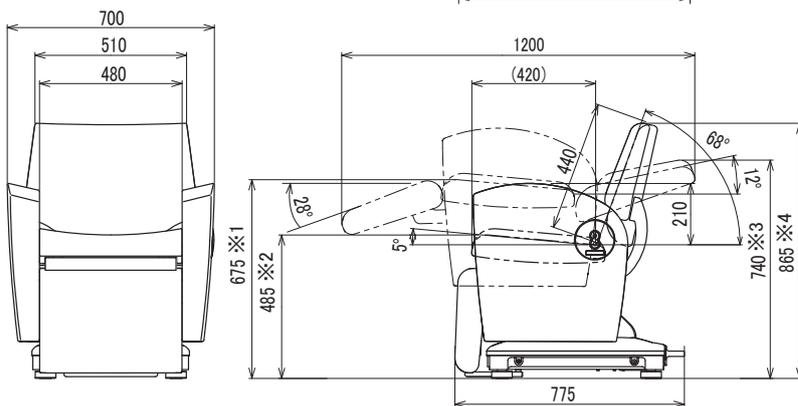

【SC-S81LL Legrest Type】

※1~4 measurements will vary depending on the type of adjuster to be used.

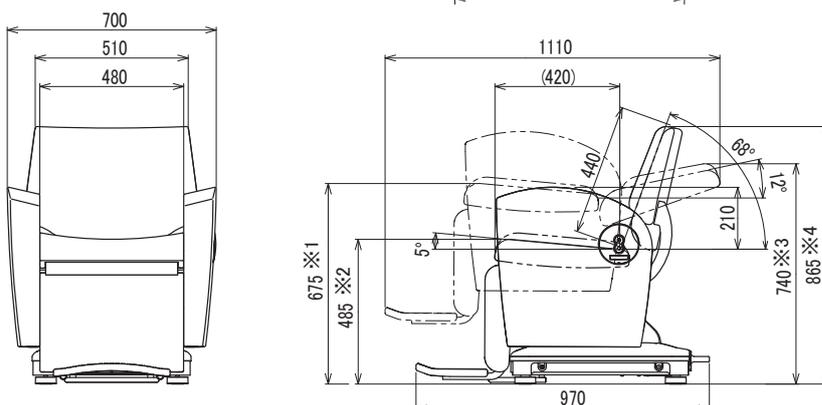

【SC-S81SL Step Type】

※1~4 measurements will vary depending on the type of adjuster to be used.

Standard Period of Use

- The standard period of use of this product is 7 years.
- The standard period of use is “a guide for the standard period that this product can be used properly from a safety perspective, when conducting appropriate maintenance and inspections (including replacement of parts) for the standard usage conditions for each product. This is not the same as warranty period.

Consumable Supplies

- “Consumable Supplies” refer to parts that are expected to damage due to wear, degradation, changes in external appearance. Please note that repair and replacement of these parts are not covered by warranty, and will be charged accordingly. (*The level and period of wear, degradation, or damage may differ depending on each usage environment.)
Please contact your nearest dealer or Takara Belmont for any damaged parts.
External scratches or dirt, degradation, or fading of the following external parts are not covered by warranty.
 - Upholstered parts (leather, cushion, thread, etc.)
 - Foot switch
 - Manual switch rubber cover
 - Manual switch (chrome plated part)
 - Adjuster
 - Adjuster cover
 - Pump cover
 - Manual switch cover

Disposing of this Product

When disposing this product or replaced parts, follow the laws and the regulations of your region and dispose them appropriately.

Procedures for Dainly Inspections

To ensure that this product can be used for a long period, conduct the inspections below.

Inspection Point	Inspection Method	If the inspection results show defects
<input type="checkbox"/> Does the backrest, seat, or armrest rattle?	<input type="checkbox"/> Slowly push the top of the backrest, the front end of the seat, and end of the legrest in each direction, and check whether any	<input type="checkbox"/> Rattling may cause incorrect operation, damage, or falling accidents. Stop using the product and contact your nearest dealer or Takara Belmont.
<input type="checkbox"/> Does the step rattle? (For SC-S81S Step type only)	<input type="checkbox"/> Slowly push the step in each direction and check whether it rattles.	<input type="checkbox"/> Rattling may cause incorrect operation, damage, or falling accidents. Stop using the product and contact your nearest dealer or Takara Belmont.
<input type="checkbox"/> Does the fall-prevention bar	<input type="checkbox"/> Slowly push the fall-prevention bar in each direction and check whether it rattles.	<input type="checkbox"/> Rattling may cause incorrect operation, damage, or falling accidents. Stop using the product and contact your nearest dealer or Takara Belmont.
<input type="checkbox"/> Is the product operating properly?	<input type="checkbox"/> Check that a warning alarm is not heard when turning ON the power. <input type="checkbox"/> Press down the auto switch and check that the chair moves to the preset position correctly. (auto set function). <input type="checkbox"/> Press up the auto switch and check that the chair returns to the initial position correctly. (auto return) <input type="checkbox"/> Check that the seat up/down functions normally by manual switch.	<input type="checkbox"/> Turn OFF the power. Turn ON the power again after 5 sec. If the warning alarm is still present, the position detector may be broken. Stop using the product and contact your nearest dealer or Takara Belmont. <input type="checkbox"/> Refer to p.14 "How to adjust the preset position", and reset the position, and check again. If the chair still does not move correctly, contact your nearest dealer or Takara Belmont. <input type="checkbox"/> The chair may not be safe to keep using. Contact your nearest dealer or Takara Belmont.
<input type="checkbox"/> Is there an abnormal odor from the product?	<input type="checkbox"/> Check that there are no rattling or abnormal noise to the chair during <input type="checkbox"/> Check that there are no sinking to the chair when stopped at a fixed point. <input type="checkbox"/> Check that there are no abnormal odor or smoke coming from the product.	<input type="checkbox"/> The chair may not be safe to keep using. Contact your nearest dealer or Takara Belmont. <input type="checkbox"/> Stop using the chair and contact your nearest dealer or Takara Belmont. <input type="checkbox"/> Stop using the chair and contact your nearest dealer or Takara Belmont.
<input type="checkbox"/> Is there any oil leaking?	<input type="checkbox"/> Check that there are no oil leaking from the base cover or around the	<input type="checkbox"/> Abnormal odor or smoke may cause incorrect operation or fire. Stop using the product and contact your nearest dealer or Takara Belmont. <input type="checkbox"/> Oil may be leaking from hydraulic parts or cylinder. Stop using the product and contact your nearest dealer or Takara Belmont.
<input type="checkbox"/> Is the adjuster screw not bent?	<input type="checkbox"/> Visually check that the adjuster screw is not bent. (Check by moving the adjuster cover up & down. After checking, make sure to return the cover back to its position).	<input type="checkbox"/> Bent adjuster screw may cause product breakage or falling accidents. Stop using the product and contact your nearest dealer or Takara Belmont.
<input type="checkbox"/> Is the adjuster screw not rusted?	<input type="checkbox"/> Visually check that the adjuster screw is not rusted. (Check by moving the adjuster cover up & down. After checking, make sure to return the cover back to its position).	<input type="checkbox"/> Rusted adjuster screw may cause product breakage or falling accidents. Stop using the product and contact your nearest dealer or Takara Belmont.
<input type="checkbox"/> Is the step adjuster screw not bent?	<input type="checkbox"/> Visually check that the step adjuster screw is not bent.	<input type="checkbox"/> Bent step adjuster screw may cause product beakage or falling accidents. Stop using the product and contact your nearest dealer or Takara Belmont.
<input type="checkbox"/> Is the step adjuster screw not rusted?	<input type="checkbox"/> Visually check that the step adjuster screw is not rusted.	<input type="checkbox"/> Rusted step adjuster screw may cause product breakage or falling accidents. Stop using the product and contact your nearest dealer or Takara Belmont.
<input type="checkbox"/> Has no air entered into the hydraulic system?(If holding the chair by the armrest or backrest when carrying may cause air to enter the system).	<input type="checkbox"/> Check that the chair will not sink when a load is applied to the seat at its lowest position.	<input type="checkbox"/> Customers may not be able to get in/out of the chair safely. Contact your nearest dealer or Takara Belmont.



TAKARA BELMONT CORPORATION
1-1, 2-Chome, Higashi-shinsaibashi, Chuo-ku, Osaka, Japan
TEL : (06) 6212-3523 FAX : (06) 6211-5745

Printed in Japan