


TAKARA BELMONT SHAMPOO EQUIPMENT

YUME ESPOIR YUME SUITE YUME NOBLE

Model No.	Basin body	: AY-EXESYMB* / AY-EXESYMBR* / AY-EXESYMS*
	Seat body	: AY-SCESFB* / AY-SCESFS* / AY-SCESLB* / AY-SCESLS* AY-YMSIHB* / AY-YMSIHR*
	Seat	: AY-SUESB* / AY-SUESP* / AY-YMSIUS* / AY-YMNBUS*
	Base plate	: EA-ESBP

Operating Instructions

Image is of
AY-EXESYM*/AY-SCESF*/AY-SUESF*/EA-ESBP
AY-EXESYM*/AY-YMSI* /AY-YMSIUS*/EA-ESBP
AY-EXESYM*/AY-YMSI*/AY-YMNBUS*/EA-ESBP

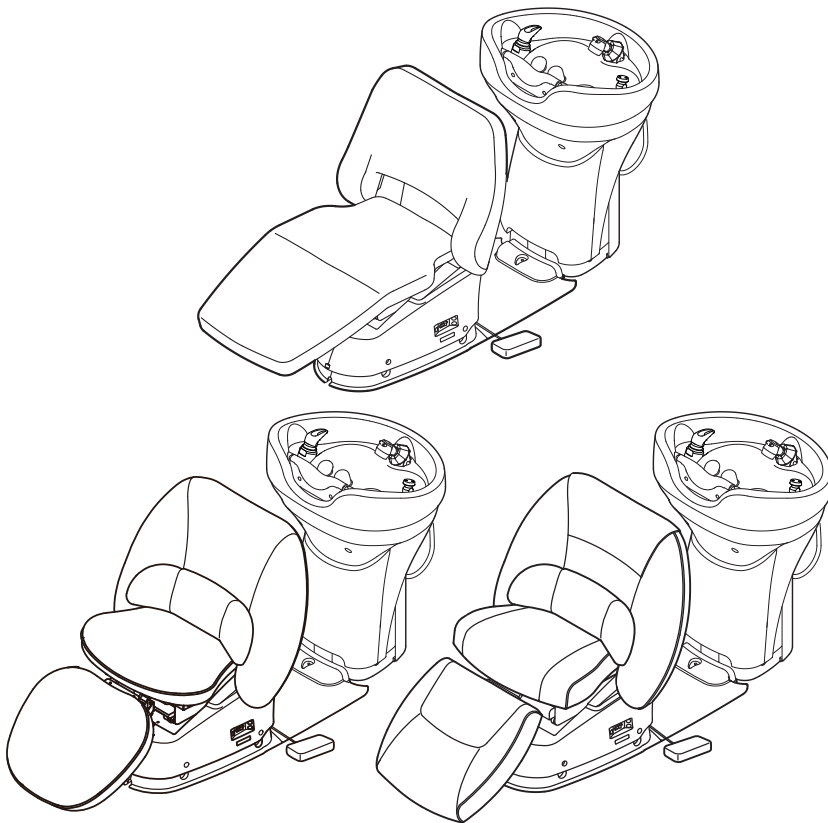

This product is designed for shampooing and hair/scalp care.

Thank you for purchasing this Takara Belmont product.
The instructions contained in this booklet should be thoroughly read and understood before use.
Using this product before reading this operating instructions may result in an accident.
This product is an industrial shampoo unit designed for barbers and hair salons.
Only use this product for its intended purpose and do not use it for non-hair-dressing work.
Keep this instruction and refer back to them when required.

Table of Contents

Important safety instructions	2
Save these instructions	2
Description of Warning Symbols	3
Safety Precautions	3
Precautions for Use	8
Precautions for Handling	10
Position of Warning Labels	10
Precautions on Resin(Plated)Parts	11
Name of Parts	12
Accessories	13
Precaution for Basin	13
Before Using This Product	13
Preparations	14
How to Use	16
Guiding Customers	21
Maintenance	24
Daily Inspections	29
Before Requesting Repairs	29
Standard Duration of Use	29
Consumable Supplies	30
Disposing of This Product	30
After-sales Service	30
Specifications	31
Dimensions	33
Procedures for Daily Inspections	39
Memo	42

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following:
Read all instructions before using.

DANGER – To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning.


WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Unplug from outlet before putting on or taking off parts.
2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like.
7. Never drop or insert any object into any opening.
8. Do not use outdoors.
9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
10. To disconnect, turn all controls to the off position, then remove plug from outlet.
11. "WARNING: Risk of Injury – Keep children away from extended foot support."
12. WARNING: Risk of Electric Shock – Connect this furnishing to a properly grounded outlet only. See Grounding Instructions.
13. For loading always put heavier items at the bottom and not near the top in order to help prevent the possibility of the furnishing tipping over.
14. Warning: Risk of Injury to Persons – do not use this furnishing to support video equipment such as televisions or computer monitors.
15. Each surface intended to support a load shall have a corresponding statement in the use instructions specifying the maximum intended load for that surface in pounds 298.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

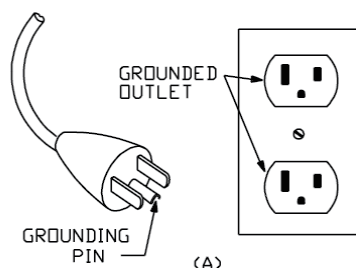

Description of Warning Symbols

■ Before using this product










The "Safety Precautions", "Precautions for Use" and "Precautions for Handling Synthetic Leather" contained in this booklet should be thoroughly read and understood before use.

■ Precautions listed here





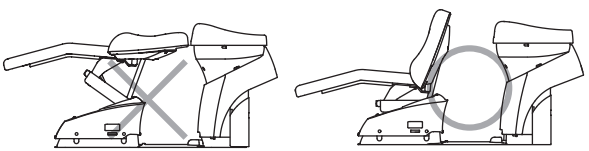
The precautions listed here are to ensure that this product can be used safely, and to prevent any danger or risk to the person using this product or those around them.

These precautions are important for ensuring safety. Adhere to these precautions at all times. Takara Belmont is not responsible for any damage or risk to the person using this product or those around them due to accidents if this product is used without adhering to the "Safety Precautions", "Precautions for Use" and "Precautions for Handling Synthetic Leather". In this case, the person failing to adhere to the "Safety Precautions", "Precautions for Use" and "Precautions for Handling Synthetic Leather" will be responsible for any damage or risk incurred. Detailed descriptions of symbols are provided below. Read and understand these symbols thoroughly before reading this instruction.

■ Symbols

 Warning	If this symbol is ignored and the product is used, "there is the risk of death or serious injury to the user".
 Caution	If this symbol is ignored and the product is used, "there is the risk of light or moderate injury or physical damage".
Note	Description of "ideal points to adhere to for safety".
 Common danger, warning and caution notifications  Common prohibited actions  Remove power plug from the power outlet  Always connect a ground cable	 Guidance or instruction regarding common user actions  Prohibited disassembly or repairs/modifications <small>Disassembly Prohibited</small>  Notification of high temperature warning CAUTION Hot water

Safety Precautions (Adhere to these precautions at all times)

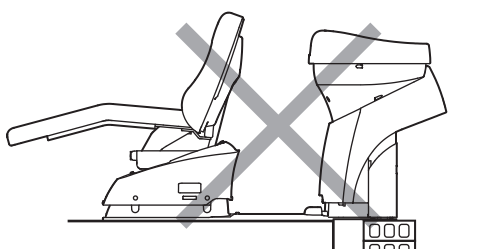 Warning	
 Install on a stable area Install the main body on a flat, firm floor, and fix it securely. Failure to follow this instruction may cause the main body to fall over. 	 Get on or off the seat it is in its lowest position. Get on or off the seat when it is in its lowest position. Getting on or off the seat when it has been lifted up may damage the seat, or cause injury to the person using this product. 



Warning




Stop using this product if it does not move, or if it feels like there is a problem present.

Stop using this product if the seat does not move, or if it feels like there is a problem present.



Take care that customers or other people do not touch the foot switch or power switch.


- Take care that customers or other people do not touch the foot switch or power switch while using this product. Carelessly operating the switches may cause injury.
- If the product is not going to be used, turn the power switch off to prevent accidental operation by other people.

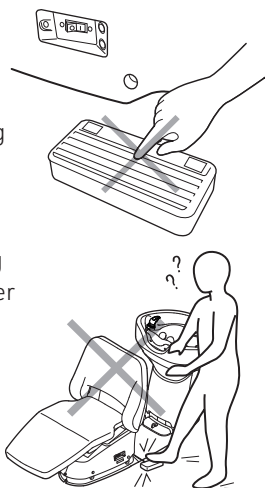

Be careful of the space between the seat and floor.

When the seat is lowered, the end of the seat comes extremely close to floor level. When lowering the seat, always check and make sure that there are no people or objects under the seat.

In particular, take care to check for babies or children. The seat may become damaged if people or objects become trapped between the seat and floor.

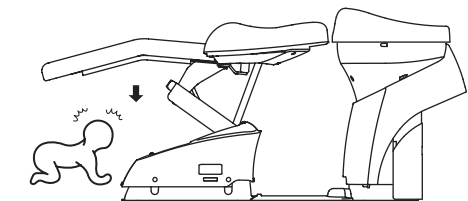

Do not sit on the end of the legrest.

Do not sit on the end of the legrest. The seat may lose balance and fall over, causing injury, or damage to the seat.




Do not climb on the seat.

Failure to follow this instruction may damage the seat, or cause injury.



Do not use with two or more people.

The seat must not be used by two or more people at the same time. The maximum load of this product is 298lb or less. Using this product while it is unstable or with a load that exceeds the maximum load may cause malfunctions or damage, leading to injury.

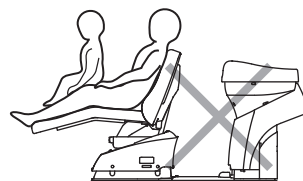

Do not climb on parts such as the basin or backrest.

Do not climb on, pull or apply excessive force to parts such as the basin, backrest or end of the seat. Failure to follow this instruction may damage the product or cause it to fall over.




Do not climb on the backrest when it is reclined.

Do not climb on or apply excessive force to the backrest when it is reclined. Failure to follow this instruction may damage the product or cause it to fall over.



Do not insert fingers into movable parts.

Do not insert fingers into movable parts. Failure to follow this instruction may cause injury.

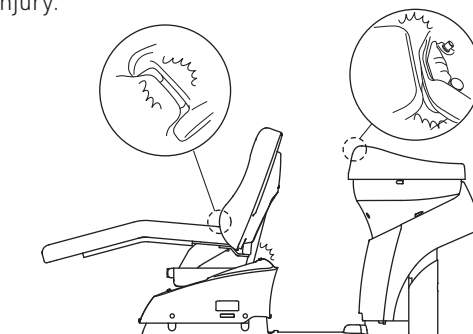



Warning



Disassembly
Prohibited

Disassembly and repairs/modifications are prohibited.

Disassembly, repairs and modifications must not be conducted by people other than qualified repair technicians. Failure to follow this instruction may cause electrocution, fire or abnormal operation, leading to injury.



Ground items properly.

Failure to follow this instruction may cause electric shock if there is a malfunction or ground leakage. Contact a professional for grounding. (if an extension power cable is used)



Turn the power off if this product is not going to be used for a long period of time, or during maintenance.

Always turn the power off after work, if this product is not going to be used for a long period of time, or during maintenance. Failure to follow this instruction may cause ground leakage fires, electric shock or burns due to insulation deterioration.



Do not operate the foot switch while seated on the stool.

When operating the seat for shampooing, do not operate the foot switch while still seated on the stool. When operating the seat, first move in front of the foot switch and check that there are no objects obstructing movement of the seat.



Turn the power off at the switchboard if this product is not going to be used for a long period of time.

Turn the power off at the switchboard if this product is not going to be used for a long period of time, such as when the shop is closed. Failure to follow this instruction may cause ground leakage fires, electric shock or burns due to insulation deterioration.



Be careful not to perform incorrect foot switch operations

Take care not to accidentally operate the foot switch while shampooing, or to trip over the foot switch or base plate. Failure to follow this instruction may cause the unit to operate suddenly, leading to injury.



Remove the power plug if this product is not going to be used for a long period of time. (When the power plug is plugged outlet outside the main body)

Remove the power plug from the power outlet if this product is not going to be used for a long period of time, such as after work or when the shop is closed. Dust and moisture may cause faulty insulation, leading to a ground leakage fire.



Do not lean on the basin when working between the seat and basin.

Leaning on the basin may cause the basin to fall over. Also, coloring dyes on the neck cushion or basin may stain the user's clothes.



Adhere to the following when handling power cables. (When the power plug is plugged outlet outside the main body)

- When removing the power plug, hold the power plug, instead of the cable itself, and pull to remove.
- Do not use power cables or power plugs if they are damaged, or if the connection with the power outlet is loose. Failure to follow this instruction may cause electric shock or a fire.



Take care not to step on the foot switch when working between the seat and unit.

Take care not to step on the foot switch when working between the seat and basin. Accidentally stepping on the foot switch may cause the backrest to recline, trapping the user. If the user thinks that they may become trapped, follow the steps provided in "Description of backrest anti-trap mechanism (page 23)" to move out from between the backrest and the basin.



Adhere to the following when handling power plugs.

- Ensure that this product is the only appliance connected to the power outlet.
- Insert the power plug into the power outlet all the way to the base.



Always remove the power plug during maintenance. (When the power plug is plugged outlet outside the main body)

Remove the power plug from the power outlet during maintenance. Do not remove or insert the power plug with wet hands. Failure to follow this instruction may cause electric shock or burns.



Warning



Periodically remove dust from the power plug.

(When the power plug is plugged outlet outside the main body)

Periodically remove any dust or dirt from the power plug and power outlet. Moisture may lead to faulty insulation, and cause a fire.



Return the water temperature to an appropriate position after using hot water.

Return the water temperature to an appropriate position after using hot water.

Continuing to use the hot water in the hot position may cause burns.



Adjust the water temperature while checking the temperature by hand.

When adjusting the temperature of the water, reduce the volume of water, point the shower head away from the customer and check the temperature by hand. Take care when doing so, as hot water may come out of the shower head.



Do not spray areas other than the basin with water.

- Take care not to spray areas other than the basin with water. If water does come in contact with areas other than the basin, wipe them dry as soon as possible. Water entering the main body may cause malfunctions or a ground leakage.
- Take care not to allow water to drip on the floor. If water does drip on the floor, wipe it dry as soon as possible. Failure to follow this instruction may damage the floor, or cause water leakage.



CAUTION
Hot water

Do not use hot water (boiling water) of 140°F or higher.

Using hot water of 140°F or higher may deform or damage the basin, shower head and water stop handle.



Take care of the space between the seat and wall at the front.

When lifting or lowering the seat, check that there is sufficient space between the customer's feet and wall in front. If the customer's feet hit the wall, it may cause injury.

<Fixed legrest Type>

The seat slides forward approximately 2.6" when being lowered.



<Movable legrest Type>

The seat slides forward approximately 1.2" when being lifted.



Adhere to the following when operating the seat.

When operating the seat, check and make sure that there are no people or objects around the seat. The seat may hit them when operating, leading to injury.

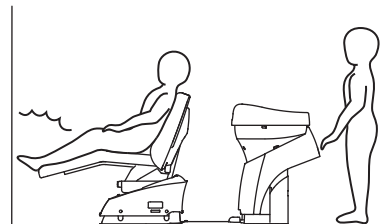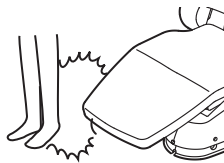

When operating the seat, always check and make sure that there are no people or objects within the operating area.

They may become trapped, causing injury, or damage the seat.



Precautions during operation

Do not take your eyes off the customer while the auto is in operation. When activating the automatic operation, make sure that the customer is sitting in the correct posture and position, and do not take your eyes off the customer during operation. In particular, if an elderly customer or a small child is sitting in the seat, stop operation immediately if you notice anything unusual, as the change in posture during the automatic operation may cause unexpected strain.



Caution



Do not use this product with the cover broken.

Replace the cover if it breaks. Continuing to use this product with a broken cover may cause a malfunctions or an accident.



Do not use outdoors.

This product is designed for indoor use. Do not install this product outdoors or within a vehicle. Be sure to only use this product inside a barber or hair salon. Failure to follow this instruction may cause malfunctions or damage to the main body.




Do not use this product if the coating is peeling.

Replace the water stop handle (tap cover) if the coating is peeling. Continuing to use this product when the coating is peeling may cause injury.




Do not subject the unit to shocks.

Do not subject the unit to shocks. Failure to follow this instruction may cause damage, leading to injury.

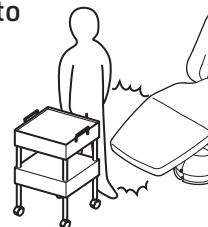

Support the customer's head by hand when lowering or lifting the backrest.

Support the customer's head by hand when lowering or lifting the backrest. Failure to follow this instruction may cause the customer to hit their head on the basin.

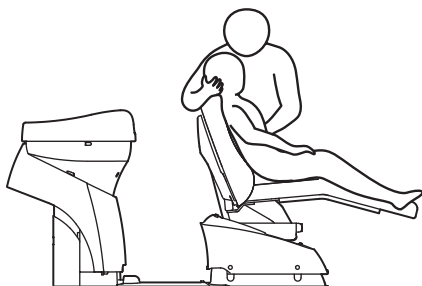

Never use this product lying face down.

Failure to follow this instruction may cause injury to the customer, or damage to the seat.



Do not turn the water fully on with the shower head in the shower head holder.

Failure to follow this instruction may cause water to spill out of the basin, covering the customer with water. When turning the water on with the shower head in the shower head holder, check the surrounding area and turn the tap slowly.



Take care of the step between the base plate and the floor.

There is an approximately 0.2" step between the base plate and the floor. Take care not to hit the step when walking. The user may trip, causing injury.




Do not place objects on this product.

Only allow people to sit on the seat. Placing heavy objects on the seat may cause deformation and damage, leading to injury.



Take care when handling the shower hose.

- When using the basin, check that the shower hose is not trapped around feet or under the stool. Failure to follow this instruction may cause damage to the basin.
- Do not step over the shower hose to use it. Failure to follow this instruction may cause the shower hose to become caught on the basin, leading to injury.

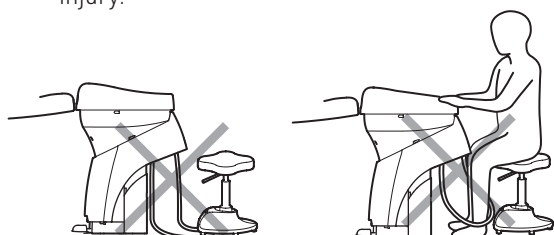

Do not drink the hot water.

This product is designed for washing hair. Do not drink the hot water. The water quality may cause diarrhea or stomach pain.



Only use this product for its intended purpose and do not use it for non-hairdressing work.

This product is an industrial product designed for barbers and hair salons. Only use this product for its intended purpose and do not use it for non-hairdressing work.



Do not use the product in a place where freezing is expected.

Failure to take this precaution may result in breakage of parts, thus resulting in water leaks. Repair of breakage due to freezing will result in fees being charged even during the warranty period. If freezing is expected, maintain the room temperature at 32°F or above by using a heater.

Precautions for Use



Caution



Do not wipe with chemicals or apply heat.

Failure to follow this instruction may cause deformation or discoloration. If chemicals spill on to the leather or covers, wipe them dry as soon as possible.



Close the hundle firmly.

After use or shampooing is complete, turn the hundle firmly in a clockwise direction and turn the water off completely. Failure to turn the water off completely may cause water leakage.



Do not use strongly acidic or strongly alkaline cleaning solvents.


Do not use cleaning solvents containing mainly caustic soda (NaOH) or caustic potash (KOH) to clean the drain pipe. Never pour thinners, alcohol, nail polish remover, gasoline or kerosene into the drain. Failure to follow this instruction may cause damage to the drain hose.



Do not cover the drain outlet when this product is not going to be used.

Do not cover the drain outlet with the drain cap, towel, or shampoo cloth after finishing the work. Water may overflow the basin when water is improperly discharged or a small amount of hot water is discharged due to an increase in water pressure during the night, resulting in water leaks.

Be sure to remove the trap cover from the drain outlet when the product is not in use.

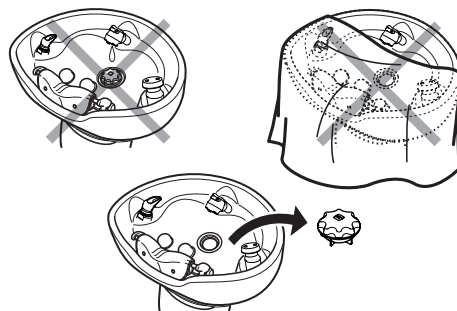

Operate the power switch by hand.

Always operate the power switch by hand. Failure to follow this instruction may damage the chair.



Clean the hair catcher regularly.

Clean the hair catcher as regularly as possible. Continuing to use the hair catcher without cleaning it may cause the drain to become blocked with hair, leading to water overflowing and unhygienic conditions. Try to clean the hair catcher after each shampoo.



Return the shower head to the shower head holder so that the spray nozzle faces the basin.

Failure to follow this instruction may cause water to spill out of the basin or cover the customer with water.



Avoid direct sunlight or heat.

Avoid direct sunlight or heat. Failure to follow this instruction may cause discoloration or degradation of the leather.



Always wipe the floor clean if it is wet.

Wipe the floor as soon as possible if it is wet after shampooing. Failure to follow this instruction may damage the floor or cause degradation and malfunctions to parts in contact with the floor or the foot switch.



After use, wipe water away from all parts other than the basin.

Leaving the main body with water on it may cause damage, and make dirt difficult to remove.



Return the shower head to the shower head holder so that the spray nozzle faces the basin.

Failure to follow this instruction may cause water to spill out of the basin or splash on the customer with water.



Do not force the seat, backrest or legrest up.

Failure to follow this instruction may cause incorrect operation or malfunctions in the seat.



Do not leave the shower head immersed in water.

If pressure in the water pipes decreases due to repairs that follow water stoppages, the water in the basin may flow back through the shower head.




Caution



If chemicals spill on to this product, wipe them dry as soon as possible.

If chemicals such as hair dyes spill on to this product, wipe them dry as soon as possible. Failure to follow this instruction may cause discoloration, deterioration or deformation. Also, if chemicals spill on to the floor, wipe them dry as soon as possible.

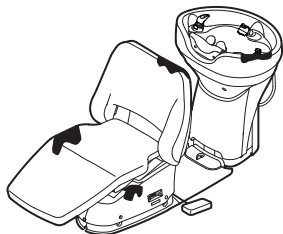

Do not apply steam directly to the leather.

When using the steamer to perform hair/scalp care and other work, do not apply the steam directly to the leather. Failure to follow this instruction may cause degradation of the upholstery.



Do not use a scourer.

Do not use a scourer to clean the shower head, shower head holder or covers. Using hard cleaning tools such as a scourer or a sponge with a scourer, metallic scouring pad or nylon scouring pad may cause scratches.



Always use the neck cushion.

Using this product without the neck cushion may apply unnecessary load to the customer's neck, causing injury. Always use the neck cushion.



Do not touch the hot water supply pipe or mixing pipe.

The hot water supply pipe or mixing pipe may become very hot. Do not touch the pipes directly.



Take care of the foot switch cable.

Take extra care so that the customer does not catch or kick the foot switch cable when they get on or off this product. Failure to follow this instruction may cause the customer to fall over, or cause damage to the unit.



Do not drop heavy objects on to the basin.

Do not place or drop heavy objects on to the basin. Failure to follow this instruction may cause damage such as scratches or cracks to the basin.




Do not hit the unit with objects.

Do not hit the unit with hard objects. Failure to follow this instruction may cause deformation or damage to the unit.




Do not hit the cover with objects, or kick the cover.

Failure to follow this instruction may cause malfunctions or accidents, leading to damage to the main body.

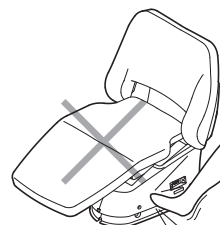

Do not wet the shower head bracket with water.

Do not wet the shower head holder with water. Failure to follow this instruction may cause water leaks.

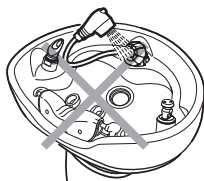

Users should take care to be aware of their surroundings when working between the seat and basin.

Carrying metallic objects such as scissors while working may scratch the basin.



Set the water temperature for this product to 175°F or less.

Failure to follow this instruction may cause malfunctions or damage in parts such as the stop valve, check valve, flexible pipe and thermostat water valve.



Be careful of use.

The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.



Be careful of use.

Children shall not play with the appliance.



Be careful of use.

Cleaning and user maintenance shall not be made by children without supervision.

Precautions for Handling



Handling precautions

● Stains caused by clothing dyes





The synthetic leather of this product may become stained by direct contact with clothes or belts. If there is stains, wipe clean as quickly as possible with a 10% detergent solution diluted using water to prevent permanent staining.

● Take care of deformation or stains due to direct contact




- Direct contact with other objects such as plastic products, painted items, solvents or adhesive tape may cause changes to the surface luster, cracking, deformation or peeling.
- Direct contact with newspaper or printed paper may cause stains.
- Direct contact with items of clothing such as printed images of t-shirts, or jeans may cause discoloration of the synthetic leather of this product.
- Direct contact with solvents such as benzene, nail polish remover, alcohol, oil (including beauty treatment oils) may cause discoloration, melting of the surface, elution of the plasticizing agent, changes to surface luster, hardening/softening or peeling.
- Using bleach or bleached sheets may cause changes to surface luster or discoloration.
- Installing this product next to sources of excess heat such as irons or heaters may cause deformation or discoloration.
- Protect this product from direct sunlight by installing curtains. Failure to follow this instruction may cause changes, shrinking, discoloration or fading of the leather surface.
- Placing heavy objects for a long period of time may leave an imprint or wrinkles on the synthetic leather that cannot be removed.

- Take care when handling products with NL1 upholstery (white), as there may be difficulty in removing stains from the upholstery or stitching.

Position of Warning Labels

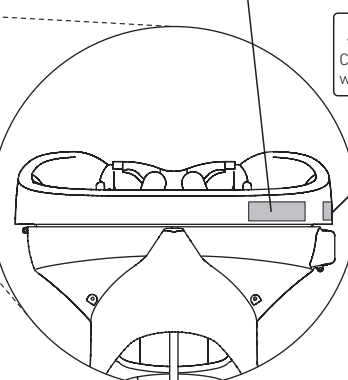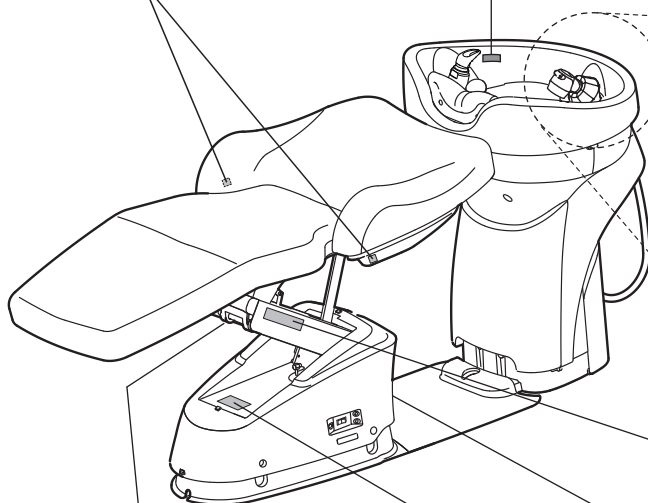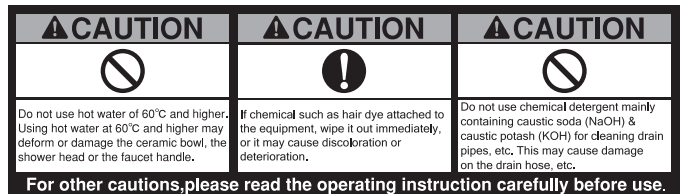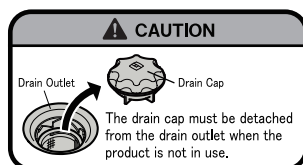

WARNING 1A0SK2A0
Cancer and Reproductive Harm -
www.P65Warnings.ca.gov.
(U.S.A. only)

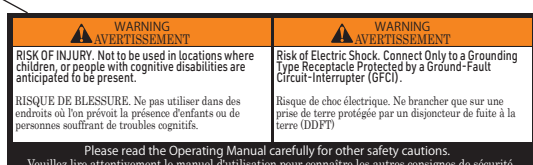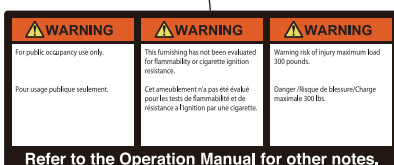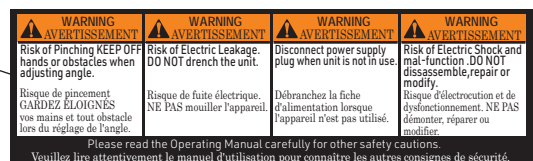


Precautions on Resin (Plated) Parts



- Resin plating is adopted for part of the water stop handle.
- Plating is a thin, hard metal film applied to the surface that may crack or peel due to corrosion or aged deterioration.
- Flaws or cracks may occur on the plated surface due to impacts from falling objects.
- Flaws or cracks may occur on the plated surface when a hard object hits the surface.
- Peeling of the plating may occur from flaws or cracks on the plated surface.

Caution

Check that there are no flaws, cracks, or peeling of the plated surface of the handle before using the product. If peeling is observed, immediately stop using the product and contact your closest dealer. Continued operation may result in injuries.

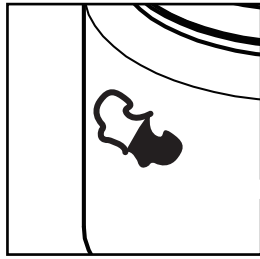

Example of Peeling of the Plated Surface

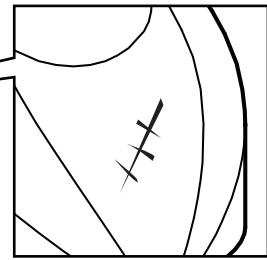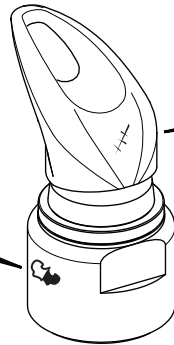



Example of Flaws on the Plated Surface

Name of Parts

■ Main body



SUITE

NOBLE

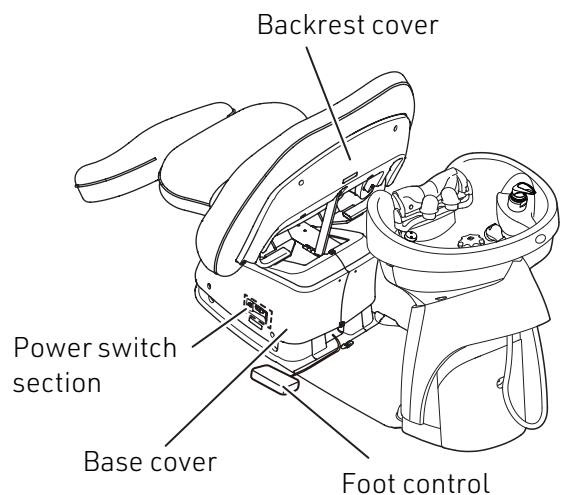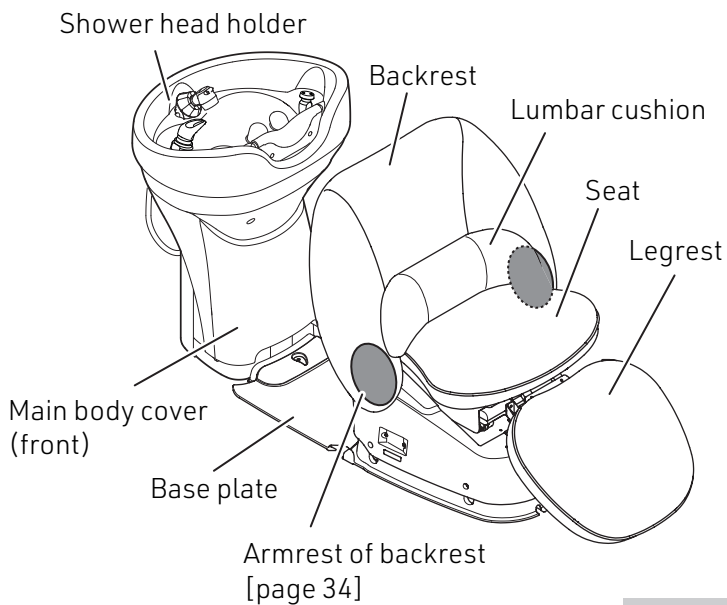


The external covers are made of plastic. There may be streaked lines or different shades. However, these are a result of the external cover manufacturing process and not indicative of a defective product.


ESPOIR

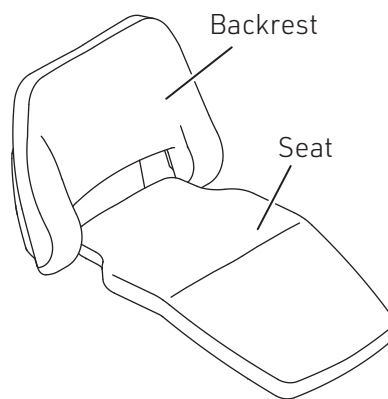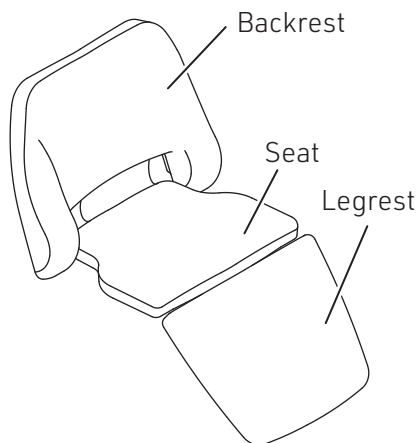

■ Power switch section

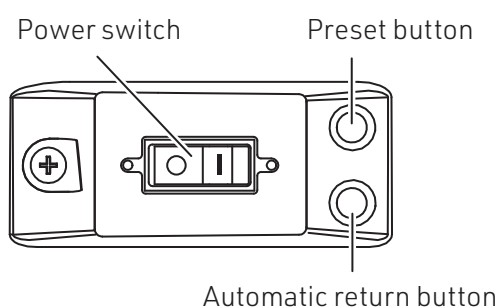


■ Foot control

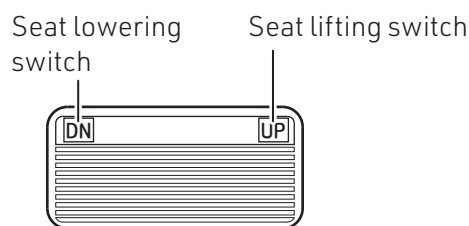


■ Basin body

For Back wash (same as YUME basin)

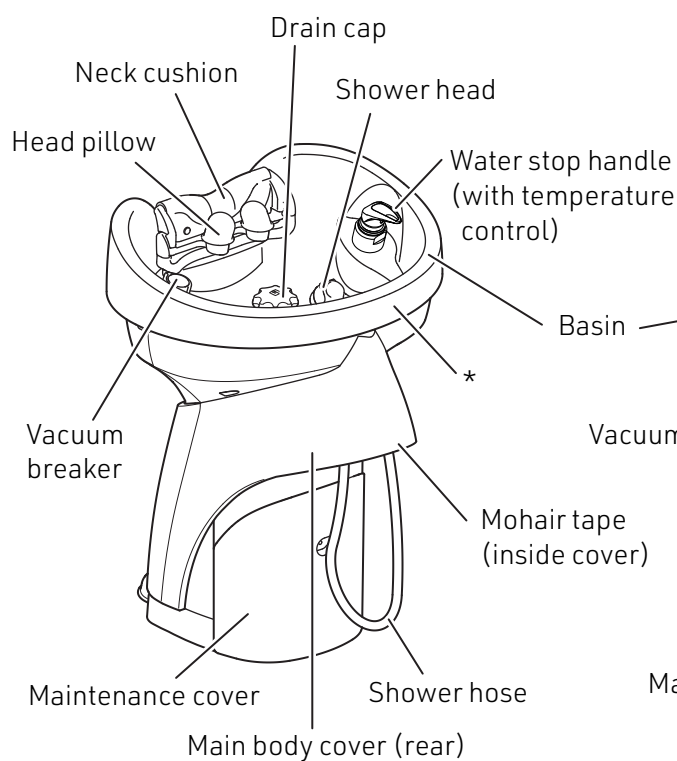

For Side wash basin

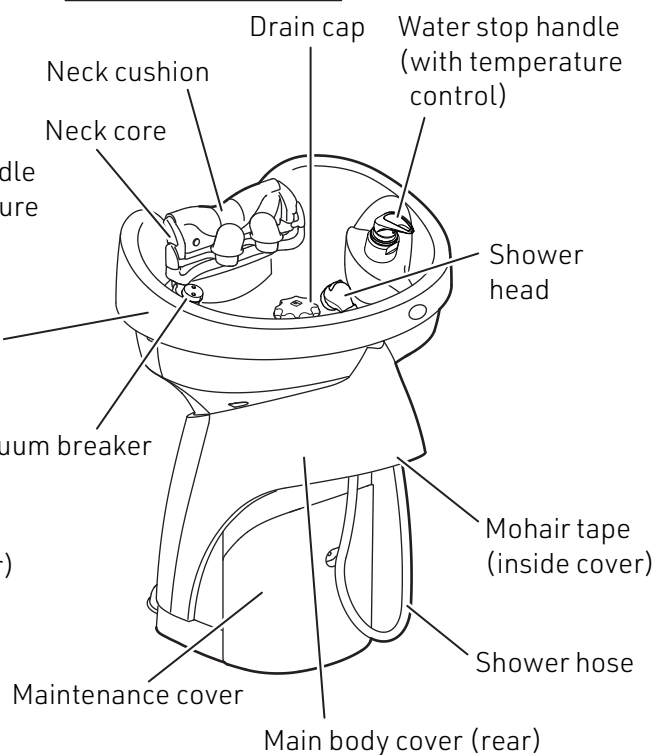


The back wash (YUME) basin has bumps in the area marked with the * symbol. However, these are a feature of the ceramic basin manufacturing process and not indicative of a defective product.

Accessories

<Same parts for back wash (same as YUME basin)>

- Mohair tape for replacement...1

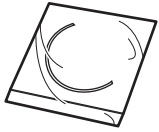


- Hair catcher...1




- Sponge...1




- Drain cap...1

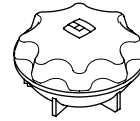

- Neck cushion...1

 

- Head pillow...1

 

- Installation Instructions...1
- Operating Instructions (this document)...1
- YUME SPA Technical Manual...1

Precaution for Basin

This product uses pottery for the basin.

Note in advance that bends and deformations cannot be avoided depending on the product in molding of the neck position and the pottery, and there are slight variations in height, shape, and weight.

In addition, because of the nature of pottery, pouring hot water in a pottery part may result in a sudden expansion of that part, causing cracks in the surface.

Do NOT pour hot water in the pottery. Failure to follow this instruction may damage to the pottery, causing injury, or cause water to enter the upper unit due to a water leak, resulting in formation of rust.

Before Using This Product

- The back wash (YUME) basin is a shampooing product designed for performing back shampooing*¹ or hair/scalp care.
- The back approach*² to this product is designed for performing shampooing while seated.
For performing shampooing more comfortably, the use of a ESPOIR stool (sold separately) is recommended.
- Check that all accessories have been attached properly.
- Please note that the gap between covers may vary slightly from product to product.
- There is a slight gap between the basin and the cover. This is because the basin is made of ceramic, and is not indicative of defective quality.
- Please note that the gap between the backrest and the basin when the backrest is reclined may vary slightly from product to product.
- Please note that the neck position and height may vary slightly from product to product as the basin is made of ceramic material.

*1 Back shampooing: the user sits behind the basin and performs shampooing from the back (back position).



*2 Back approach: the user performs hair/scalp care and the like from behind the basin.

Preparations

<Unit>

■ Attach neck cushion

- (1) Align the neck cushion as shown in the illustration, and fit the neck cushion on the attachment fittings. (Make sure the attachment direction is correct.)

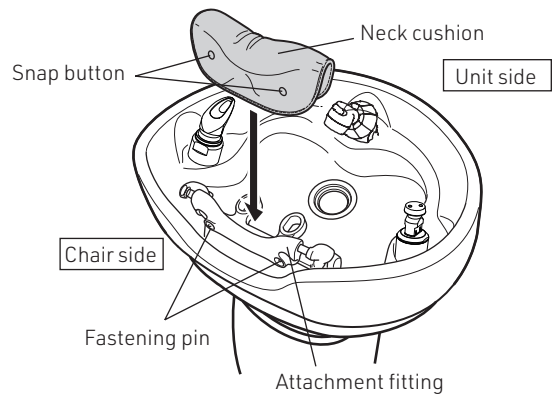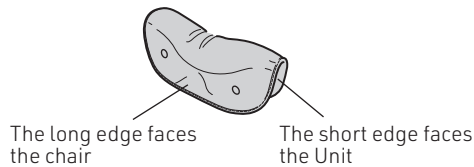


- (2) Attach the chair side snap buttons of the neck cushion to the fastening pins on the attachment fittings.



The fastening pins can be removed.
Take care not to lose the fastening pins.

- (3) Adjust the shape of the neck cushion to fix it to the attachment fittings, and attach the basin side snap buttons of the neck cushion to the fastening pins.

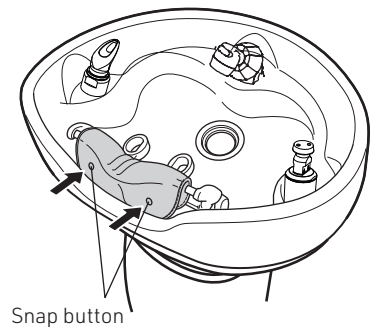

■ Remove neck cushion

Hold the snap buttons (4 locations) when removing the neck cushion.





Caution

Applying excessive force to remove the neck cushion may damage the parts.

■ Attach head pillow

Align the direction of the head pillow as shown in the illustration, and insert.

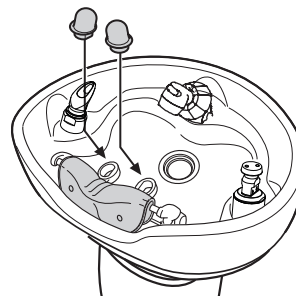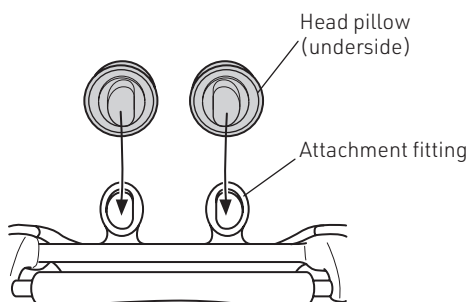

Note

The neck cushion and head pillow are consumable supplies.
Replace them if they are extremely dirty or the surface has deteriorated. (available at additional cost)

Preparations



■ Removing the cover

- 1 Turn the cover counterclockwise.

Turn the cover around 5 degrees.

- 2 Pinch the front and back of the cover to deform and remove the catch.

【Image】

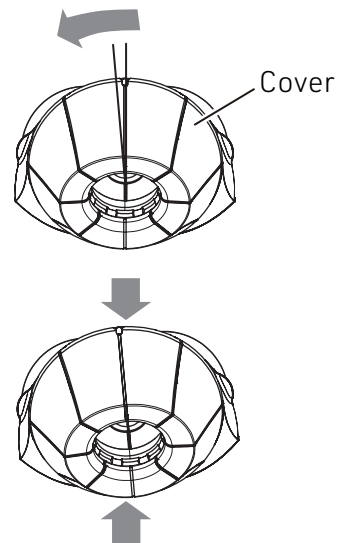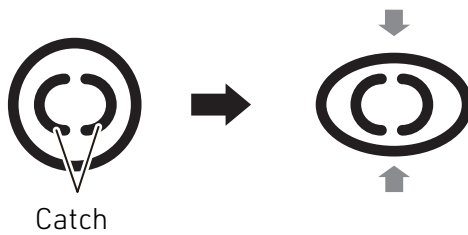

Caution

Do not remove the cover of bracket forcibly.
Failure to follow the instruction may cause damage the product.

■ Sponge installation


Attach the sponge to the shower hose.

Attach the sponge and sponge bracket to the shower hose, between the shower head bracket and the cover.





Caution

Ensure that the harder side of sponge is facing upwards.

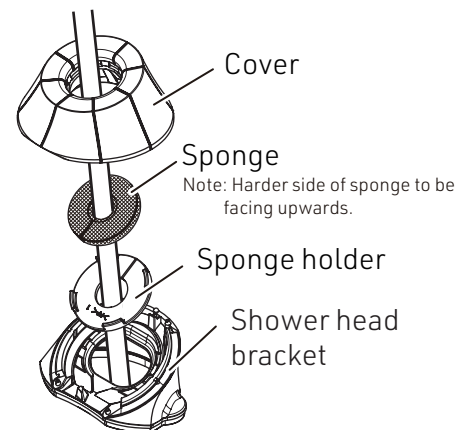

■ Installation of the cover

Align groove in the cover and protrusion of the holder until they snap into place.

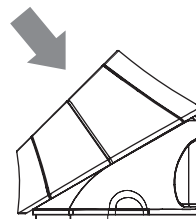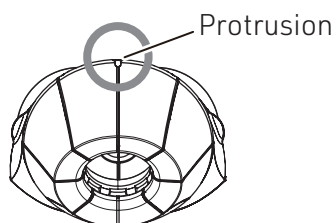

<Chair>

■ Power

- 1 Insert the power plug into a power outlet. (only when the power plug is plugged outlet outside the main body)
- 2 Turn the power on.
The power switch is on the left of the seat when viewed from the Unit.
The power will turn on if the power switch is pushed to the right (I symbol).
The power will turn off if pushed to the left (O symbol).



Warning


Always turn the power off with the power switch if this product is not going to be used for a long period of time, such as after work.



Warning

Turn the power off on the switchboard if this product is not going to be used for a long period of time, such as when the shop is closed. Failure to follow this instruction may cause a fire from a short circuit due to insulation deterioration.

Note Operate the power switch by hand.

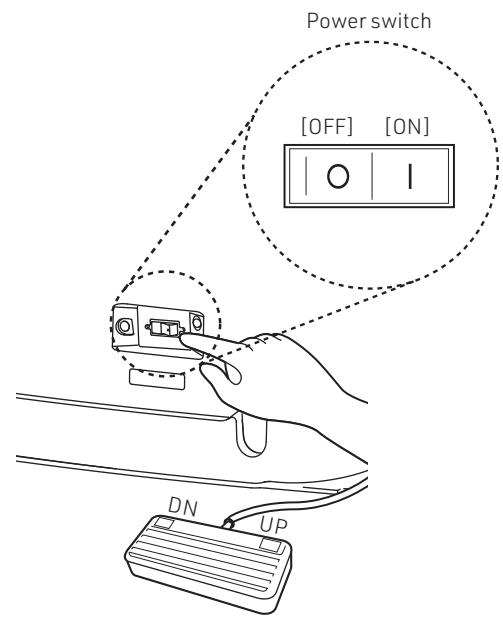

How to Use


Note

To confirm operation, a "beep" operating sound will be emitted when entering automatic mode.

* The operating sound cannot be turned off.

■ Basic operation

- 1 When lifting or lowering the seat (automatic mode)
 - (1) When lifting the seat to a preset position [preset]
 - Press the UP switch.
Holding down (pressing for one second or longer) the UP switch will make the unit "beep", then automatic mode will begin and the seat will lift automatically to the preset position.
 - (2) When lowering the seat (automatic return)
 - Press the DN (DOWN) switch.
Holding down (pressing for one second or longer) the DN switch will make the unit "beep", then automatic mode will begin and the seat will lower automatically to the initial position.

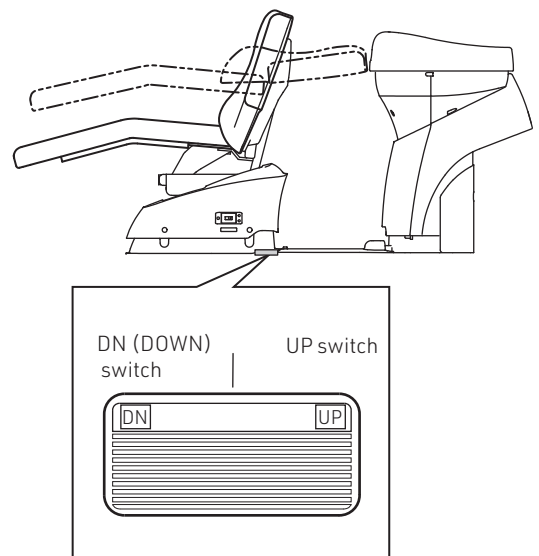

Note

The speed at which the seat lowers may differ depending on changes in the oil temperature due to ambient temperature, or the weight of the customer sitting on the seat.

Setting the preset position

The preset position is set by default at the factory so that the customer's position laying down is appropriate. The level of comfort may differ depending on the customer's frame or posture. If the preset position is to be adjusted to suit a certain customer, follow the instructions in "How to set the preset position (see page 16)", and adjust the preset position.

Note Once in automatic mode, the seat will move automatically even if the foot switch is released.


[How to set the preset position]

The standard preset position is adjusted in advance when the product is shipped from the factory.

To change the preset position, follow the procedure below to set the new position.

1. With the UP/DN (DOWN) switch, lift or lower the seat to the favorite height to set as the preset position.
2. Turn the power switch off.
3. Turn the power switch on while pressing the preset button located at the top right of the power switch. A "beep" setting sound will be emitted five seconds after turning the power switch on while pressing the preset button. [Setting complete]

- * The set position and the preset position may differ slightly depending on the characteristics of the seat itself and the environment it is being used in. After the setting is complete, use the auto return function to lower the seat to its initial position, press the preset button and check that the seat has been lifted to the set position.
- * The auto return button is used when repairing the seat. Be sure that customers do not press the auto return button, as this may alter the settings.
- * The preset button and auto return button are not operating switches. The seat will not move even if these buttons are pressed.

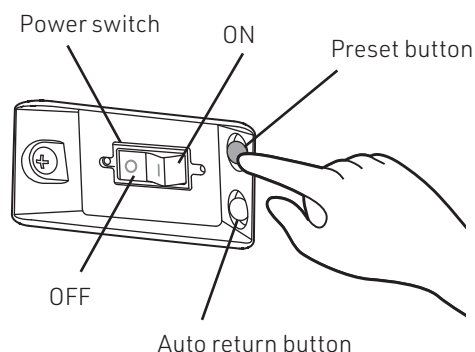

2 When adjusting the height of the seat (manual mode)

(1) Press the DN (DOWN) switch briefly (pressing for one second or less) to lower the seat slightly.

(2) Press the UP switch briefly (pressing for one second or less) to lift the seat slightly.

* Be aware that pressing the switch for one second or longer will enter automatic mode.

* The seat cannot be lifted higher than the preset position set when the product is shipped from the factory.

3 Automatic mode cancellation function

To stop the seat moving in the automatic mode, press the UP or DN (DOWN) switch when the seat is moving automatically. This will stop the seat from lifting or lowering.

When lifting or lowering the seat, check and make sure that there are no people or obstructions near the seat. Failure to follow this instruction may cause injury, or damage the seat.



Warning

- Make sure that there are no people or objects under the Chair or Unit. In particular, make sure to check for babies or children.
- Check that there are no people or objects between the seat and floor.
- When lifting or lowering the seat, check that there is sufficient space between the customer's feet and wall in front.
- Never touch the switch when working between the seat and basin. Failure to follow this instruction may cause the user to become trapped, leading to injury.

Using the Lumbar Cushion


* SUITE and NOBLE only

Place the Lumbar cushion in the location and orientation as show in the figure on the right before use.




Caution

The Lumbar cushion is subject to deformation and may enter between the seat and backrest. Every time the service has finished, return the lumbar cushion in the position as shown in the figure on the right.

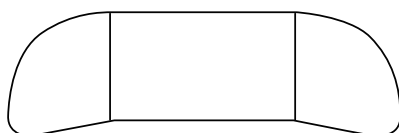


Front face

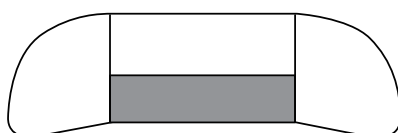

Back face



Lumbar cushion
(place it with its front face
oriented outwardly)

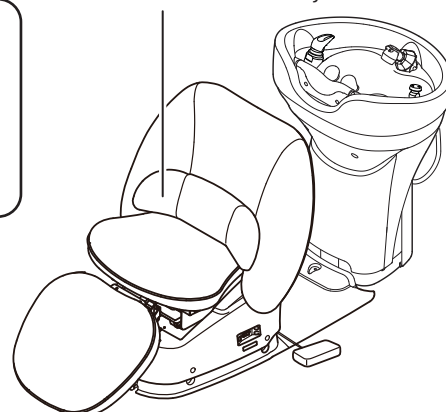

■ Using the Spa-shower head


Changing the selection switch position switches between Shower Mode and air Low Splash Foaming Mode.

Dual function shower head

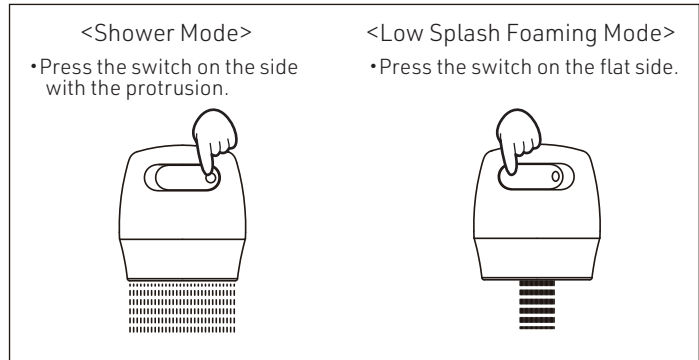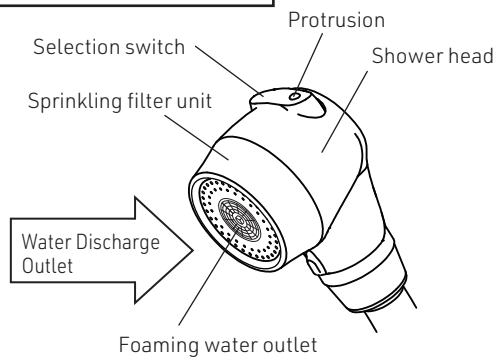

⚠ Caution

- Do not discharge a strong water stream when the shower head is in the shower head holder. Failure to take this precaution may result in system failure due to spilled water or damage to the floor.
- After using the shower head, be sure to return the shower head to the shower head bracket after use so that the sprinkling filter unit is pointed toward the basin.

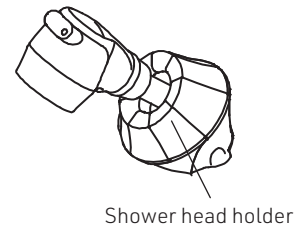


■ Adjusting the volume of water

the amount of hot water increases by pulling up the water stop handle.



A full up of the handle will output the maximum amount.

A full down of the handle will stop the water.

< Output the water >

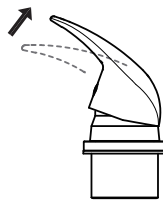

< Close the water >

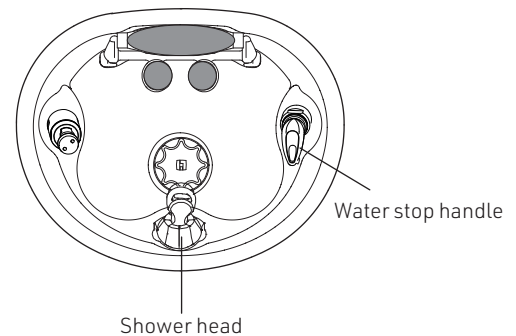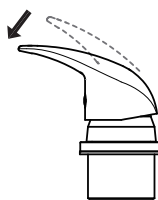

⚠ Caution

- When the Unit is not being used, pull down the water stop handle firmly full to close the water off properly. Failure to do this may cause water leakage.
- After shampooing, do not cover the drain with the drain cap, towel, or shampoo cape, as hot water may accidentally come out or accidentally trickle due to an increase in water pressure at night. This may cause water to spill from the basin, leading to water leakage.
- If the drainage become sluggish, the drainpipe may be clogged with dirt. Discontinue to use and contact with your closest dealer.
- Return the handle to an appropriate position after use. Continuing to use the hot water with the handle in the hot position may cause burns.
- Operate the water stop handle only after removing metallic objects, such as rings and wristwatches. Failure to take this precaution may result in contact between the metal and the water stop handle resulting in flaws or cracks on the plated surface and thereby causing peeling of the plating.
- Before using the product, check that there are no flaws, cracks, or peeling of the plated surface of the water stop handle. If the plating is peeled off, immediately stop using the product and contact your closest dealer. Continued operation may result in personal injury.

Note


- You may hear a noise inside product depending on the environment or conditions that it is used in. This sound is due to water flowing fast through pipes as a result of high water pressure or water volume control, and is not indicative of a defective product. This gushing sound can be reduced by adjusting the water pressure.
- Depending on the environment or condition that it is used in. This is due to deterioration of gasket of movable parts or a lack of grease as a result of aging. Replacement of the gasket or other parts, or a recoating of grease is required.

■ Adjusting the water temperature

- 1 Turn the water stop handle to set the temperature to an appropriate level. Turning the water stop handle toward left (counterclockwise) will make the water hotter, and turning it toward right (clockwise) will make it colder.

Caution

When adjusting the water temperature, reduce the volume of water, point the shower head away from the customer and check the temperature by hand. Take care when doing so, as hot water may come out of the shower head.

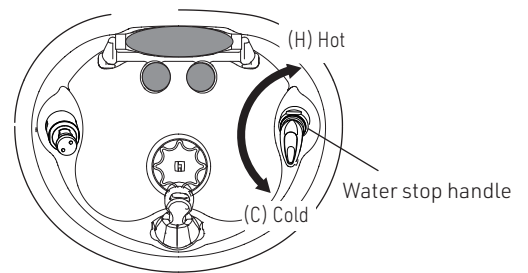

Caution


- Return the handle to an appropriate position after use. Continuing to use the hot water with the handle in the hot position may cause burns.
- Operate the water stop handle only after removing metallic objects, such as rings and wristwatches. Failure to take this precaution may result in contact between the metal and the water stop handle resulting in flaws or cracks on the plated surface and thereby causing peeling of the plating.
- Before using the product, check that there are no flaws, cracks, or peeling of the plated surface of the water stop handle. If the plating is peeled off, immediately stop using the product and contact your closest dealer. Continued operation may result in personal injury.

■ To fill up basin with hot water


To accumulate hot water for emulsification of hair color, rotate the drain cap in the clockwise direction to close the drain outlet. The amount of water should be below the level shown by the dotted line in the illustration on the below (just below the shower hose slot).

When water accumulates and exceeds the dotted line, water may overflow from the shower hose slot.

To drain the accumulated water, rotate the drain cap in the counterclockwise direction to open the drain outlet.

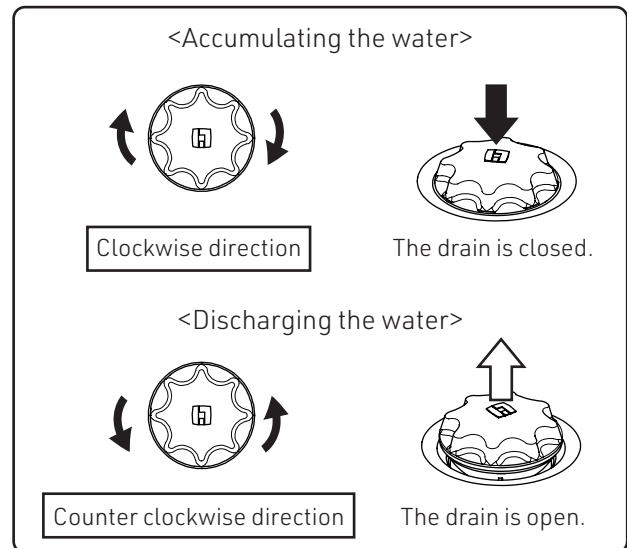


<For rear basin>

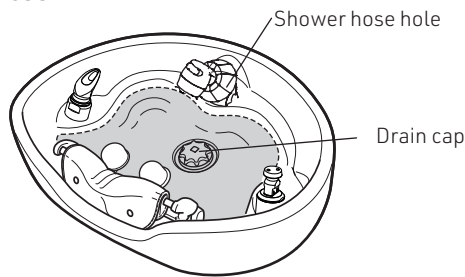

⚠ Caution

The drain cap must be detached from the drain outlet when the product is not in use. If the drain is not detached, the drain may accidentally close, and the water may overflow the basin from the failure to notice water discharge, thus resulting in water leaks.

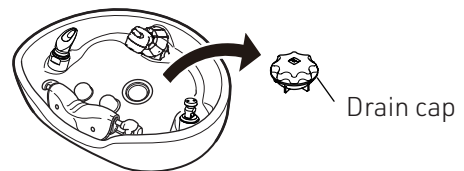

⚠ Caution

Do not leave the showerhead in the water. Water may flow back when the water pressure in the water pipe decreases during a water outage. When the drainage speed slows, there is a possibility that dust and dirt may have clogged the drainpipe.


Note

The amount of accumulated hot water may decrease slightly in an amount that does not affect use. A small amount of water may flow out, which does not affect use. If the decreasing level is significant, the gasket of the drain cap may have deteriorated or become worn. Replace the drain cap. (Available at additional cost.)

Guiding Customers

<When shampooing>

- 1 Check that the seat has returned to its initial position.
Follow the procedure below to return the seat to its initial position.
 - Holding down (pressing for one second or longer) the DN (DOWN) switch will make the unit "beep", then automatic mode will begin and the seat will return to the initial position.

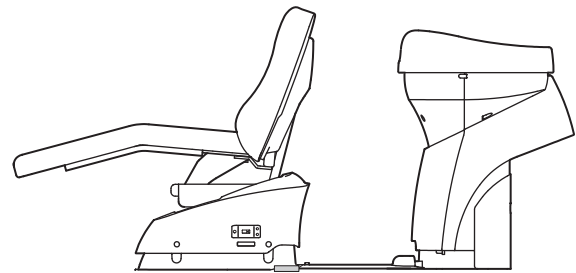

Initial position

Warning

When lifting or lowering the seat, check and make sure that there are no people or obstructions near the seat. Failure to follow this instruction may cause injury, or damage the seat.

- Make sure that there are no people or objects under the chair or Unit. In particular, make sure to check for babies or children.
- Check that there are no people or objects between the seat and floor.
- When lifting or lowering the seat, check that there is sufficient space between the customer's feet and wall in front.
- Never touch the switch when working between the seat and basin. Failure to follow this instruction may cause the user to become trapped, leading to injury.

Caution

Always check that the seat has returned to its initial position when guiding customers to. Sitting on and getting up from the seat in its lifted position may damage the seat, or cause injury.


- 2 Instruct the customer to sit on the seat from the side.
Next, instruct them to face the front, and sit back in the seat.



If customer does not sit back in the seat properly, their back may slide or they may not be able to be guided into the appropriate position.

Caution

- Make sure that customer does not sit on the end of the seat. Doing so may cause damage to the seat.
- Be sure to check that the customer's fingers, clothes or objects are not in the gap between the seat and backrest, and that their fingers are on their body or seat. Failure to follow this instruction may cause their fingers to get stuck, leading to injury.
- If the customer wears specially-processed clothes, the colors or patterns may transfer on to the seat.

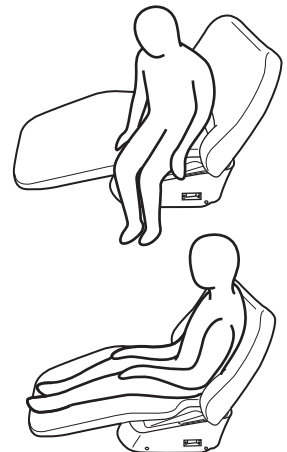

- 3 Put a shampoo cloth on the customer.
Recommended item: shampoo cloth without dropper

* (When using a shampoo cloth with a dropper, allow the dropper to hang in the gap between the basin and backrest.)

- 4 Holding down (pressing for one second or longer) the UP switch will make the unit "beep", then automatic mode will begin to guide the customer to the fully-reclined position.
Support the customer's head and place it gently onto the neck cushion.

Warning

When lifting or lowering the seat, check and make sure that there are no people or obstructions near the seat. Failure to follow this instruction may cause injury, or damage the seat.


- Make sure that there are no people or objects under the chair or Unit. In particular, make sure to check for babies or children.
- Check that there are no people or objects between the seat and floor.
- When lifting or lowering the seat, check that there is sufficient space between the customer's feet and wall in front.
- Never touch the switch when working between the seat and basin. Failure to follow this instruction may cause the user to become trapped, leading to injury.

Caution

Support the customer's head by hand when lowering the backrest.
Failure to follow this instruction may cause the customer to hit its head on the basin.

- 5 Check that the customer's face is in a horizontal position.
If their face is not in a horizontal position, instruct the customer to slide forward or backward and make minor adjustments.

<For Back wash (same as YUME basin)>

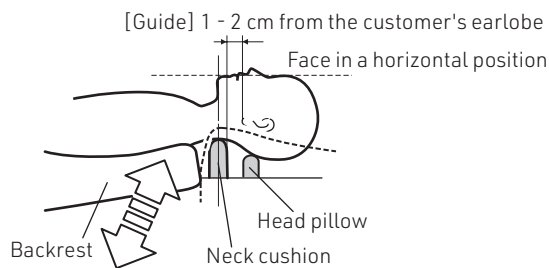

- 6 If necessary, press the UP / DN (DOWN) switch briefly (pressing for one second or shorter) to adjust the height of the backrest.

- Note** When making adjustments, the backrest moves...
- up toward the basin when the UP switch is pressed briefly.
 - down away from the basin when the DN (down) switch is pressed briefly.

- 7 Provide a Shampoo service etc.

Warning

Make sure that customers or other people do not touch the foot switch while shampooing.
Carelessly operating the switch may cause injury.

Shampooing style

<Back wash shampoo (seated position)>

The hair dresser sits behind to the basin and shampoos from the rear.





Warning

When operating the seat during shampooing, observe the following points while working.


- When lowering the seat, check that there are no people or objects under the chair. In particular, make sure to check for babies or children.
- When lifting or lowering the seat, check that there is sufficient space between the customer's feet and wall in front.

When performing back wash shampooing (seated position), use the specially-designed ESPOIR stool (sold separately).

<How to adjust the ESPOIR stool height>

- (1) Raise the lever while sitting down on the stool to release the lock.
- (2) Adjust the stool to the desired height.
- (3) Return the lever to lock the stool.

For more information, see the instruction manual supplied with the stool.

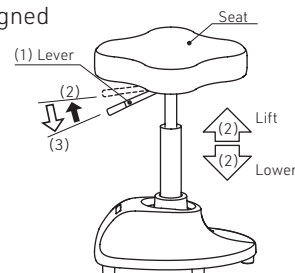

8

After shampooing is complete, return the seat to the initial position.

Check that there are no people or obstructions around the chair and Unit.

Holding down (pressing for one second or longer) the DN (DOWN) switch will make the unit "beep", then automatic mode will begin and the seat will return automatically to the initial position.

Support the customer's head when returning the seat to the initial position.




Warning

- After checking that the seat has returned to the initial position, guide the customer to stand up from the seat. Customers standing up from the seat while it is moving may result in injury, or cause damage to the main body.
- When lowering the seat, check that there are no people or objects under the chair. In particular, make sure to check for babies or children.
- When lifting or lowering the seat, check that there is sufficient space between the customer's feet and wall in front.



9

After use, wipe off any water on the product.

- Water on the main body cover or the outside surface of the basin

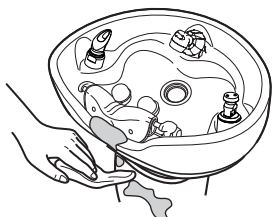

 - Water dripping onto the floor via the shower hose

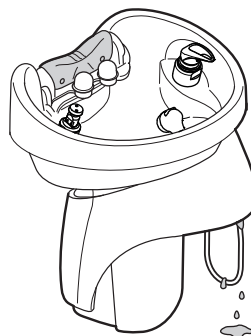

Caution

After use, wipe water away from all parts other than the basin. Leaving the unit with water on it may cause damage to the main body, and make dirt difficult to remove.

<Space between the backrest and basin>

This product allows the user to stand between the backrest and basin to apply hair color or hair treatment from behind the customer.



Caution


Observe the following points when standing between the backrest and basin.

- Do not lean against the basin when working.
Doing so may cause the basin to fall over. Hair color on the neck cushion or basin may stain the user's clothes.
- Be careful to accidentally operate the foot switch while working. If someone come close to get trapped, follow the steps provided in "Description of backrest anti-trap mechanism" to avoid danger.
- Be careful to items being carried while working.
Carrying metallic objects such as scissors while working may scratch the basin.

[Description of backrest anti-trap mechanism]

If the user come close to get trapped between the backrest and basin due to accidental operation of the foot switch, the backrest can be raised to allow the user to get out from the space.

If the backrest falls down while working between the seat and basin, get out from the space as soon as possible and cancel the automatic return function (for more information, see "Automatic mode cancellation function" on page 16).

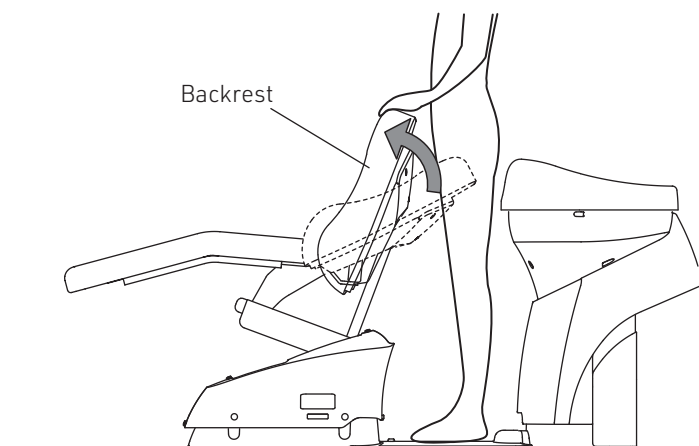


Maintenance



Caution

Never use volatile chemicals such as thinners, alcohol, gasoline or kerosene, cleaning products such as wax with a scourer, a sponge with a scourer, detergents that include organic solvents, acidic, alkaline or chlorine-based detergents, or scouring pads. Failure to follow this instruction may cause scratches or discoloration.

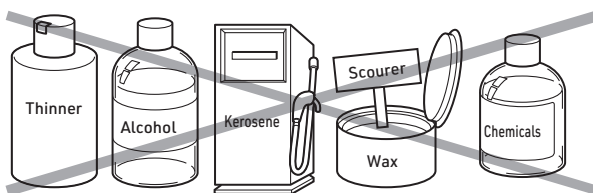


■ Hair catcher

Pull out the hair catcher located under the drain cap and remove any hair that has been caught. The hair catcher is a consumable supply. Replace the hair catcher if it is extremely dirty or the surface has deteriorated. (available at additional cost)



Caution

Clean the hair catcher as regularly as possible. Continuing to use the hair catcher without cleaning can cause the drain to become blocked with hair, leading to water overflowing and unhygienic conditions. Try to clean the hair catcher after each shampoo.

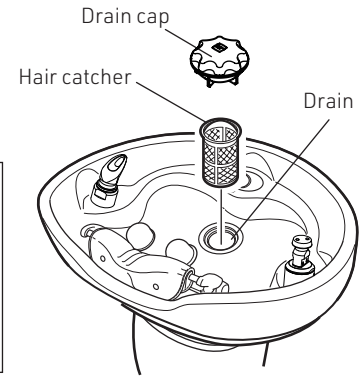

■ Neck cushion, head pillow

At the end of work each day, wash the neck cushion and head pillow with water, wipe them dry with a towel, and allow them to dry in the shade.

If they are extremely dirty, wash with detergent diluted with water, and rinse carefully with water.

The neck cushion and head pillow are consumable supplies. Replace them if they are extremely dirty or the surface has deteriorated.

(available at additional cost)



Caution

- If solvents drip onto the neck cushion or head pillow, rinse with water as soon as possible. Failure to follow this instruction may cause deformation or discoloration.
- Clean the neck cushion and head pillow every day. Leaving dirt uncleaned may cause them to get moldy.


■ Base plate

<Cleaning the inside of the base plate>


When cleaning the inside of the base plate, remove base plate F and clean inside.

* Water may pool within base plate F. Leaving water pooling within the base plate may lead to corrosion or degradation, so clean the inside of the base plate every day.

- 1 Remove the Knurled thumb screws (2).

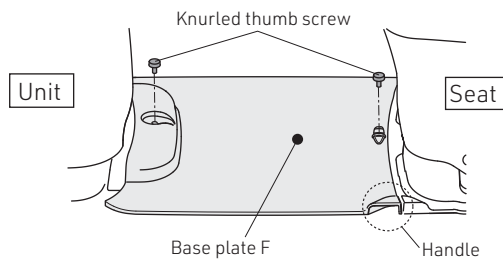

- 2 Use the handle to raise base plate F, remove it, and clean it.

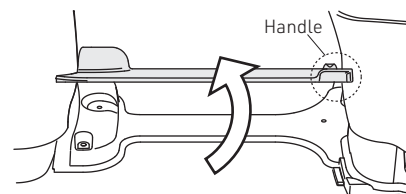

■ Basin

Wipe any dirt clean using detergent diluted with water.

If streaked scratches appear due to contact with metallic objects such as watch bands, rub the area with a nylon scourer.




Caution

Do not use a metallic scourer or sandpaper, as this will damage the basin.

<For Back wash (same as YUME basin)>

Carefully clean around the neck cushion and head pillow attachment tools with an item such as a cotton-tipped swab.

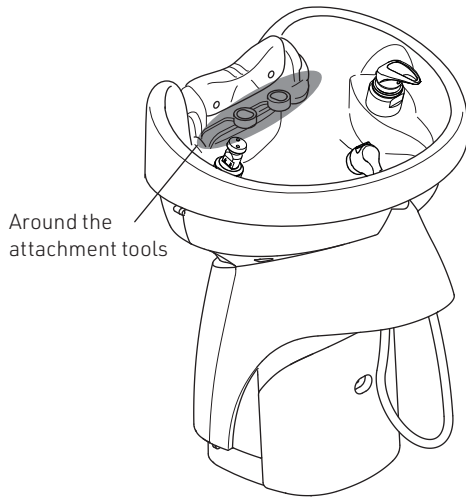

■ Synthetic leather parts

Clean the leather every day after work. Leaving dirt uncleaned may cause mold to grow.

- Wipe with a soft, dry cloth or a damp cloth. If the leather is extremely dirty, wipe with a 10% detergent solution diluted using water, followed by a damp cloth, then wipe dry.
- If leather is stained by clothes or belts, it should be wiped clean as quickly as possible with a 10% detergent solution diluted using water to avoid further staining by the plasticizing agent.
- Take care to remove all water after wiping with a damp cloth. Any water that remains may encourage hydrolysis. Do not use solvents or bleach.
- Do not use leather cleaner containing solvents or scourers. The surface may degrade, leading to changes in the texture and luster. If leather cleaners are to be used, first check that there is no discoloration by testing in an area that is not visible.



Caution

- Do not use the following items.
Volatile chemicals such as thinners, alcohol, benzene, nail polish remover, gasoline or kerosene, wax with a scourer, or a sponge with a scourer.
- Do not use brushes or scouring pads.
Do not use brushes or scouring pads when cleaning the upholstery. Failure to follow this instruction may cause scratches, and dirt may not be able to be removed.

■ Foot switch, cover

Wipe clean with a soft, dry cloth. If they are extremely dirty, wipe with detergent diluted with water, and always wipe them dry.



Caution

Never use volatile chemicals such as thinners, alcohol, nail polish remover, gasoline or kerosene, cleaning products such as wax with a scourer, a sponge with a scourer, detergents that include organic solvents, acidic, alkaline or chlorine-based detergents, or scouring pads. Failure to follow this instruction may cause scratches or discoloration.


■ Sponge

Sponge is consumable supply.

Replace the sponge if degradation causes rubbing sound when the hose is moving. (Available at additional cost)

Remove the cover from the bracket. [Page 15]

- Remove the sponge from the hose and wash with water.
- After washing the sponge with water, squeeze it like pressing with both hands.
- Clean the sponge every day.
- After cleaning the sponge, put it in the hose and put it back on the cover.

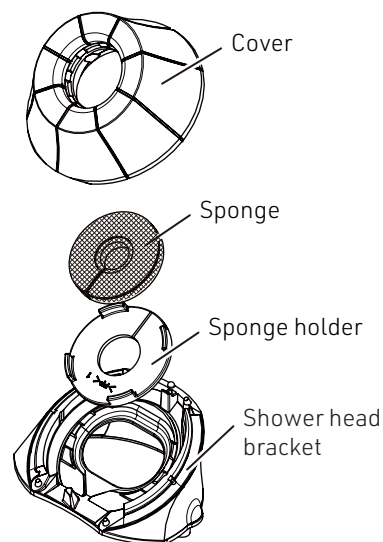

⚠ Caution

- Please keep the sponge in the net.
If the sponge protrudes from the end of the net, return it to the net.
- Do not twist the sponge as it may damage the parts.
- Be careful not to mistake the direction of the sponge.
The harder side is above.

■ Shower head holder cover


Replace the cover if it easily comes off repeatedly when the hose is moving. (Available at additional cost)

[Replacement method]


- 1 Remove the shower head.
(The figure on the right)
- 2 Remove the cover from the shower hose.

Push the socket to remove the cover.


- 3 Install a new cover.

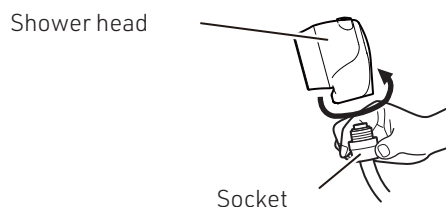

<Remove>

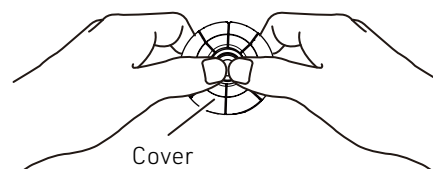

<Attachment>

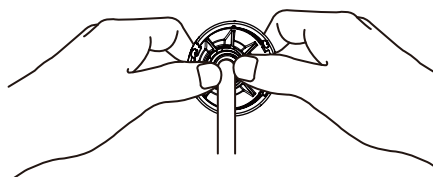

Tips for installation.

Put the socket into a plastic bag and push the cover to make it easier to enter.

■ Drain cap

Wash around the drain cap, and remove any hair or dirt from solvents.
The drain cap is a consumable supply.
If it is extremely dirty, remove the gasket from the drain cap, wash with detergent solution diluted using water, and rinse carefully with water.
Replace the gasket if degradation causes water to leak quickly when the basin is filled with water. (available at additional cost)



Caution


The drain cap must be detached from the drain outlet when the product is not in use. If the drain is not detached, the drain may accidentally close, and the water may overflow the basin from the failure to notice water discharge, thus resulting in water leaks.



The drain cap should be handled carefully. It may break if it is dropped.



The drain cap gasket is fixed on the drain cap. If you try to remove it forcibly, the gasket may be damaged and the water in the basin may decrease at a faster pace.

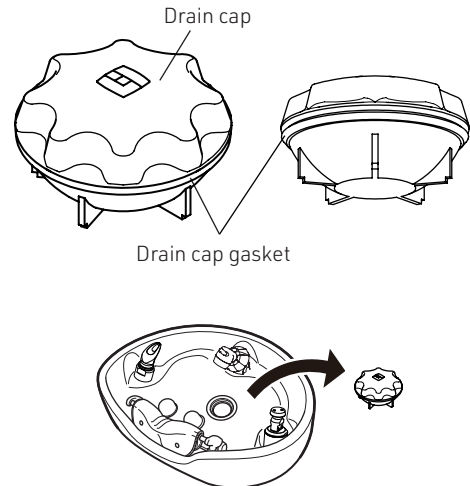


■ Shower head

<For Dual function shower head>

- 1 Rotate and detach the sprinkling filter unit and remove the three parts (sprinkling filter unit, foaming water outlet, and rubber gasket).
(※Do not detach the O-ring.)
- 2 Clean the sprinkling filter unit (with water).
 - Remove dirt, such as water stain in the shower holes on the sprinkling filter unit, with a toothbrush.
- 3 Clean the foaming water outlet with water.
 - Clean the unit once a month (as a general guide).
 - Remove dirt, such as water stain on the foaming water outlet, with a toothbrush.



The foaming water outlet should be rinsed with running water in the direction shown in the illustration below:

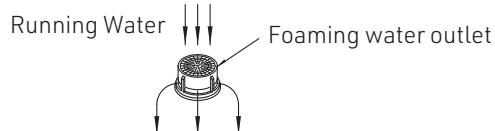

- 4 Reassemble the shower head.

<Assembling Procedures>

- (1) Insert the foaming water outlet and the rubber gasket in the sprinkling filter unit in this order.
- (2) Mount the sprinkling filter unit on the shower head main unit, while the water discharge side of the sprinkling filter unit facing down.

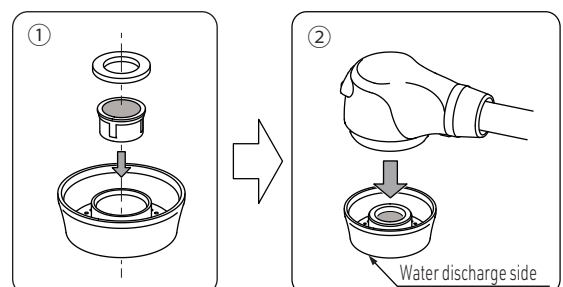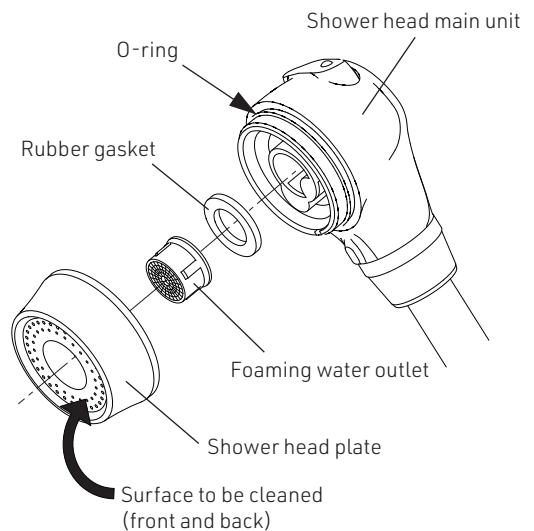

Daily Inspections


To ensure that this product can be used for a long period of time, follow the procedures outlined in "Procedures for Daily Inspections" on page 36 to 38 of this instruction.



Always inspect this product following the procedures outlined in "Procedures for Daily Inspections". Continuing to use this product without performing the daily inspections may cause malfunctions or accidents.

Before Requesting Repairs

If the following problems arise, conduct the checks outlined before requesting repairs.

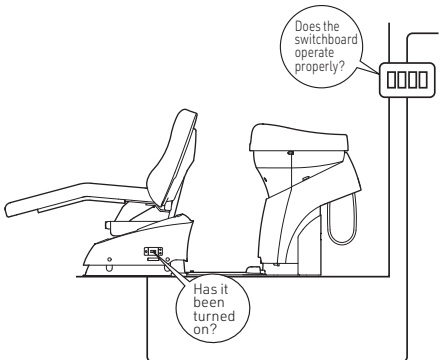Symptom	Check this	Solution
<p>! The seat, backrest or legrest does not →</p> 	<ul style="list-style-type: none"> • Is the power turned on? • Has the fuse or circuit breaker in the store's switchboard blown or tripped? • Has this product been used continuously for long periods of time? 	<ul style="list-style-type: none"> • Turn the power switch on. (see page 16) • Insert the power plug into a power outlet. (only if an extension cable is used) (see page 16) • Replace the fuse or turn the circuit breaker ON. <p>This is due to the overheat protection system operating. Leaving the product to stand for 10 minutes will make it return to normal.</p> <div> Overheat protection system Protective circuit that stops the motor if the product has been used continuously, to prevent overheating of the internal mechanisms. This product may be temporarily unresponsive when the overheat protection system has been activated. </div>
! There is no hot water. →	Are the stop valves in the pipes open?	Open the stop valves.
! There is a sound when the hot water →	Does the sound change if the taps are turned to adjust the volume of water?	Adjust the volume of water. (see page 18)
! The temperature of the hot water is →	Is the set temperature of the water boiler appropriate?	Adjust the set temperature of the water boiler to an
	Is the temperature set with the water stop handle appropriate?	Adjust the set temperature to an appropriate level using the water stop handle. (see page 18)
! The water does not drain well. →	Is hair blocked in the hair catcher?	Remove the hair trapped in the hair catcher. (see page 25)

If the product does not operate properly after checking and repairing the above points, stop using the product immediately.

Standard Duration of Use

The standard period of use of this product is seven years.

The standard period of use is "a guide for the standard period that this product can be used properly from a safety perspective, when conducting appropriate maintenance and inspections (including replacement of parts) for the standard usage conditions for each product.

This is not the same as the warranty period.

Consumable Supplies

The following parts are "consumable supplies" and wear, degradation, changes in external appearance and damage are expected.

Please note that repair or replacement of these parts is not covered by warranty, and a fee will be required.

(* The level and period of wear, degradation or damage may differ depending on the environment and conditions that the customer uses this product in)

Inspections or replacement of parts will be required if there is extensive wear, degradation or damage.

Consumable Parts

(The following parts are not covered by the warranty; the cost of replacement is your responsibility.)

- ☐ Neck cushion ☐ Head pillow ☐ Hair catcher ☐ Connection hose
- ☐ Sponge ☐ Shower head holder cover ☐ Mohair tape ☐ Various rubber gasket ☐ Shower hose
- ☐ Spa shower head foaming water part (foaming water outlet, rubber gasket) ☐ Lubricant (oil,grease,etc)

Furthermore, flaws, contamination, deterioration, and discoloration of the exterior parts below are not to be covered by the warranty.

- ☐ External parts
 - Covers, frames, and basin;
 - Drain cap
 - Upholstered parts (backrest, seat, armrest and back support cushion etc);
 - Other parts (shower head, shower head holder, etc.).

Disposing of This Product

When disposing of this product or replaced parts, adhere with current regulations and dispose of them appropriately.

After-sales Service

To request after-sales service, contact your local authorized Takara Belmont dealer.

Specifications

Part No.	Basin body	: AY-EXESYM* [Rear basin] (* Represents the variation of color.)		
	Seat body	: AY-SCESF* [ESPOIR Fixed legrest] : AY-SCESL* [ESPOIR Movable legrest] : AY-YMSI* [SUITE] (* Represents the variation of color.)		
	Seat	: AY-SUESBF* [ESPOIR Fixed legrest, Basic type seat specifications] : AY-SUESBL* [ESPOIR Movable legrest, Basic type seat specifications] : AY-SUESPF* [ESPOIR Fixed legrest, Premium type seat specifications] : AY-SUESPL* [ESPOIR Movable legrest, Premium type seat specifications] : AY-YMSIUS* [SUITE] : AY-YMNBUS* [NOBLE] (* Represents the variation of color.)		
	Base plate	: EA-ESBP		
Drive method		Electronic and hydraulic		
External dimensions		See "Dimensions" [page 33 to 38]		
Initial seat height	ESPOIR : 19.5"			
	SUITE / NOBLE : 18.5"			
Vertical stroke		8"		
Reclining angle (angle from horizontal)		[Automatic return] 70° to [Preset] 8°		
Legrest angle (angle from horizontal)	ESPOIR : Fixed legrest : 15° : Movable legrest : [Automatic return] 45° to [Preset] 10°			
	SUITE / NOBLE : [Automatic return] 35° to [Preset] 0°			
Neck height		Rear basin : 31.5"		
Mixing method		Thermostat type		
Output method/output volume (with hot water pressure, water pressure: 14.5 psi each)		Dual function shower head	(shower): Approximately 2.12 gal/min (Aeration): Approximately 1.85 gal/min	
Stop valve		Single valve (with tap)		

The dimensions listed above may vary slightly from product to product.

Rated voltage	AC 120 V		
Rated frequency	50 / 60 Hz		
Rated power consumption	5.7 / 3.4 A		
Usage environment	Operating temperature of 50 to 104 °F Operating humidity of 95% or less (ensure no condensation)		
Weight	YUME ESPOIR	AY-EXESYM* + AY-SCESL* (Movable legrest, rear basin specifications)	187.5 lb
		AY-EXESYM* + AY-SCESF* (Fixed legrest, rear basin specifications)	184.0 lb
	YUME SUITE	AY-EXESYM* + AY-YMSI* (Fixed legrest, rear basin specifications)	187.5 lb
	YUME NOBLE	AY-EXESYM* + AY-YMSI* (Fixed legrest, rear basin specifications)	187.5 lb
	YUME ESPOIR	AY-SUESBF* (Fixed legrest, Basic type seat specifications)	29.0 lb
		AY-SUESBL* (Movable legrest, Basic type seat specifications)	26.5 lb
		AY-SUESPF* (Fixed legrest, Premium type seat specifications)	29.0 lb
		AY-SUESPL* (Movable legrest, Premium type seat specifications)	26.5 lb
	YUME SUITE	AY-YMSIUS* (Movable legrest type seat specifications)	26.5 lb
	YUME NOBLE	AY-YMNBUS* (Movable legrest type seat specifications)	26.5 lb
	EA-ESBP		4.0 lb
Load	298 lb		

The dimensions listed above may vary slightly from product to product.

Dimensions


Overall layout diagram : YUME ESPOIR

Basin body: AY-EXESYM* [For Back wash (same as YUME basin)]

Seat body: AY-SCESF* [ESPOIR fixed legrest]


Seat: AY-SUESB* [ESPOIR Basic]

■ Top view

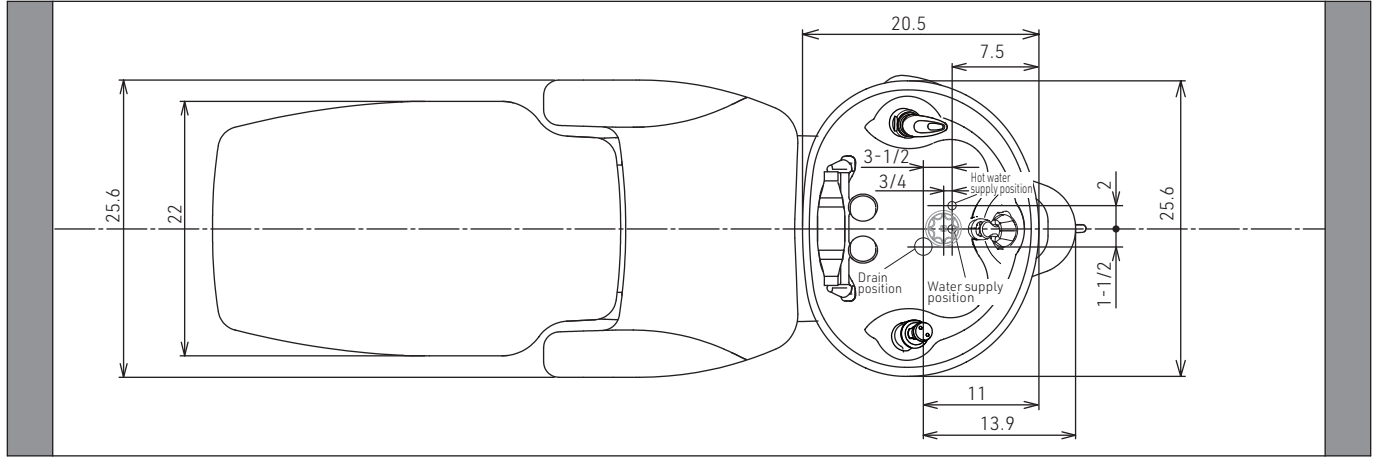

■ Side view

* External dimensions in the diagram below are for the H specification basin body and seat body.

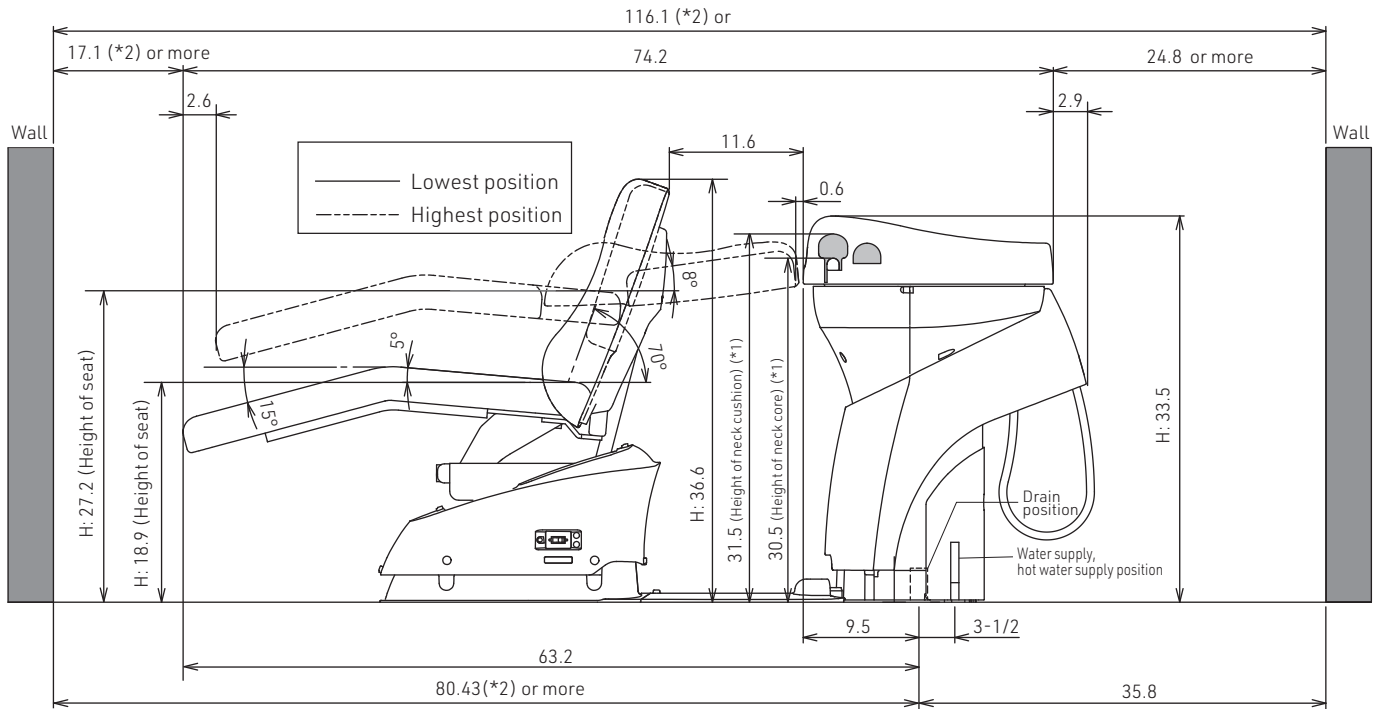

*1 The dimensions listed above may vary slightly from product to product.

*2 Ensure that there is ample space surrounding the seat for extremely tall customers or if the surrounding area is used as a passageway.

	Height of neck cushion	Height of neck core
AY-EXESYM*	31.5	30.5

* The height of the neck cushion may vary slightly from product to product.

Basin body: AY-EXESYM* [For Back wash(same as YUME basin)]
 Seat body: AY-SCESL* [ESPOIR Movable legrest]
 Seat: AY-SUESB* [ESPOIR Basic]

Technical drawing of the shower unit showing front and top views with dimensions.

Front View Dimensions:

- Overall width: 25.6
- Overall height: 22

Top View Dimensions:

- Overall width: 25.6
- Overall depth: 20.5
- Distance from front edge to center of hot water supply: 7.5
- Distance from front edge to center of water supply: 11
- Distance from front edge to center of drain: 13.9
- Distance from center of hot water supply to center of water supply: 1-1/2
- Distance from center of water supply to center of drain: 2
- Distance from center of hot water supply to center of drain: 3-1/2
- Distance from center of hot water supply to center of water supply: 3/4

Labels:

- Hot water supply position
- Water supply position
- Drain position

The technical drawing illustrates the Ergonomics of the Workstation (EWS) for the 3000 Series, showing side and front views with dimensions and adjustable components.

Side View Dimensions:

- Overall width: 114.2 (*2) or more
- Distance from wall to seat back: 17.7 (*2) or more
- Seat back height: H: 27.2 (Height of seat)
- Seat height: H: 18.9 (Height of seat)
- Seat back angle: 10°
- Seat base angle: 45°
- Seat base height: H: 36.6
- Seat back height: H: 31.5 (Height of neck cushion) (*1)
- Seat back height: H: 30.5 (Height of neck core) (*1)
- Seat back angle: 10°
- Seat base angle: 5°
- Seat base height: H: 33.5
- Seat base width: 60.7
- Seat base height: 78.4 (*2) or more
- Seat base width: 35.8
- Seat base height: 2.9
- Seat base width: 1.2
- Seat base height: 11.6
- Seat base width: 0.6
- Seat base height: 9.5
- Seat base width: 3-1/2

Front View Dimensions:


- Overall width: 114.2 (*2) or more
- Distance from wall to seat back: 17.7 (*2) or more
- Seat back height: H: 27.2 (Height of seat)
- Seat height: H: 18.9 (Height of seat)
- Seat back angle: 10°
- Seat base angle: 45°
- Seat base height: H: 36.6
- Seat back height: H: 31.5 (Height of neck cushion) (*1)
- Seat back height: H: 30.5 (Height of neck core) (*1)
- Seat back angle: 10°
- Seat base angle: 5°
- Seat base height: H: 33.5
- Seat base width: 60.7
- Seat base height: 78.4 (*2) or more
- Seat base width: 35.8
- Seat base height: 2.9
- Seat base width: 1.2
- Seat base height: 11.6
- Seat base width: 0.6
- Seat base height: 9.5
- Seat base width: 3-1/2

Adjustable Components:

- Lowest position (solid line)
- Highest position (dashed line)
- Drain position
- Water supply, hot water supply position

*2 Ensure that there is ample space surrounding the seat for extremely tall customers or if the surrounding area is used as a passageway.

	Height of neck cushion	Height of neck core
AY-EXESYM*	31.5	30.5

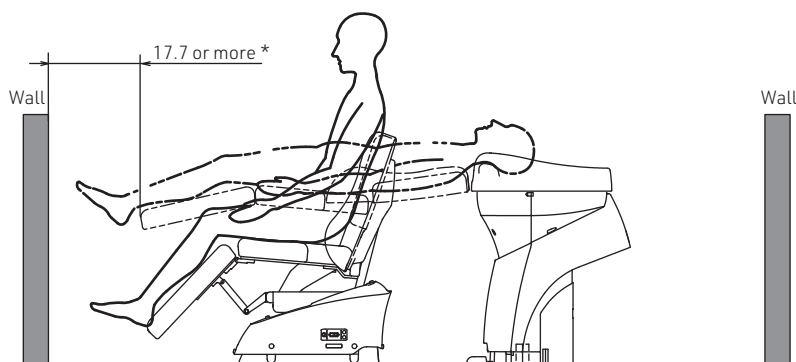


34

Overall layout diagram : YUME ESPOIR


Basin body: AY-EXESYM* [For Back wash (same as YUME basin)]
 Seat body: AY-SCESF* [ESPOIR fixed legrest]
 Seat: AY-SUESP* [ESPOIR Premium]

Top view

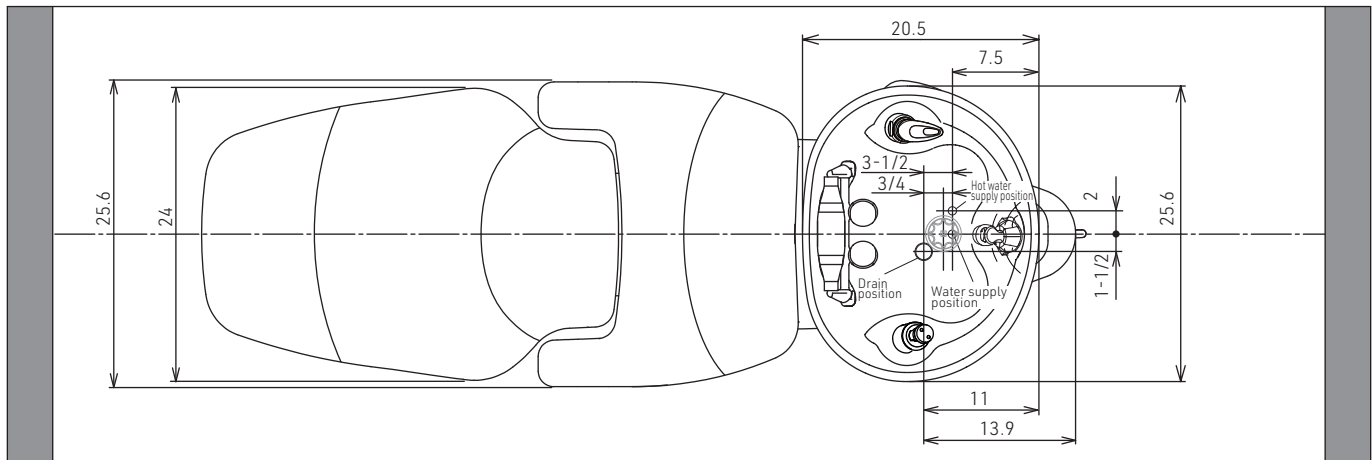


Side view

* External dimensions in the diagram below are for the H specification basin body and seat body.

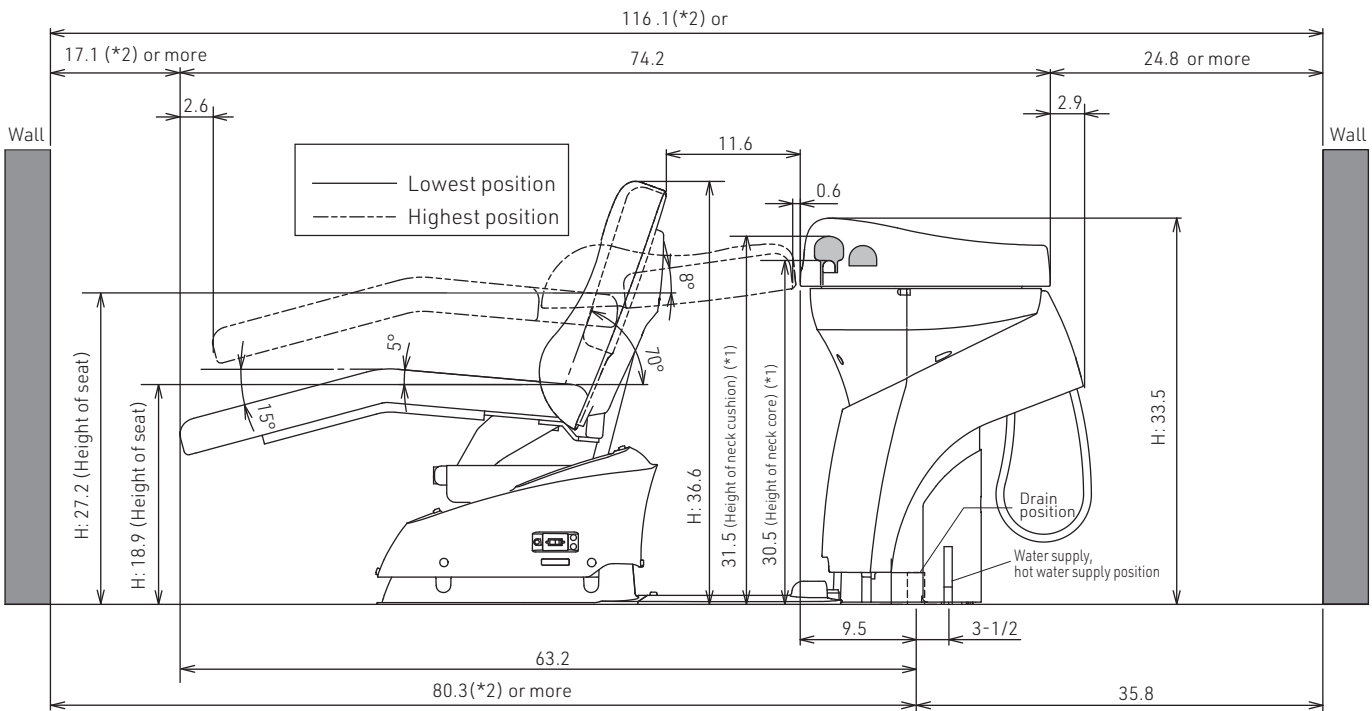

*1 The dimensions listed above may vary slightly from product to product.
 *2 Ensure that there is ample space surrounding the seat for extremely tall customers or if the surrounding area is used as a passageway.

	Height of neck cushion	Height of neck core
AY-EXESYM*	31.5	30.5

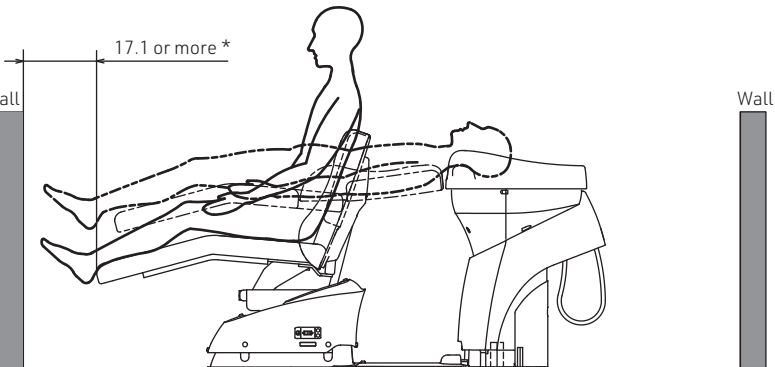

* The height of the neck cushion may vary slightly from product to product.


Overall layout diagram : YUME ESPOIR

Basin body: AY-EXESYM* [For Back wash(same as YUME basin)]


Seat body: AY-SCESL* [ESPOIR Movable legrest]

Seat: AY-SUESP* [ESPOIR Premium]

■ Top view

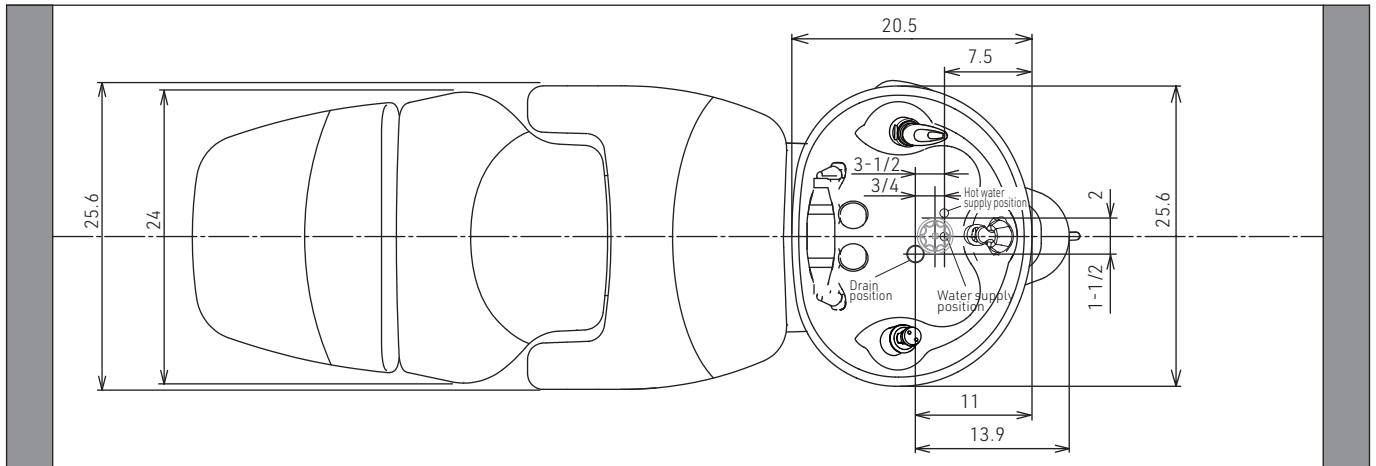


■ Side view * External dimensions in the diagram below are for the H specification basin body and seat body.

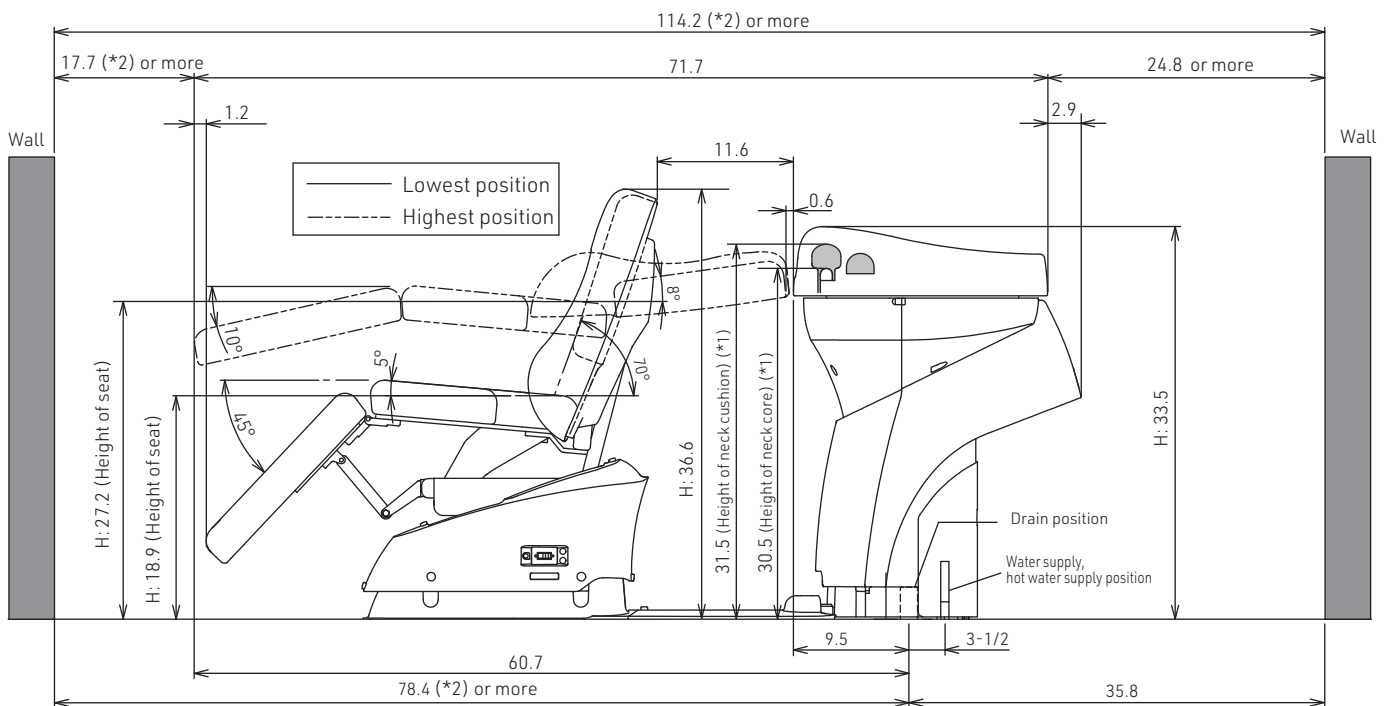

*1 The dimensions listed above may vary slightly from product to product.

*2 Ensure that there is ample space surrounding the seat for extremely tall customers or if the surrounding area is used as a passageway.

	Height of neck cushion	Height of neck core
AY-EXESYM*	31.5	30.5

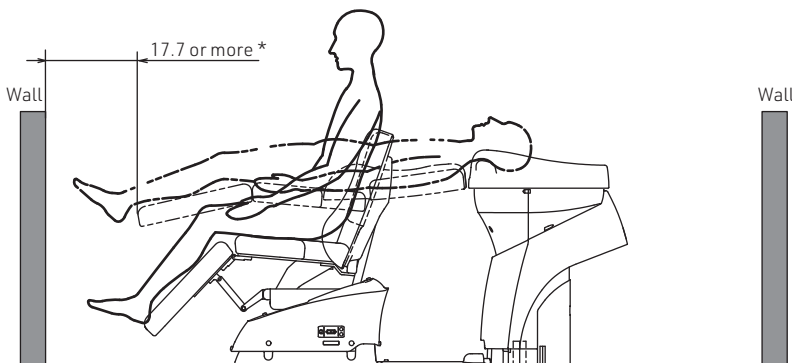


* The height of the neck cushion may vary slightly from product to product.


Overall layout diagram : YUME SUITE

Basin body: AY-EXESYM* [For Back wash(same as YUME basin)]
 Seat body: AY-YMSI* [SUITE]
 Seat: AY-YMSIUS* [SUITE]


■ Top view

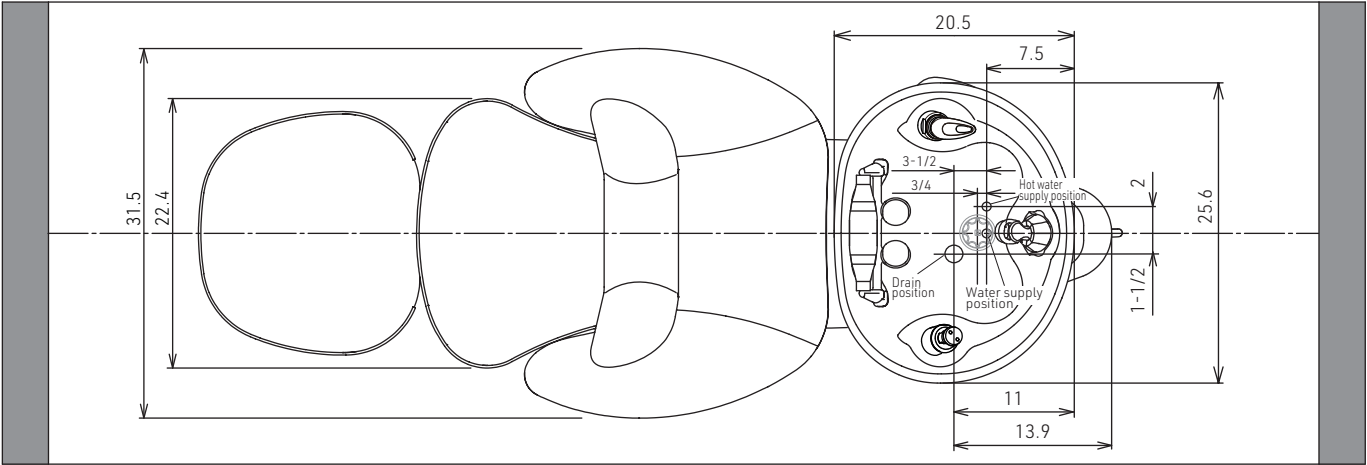

■ Side view * External dimensions in the diagram below are for the H specification basin body and seat body.

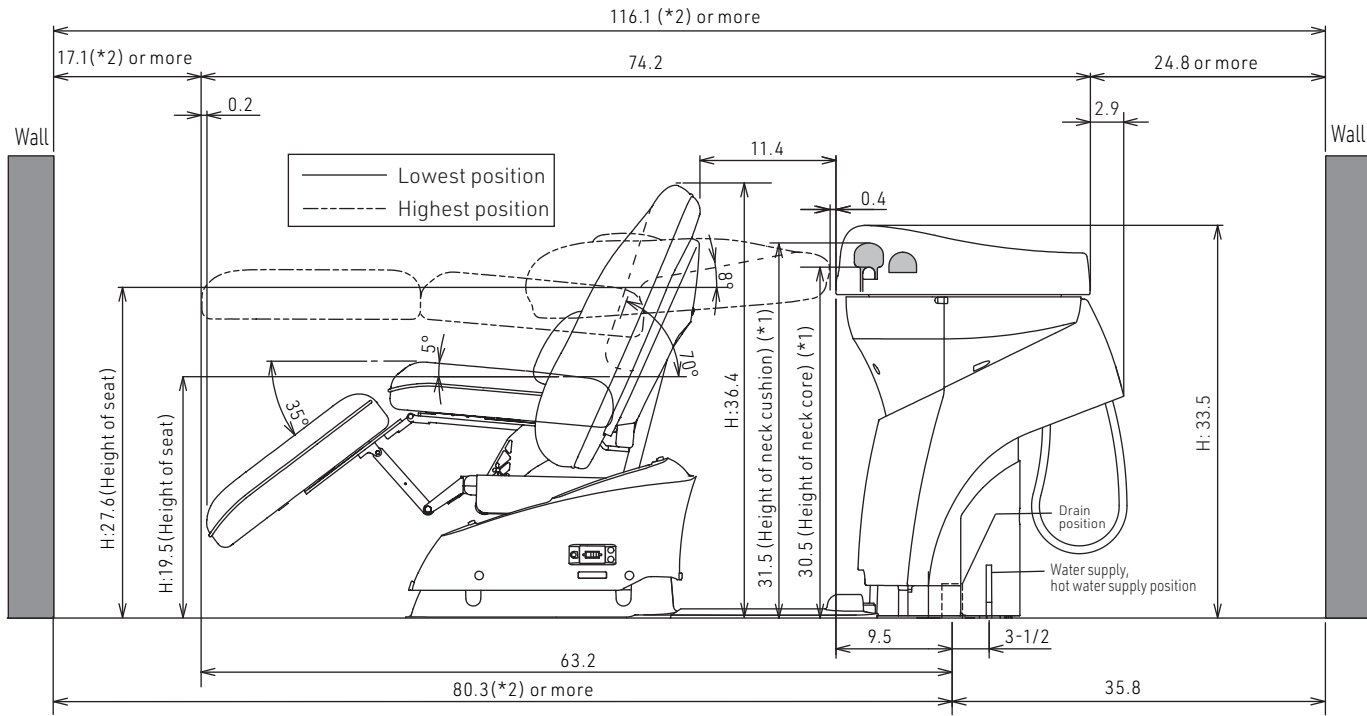

*1 The dimensions listed above may vary slightly from product to product.
 *2 Ensure that there is ample space surrounding the seat for extremely tall customers or if the surrounding area is used as a passageway.

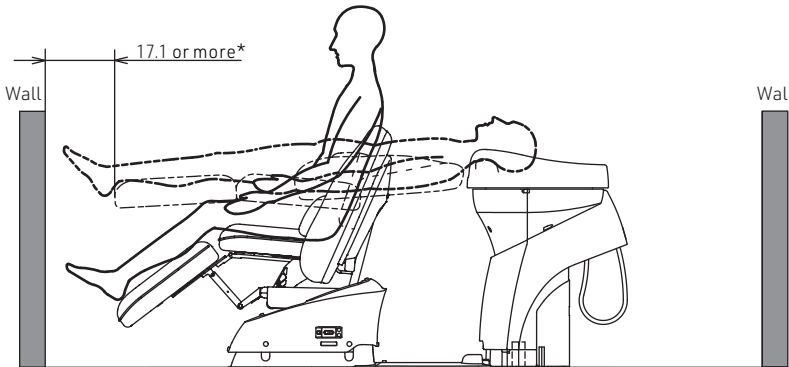

	Height of neck cushion	Height of neck core
AY-EXESYM*	31.5	30.5

* The height of the neck cushion may vary slightly from product to product.

Basin body: AY-EXESYM* [For Back wash (same as YUME basin)]
 Seat body: AY-YMSI* [SUITE]
 Seat: AY-YMNBUS* [NOBLE]

Technical drawing of the 1000 Series bidet toilet seat, showing side and top views with dimensions in inches.

Side View Dimensions:

- Overall width: 31.5
- Seat height: 22

Top View Dimensions:


- Overall width: 20.5
- Distance from side to centerline: 7.5
- Distance from front to centerline: 25.6
- Distance from front to rear: 11
- Distance from front to rear (including base): 13.9
- Distance from side to rear: 1-1/2
- Distance from side to rear (including base): 2

Top View Labels:

- Hot water supply position
- Water supply position
- Drain position
- 3-1/2
- 3/4

[illegible]

*2 Ensure that there is ample space surrounding the seat for extremely tall customers or if the surrounding area is used as a passageway.

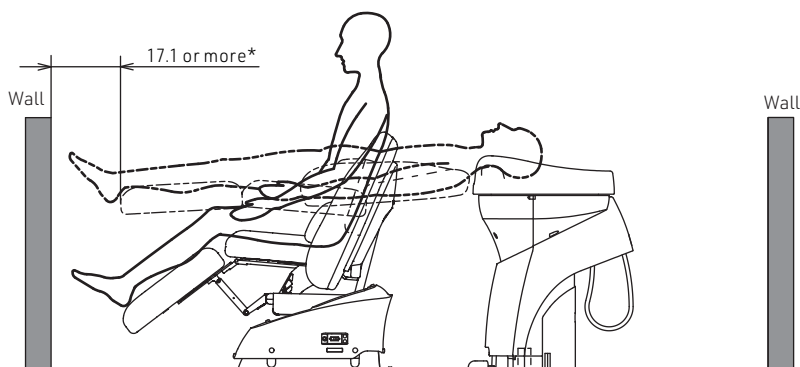

	Height of neck cushion	Height of neck core
AY-EXESYM*	31.5	30.5

38

Procedures for Daily Inspections

To ensure that this product can be used for a long period of time, conduct the inspections below.

■ Inspect the product every day

Inspection item	Inspection method	If the inspection results show defects
<input type="checkbox"/> Does the basin, backrest or seat rattle?	<input type="checkbox"/> Slowly push the rear end of the basin, top of the backrest or the front end of the seat in each direction, and check whether they rattle.	<input type="checkbox"/> Rattling may cause incorrect operation or damage in the main body, or cause it to fall over. Stop using the product.
<input type="checkbox"/> Is the chair operating properly?	<input type="checkbox"/> Turn the power switch on and check that a warning sound is not emitted intermittently. <input type="checkbox"/> Check that the chair moves properly to the position set by the preset function. <input type="checkbox"/> Check that the chair returns properly to the initial position using the automatic return function. <input type="checkbox"/> Check that the UP switch or DN (DOWN) switch lifts or lowers the chair. <input type="checkbox"/> Check that there is no rattle or abnormal noise when the chair is operating. <input type="checkbox"/> With the backrest lifted in its highest position, push the backrest toward the basin and check that there is no bouncing. <input type="checkbox"/> With the chair raised in its highest position, push the seat down and check that there is no bouncing. <input type="checkbox"/> With the legrest raised in its highest position, push the legrest down and check that there is no bouncing.	<input type="checkbox"/> Turn the power switch off, and turn the power on again after 5 seconds. If the warning sound continues to be emitted, there may be a malfunctions in the position detector. Stop using the product, and turn the power switch off. <input type="checkbox"/> Follow the procedures outlined in "How to set the preset position" (see page 17) to change the preset position and operate the seat. If the chair still does not operate properly, stop using the product and turn the power switch off. <input type="checkbox"/> Customers may not be able to get on or off the seat safely. If the chair does not operate properly, stop using the product and turn the power switch off. <input type="checkbox"/> Customers may not be able to get on or off the chair safely. If the chair does not operate properly, stop using the product and turn the power switch off. <input type="checkbox"/> If there is rattle or abnormal noise when the chair is operating, stop using the product. <input type="checkbox"/> Bouncing may cause incorrect operation in the chair. Stop using the product. <input type="checkbox"/> Bouncing may cause incorrect operation in the chair. Stop using the product. <input type="checkbox"/> Bouncing may cause incorrect operation in the chair. Stop using the product.
<input type="checkbox"/> Is the chair operating properly?	<input type="checkbox"/> Move the chair to any position, and check that it has stopped and has not lowered after a certain period of time.	<input type="checkbox"/> Stop using the product if the chair does not stop a certain period of time and lowers.
<input type="checkbox"/> Is there an abnormal odor from the chair?	<input type="checkbox"/> Is there an abnormal odor from the seat?	<input type="checkbox"/> Abnormal odor or smoke may cause abnormal operation or a fire. Stop using the product immediately, and turn the power switch off.

Inspection item	Inspection method	If the inspection results show defects
<input type="checkbox"/> Is there any oil leaking?	<input type="checkbox"/> Check that there is no oil around the bottom of the chair base cover.	<input type="checkbox"/> Oil may be leaking from the hydraulic cylinder. Stop using the product immediately.
<input type="checkbox"/> Is there any water leaking from the Unit?	<input type="checkbox"/> Check that there is no water on parts other than the inside of Unit.	<input type="checkbox"/> Water leaks may cause malfunctions to the main body, or make dirt difficult to remove. Wipe water away from all parts other than the inside of the basin.
<input type="checkbox"/> Is there any water leaking from the Unit installation surface?	<input type="checkbox"/> Visually check around the Unit installation surface to see if there are any water leaks. <input type="checkbox"/> Check that there is no water pooled inside base plate F. (see page 25)	<input type="checkbox"/> Water may be leaking from inside the Unit. Open the maintenance cover and check inside, and stop using the product immediately if there is water leaking from the pipes.
<input type="checkbox"/> Have the neck cushion and head pillow degraded?	<input type="checkbox"/> Check that there is no tearing, dirt or sinking of the neck cushion and head pillow surface.	<input type="checkbox"/> These may cause pain or transfer dirt to the customer's neck and head. The neck cushion and head pillow are consumable supplies. Replace them as soon as possible.
<input type="checkbox"/> Is there an abnormal odor coming from the basin drain?	<input type="checkbox"/> Check if there is an abnormal odor coming from the basin drain	<input type="checkbox"/> Remove any hair and other objects trapped in the hair catcher. (see page 25)
<input type="checkbox"/> Does the tap work properly?	<input type="checkbox"/> Turn the water stop handle and check if hot water is output properly and that there is no abnormal noise, then close the tap and check that hot water stops properly. * An abnormal gushing sound may be emitted as water flows. (see page 18)	<input type="checkbox"/> If there is abnormal noise or the water does not turn off properly when the water stop handle is closed firmly, there may be a malfunctions in the stop valves of the tap.
<input type="checkbox"/> Is water output from the shower head properly?	<input type="checkbox"/> Turn the water on and check visually that water is output from the shower head properly, that there are no water leaks from the water outlet or base of the shower head, and that the hot water is not tainted.	<input type="checkbox"/> If water is leaking from the water outlet or base of the shower head, the internal gasket may be worn and replacement is required. <input type="checkbox"/> If water sprays in random directions from several holes, the spray nozzle may be blocked with water scale or dirt. Remove the spray nozzle and clean it. (see page 27)
<input type="checkbox"/> Does the temperature control of water stop handle work properly?	<input type="checkbox"/> Turn the water stop handle, check that the water temperature is adjusted properly and that there is no abnormal noise. * An abnormal gushing sound may be emitted as water flows. (see page 18)	<input type="checkbox"/> If the water temperature cannot be adjusted properly or if there is abnormal noise, there may be a problem with the water mixing value within the basin. Stop using the product immediately.
<input type="checkbox"/> Can the basin be filled with water?	<input type="checkbox"/> Check that the drain cap can be used to block the drain and that water filling the basin does not drain.	<input type="checkbox"/> When the water decreases quickly, there is a possibility that the drain cap gasket has deteriorated. The drain cap is a consumable part. Immediately replace it. (see page 28)
<input type="checkbox"/> Has the mohair tape degraded?	<input type="checkbox"/> Check that the mohair tape has not peeled off, and that there is no significant dirt or degradation.	<input type="checkbox"/> Clean the tape following the procedures outlined in "mohair tape instruction" supplied with the mohair tape (accessory).
<input type="checkbox"/> Is there a strange odor from the shower head holder?	<input type="checkbox"/> Check if there is any strange odor from the shower head holder.	<input type="checkbox"/> If you still notice the odor after cleaning the sponge, replace the sponge immediately. (see page 27)

■ **Always inspect the product after work every day**

Inspection item	Inspection method	If the inspection results show defects
<input type="checkbox"/> Is the drain blocked?	<input type="checkbox"/> Check that the drain is not blocked with the drain cap, towel or shampoo cloth.	<input type="checkbox"/> Remove the object that is blocking the drain. If the drain is blocked, water that is turned on accidentally or a slight trickle of water due to an increase in water pressure at night may cause water to spill from the basin, leading to water leakage.
<input type="checkbox"/> Has the tap been turned firmly?	<input type="checkbox"/> Turn the taps firmly in a clockwise direction and check that the water turns off properly.	<input type="checkbox"/> Turn the taps firmly and turn the water off properly. If the water does not turn off completely, there may be a malfunctions in the stop valves of the tap. Close the stop valves in the water supply pipe and hot water supply pipe, and stop using the product immediately.

■ **Inspect the product once per week**

Inspection item	Inspection method	If the inspection results show defects
<input type="checkbox"/> Is there any water leaking within the Unit?	<input type="checkbox"/> Remove the basin maintenance cover and check that there is no water leaking from the internal pipes or water taps.	<input type="checkbox"/> If water is leaking from the pipes, the pipes or gasket may be worn, degraded or damaged. Close the stop valves in the water supply pipe and hot water supply pipe, and stop using the product immediately.
<input type="checkbox"/> Is there any water leaking from the drain hose?	<input type="checkbox"/> Remove the basin maintenance cover and check that there is no water leaking from the drain hose.	<input type="checkbox"/> If water is leaking from the drain hose, the drain hose may be damaged. Stop using the product immediately.
<input type="checkbox"/> Is there are any water scale or dirt blocking the spray nozzle?	<input type="checkbox"/> Remove the spray nozzle from the shower head and check that there is no water scale or dirt on it (see page 27).	<input type="checkbox"/> Use an item such as a toothbrush to remove any dirt such as water scale and clean the spray nozzle. Leaving the spray nozzle uncleaned will lead to blockage, and water may not be output from the shower head properly.

MEMO

MEMO



Warning

California Proposition 65

Cancer and Reproductive
Harm -
www.P65Warnings.ca.gov.



U.S.A.

101 Belmont Drive, Somerset, NJ 08873
TEL:800-526-3847

CANADA

2076 South Sheridan Way, Mississauga, ON, L5J 2M4
TEL:905-822-2755

JAPAN

1-1, 2-Chome, Higashi-shinsaibashi, Chuo-ku, Osaka, Japan
TEL:(+81)6-6213-5945

Book Number **1E05JQA0**

Printed in Japan