

Hairdressing Trolley Operating Instructions

Thank you for purchasing this Takara Belmont product.
 Please read the Operating Instructions carefully before use and use the product correctly.
 This product is an industrial appliance designed for use by hairdressing salons.
 Only use this product for its intended purpose.
 Keep this booklet safe near the product so that it can be referred to promptly, and be sure to read this booklet again when necessary.
 If the Operating Instructions become illegible due to stains and tears, or if this booklet is misplaced, please request a copy from Takara Belmont.

Version 2 2023.11
 1E09LLB0 (inquiry number)

Safety Warnings and Precautions (items that must be followed)

■ Before using the product ...

Please be sure to read the Safety Precautions and Precautions for Use carefully and use the product correctly.

■ Precautions shown on this page

These are intended for the safe use of the product and to prevent harm and damage to users and other people.

All of the precautions shown are important details related to safety. Please be sure to follow these precautions.

If an accident occurs due to a failure to follow the Safety Precautions and Precautions for Use, Takara Belmont is not responsible for any damage or risk to the person using this product or those around them due to accidents. In this case, the person failing to adhere to the Safety Precautions and Precautions for Use will be responsible for any damage or risk incurred.

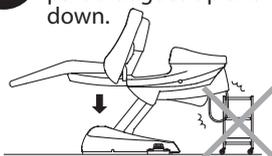
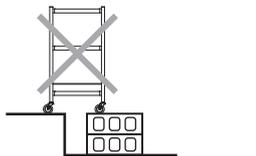
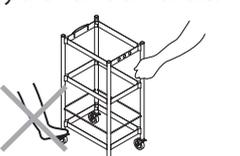
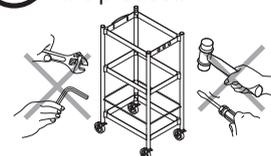
Detailed descriptions of symbols are provided below. Read and understand these symbols thoroughly before reading this instructions.

■ Descriptions of symbols

 <p>WARNING</p>	<p>The items explained under this symbol are precautions that may result in deaths or serious injury from the incorrect handling of the product if the warning is not followed.</p>	 <p>Display of danger, warnings, and precautions in general</p>	 <p>Display for prohibition of disassembly, repair, and modification</p>
 <p>CAUTION</p>	<p>The items explained under this symbol are precautions that may result in mild or moderate injury or property damage from the incorrect handling of the product if the caution is not followed.</p>	 <p>Display for general prohibitions</p>	 <p>Display for general mandatory action by the user</p>

Safety Precautions (items that must be followed)

⚠ WARNING

 <p>Do not place the trolley under any equipment part that goes up and down.</p>  <p>When the equipment part goes down, the trolley may become caught between the equipment and the floor, resulting in injury or damage to the equipment.</p>	 <p>Use the trolley on a stable surface.</p>  <p>Use the trolley on a solid, flat surface. Otherwise, it may fall, resulting in injury.</p>	 <p>When moving the trolley to another place, hold it by the frame or handle.</p>  <p>Do not use your foot to move the trolley. It may fall, resulting in injury or damage to the trolley.</p>	 <p>Avoid disassembling, repairing, and modifying the product.</p>  <p>Do not allow anyone other than service technicians to disassemble, repair, or modify the trolley. Abnormal operation may result, causing injury.</p>
 <p>Do not push or pull the trolley over a high step.</p> <p>When moving the trolley to another place, do not push or pull it over a high step. The casters may become damaged, and the trolley may fall, resulting in injury or damage to the trolley.</p>	 <p>Do not use the trolley on a wet surface.</p> <p>Do not use the trolley on a wet surface. The casters may skid, and the trolley may fall, resulting in injury or damage to the trolley.</p>		
 <p>Do not use the trolley with any of its casters off the floor surface.</p> <p>Do not use the trolley with any of its casters off the floor surface. It may fall, resulting in injury or damage to the trolley.</p>	 <p>Do not climb onto the trolley.</p> <p>Do not climb onto the trolley. It may fall or become damaged, resulting in injury.</p>		

Precautions for Use

⚠ CAUTION

 <p>Do not subject the trolley to impact.</p> <p>Do not subject the trolley to impact by bringing hard objects into contact with the trolley or toppling or dropping it on the floor. Deformation of the trolley or injury from the damaged trolley may result.</p>	 <p>Do not use for any purpose other than hairdressing salon treatment.</p> <p>This product is an industrial appliance for use in hairdressing salons. Please avoid the use of the product outside these purposes.</p>
 <p>Be careful not to get the trolley wet.</p> <p>Be careful not to get the trolley wet. If it gets wet, wipe off the moisture immediately. Otherwise, the product may gather rust or malfunction.</p>	 <p>Wipe off any chemicals that adhere to the product.</p> <p>If chemicals adhere to the product, immediately wipe these off with a dry cloth because such contact may result in degeneration and discoloration. In particular, take extra care not to stain the product with hair dye.</p>
 <p>Do not subject the trolley to direct sunlight or heat from space heaters.</p> <p>Be careful not to expose the trolley to direct sunlight or heat from space heaters. Parts of the trolley may discolor or deteriorate, or the trolley may become hot, resulting in injury.</p>	 <p>Do not place excessively heavy objects on the trays.</p> <p>Do not place a load that exceeds 50 N (5 kgf) on any of the trays. Deformation or other damage to the product may result. Also, the product may fall, resulting in injury.</p>

Maintenance Method



The following cleaners must not be used on the product: volatile chemicals, such as thinner, alcohol, gasoline, or kerosene; abrasive waxes or sponges; detergent containing organic solvents; acid, alkaline, or chlorine-based detergents; or dish scrubbers. Use of these materials may become a remote cause of scratches on the product or discoloration of the product.

Frame
Trays

Wipe gently with a dry, soft cloth.

If the frame or trays become wet, wipe off the moisture immediately. Otherwise, the frame or tray may gather rust or break down. If the frame or trays become heavily stained, remove the stains with a neutral detergent mixed with water, and be sure to wipe the frame or tray with a dry cloth.

Casters

If hair or dirt becomes caught in the casters and they do not roll smoothly, clean the casters.

Note: During cleaning, be careful not to get your fingers caught by the moving parts.

Standard Period of Use

Standard period of use for this product is three years. Standard period of use is defined as "a guideline for the standard period of using the product without any problems in safety under standard conditions of product use with appropriate maintenance and inspection (including replacement of parts) performed." Please be advised that this is not an indication of the guarantee period.

Consumable Goods

"Consumable goods" listed below refer to parts that are expected to undergo wear, deterioration, and changes/damage in appearance with use. Please be advised that the repair and replacement of consumable goods are not covered under the guarantee and will incur a charge. (*Degree and timing of wear, deterioration, and damage varies depending on the environment conditions the product is used.) In the case of significant wear and deterioration or damage, inspection or replacement of the parts will be necessary. Please contact your local authorised Takara Belmont dealer immediately.

Consumable goods Casters

Also, scratches, stains, deterioration, and discolouration on the outer surface of the exterior parts are not covered under the guarantee.

Disposal of the Product

When disposing of the product or replaced parts, waste should be processed appropriately according to current laws and regulations in your country.