

THE ONE Footrest Pad Assembly Installations

■ Contents


- Upholstery footrest pad 1 pc.
- Upholstery footrest fixing shaft..... 2 pcs.
- Plain washer: $\phi 10 \times \phi 22 \times 1.6$ 2 pcs.
- M8 nut 2 pcs.

■ Items to be provided by user


- 14 mm spanner

■ Pad assembly procedure

- ① Fasten the plain washers and upholstery footrest fixing shafts to the holes in the back of the upholstery footrest pad (two locations).
(Tool: 14 mm spanner)

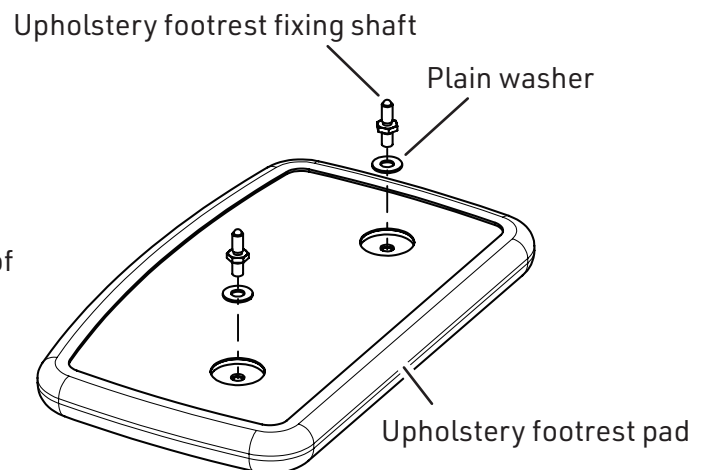

- ② Pass the upholstery footrest fixing shafts through the holes in the footrest, and fasten the protruding upholstery footrest fixing shafts with nuts (two locations).

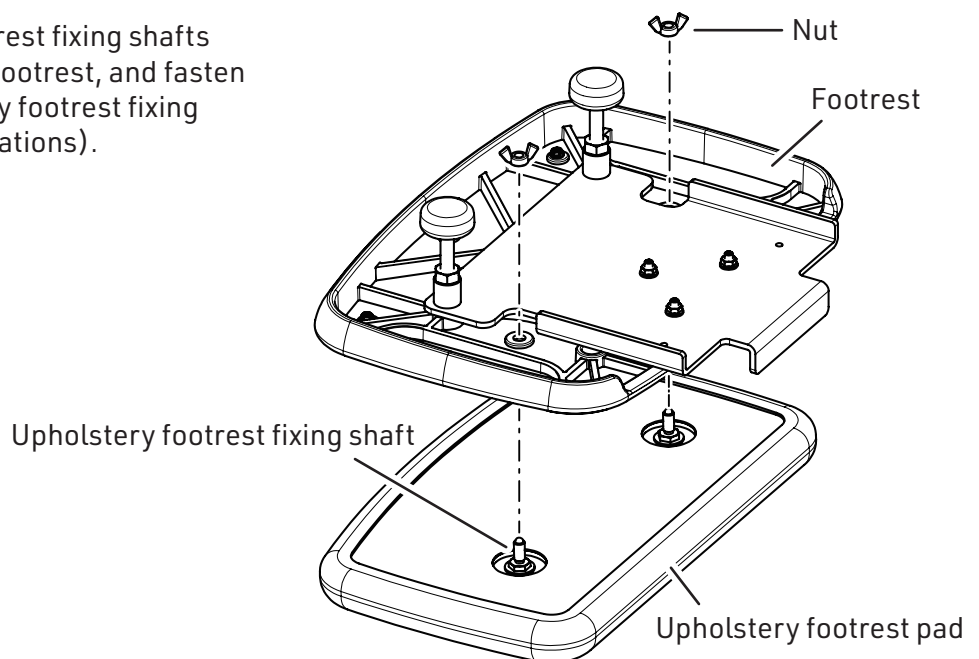

- ③ Fix the footrest onto the main unit, referring to 'Installing the Footrest' in the THE ONE Installation Instructions.

If you are using different footrest pads for different customers, you can use them even after step ① is completed.



CAUTION

If the footrest pad is not fastened to the footrest, it may come off unexpectedly, causing the customer to fall, and personal injury may result. Be sure to advise your customers to be careful when getting on and off the footrest.