


# YUME ESPOIR

## QUICK OPERATION GUIDE



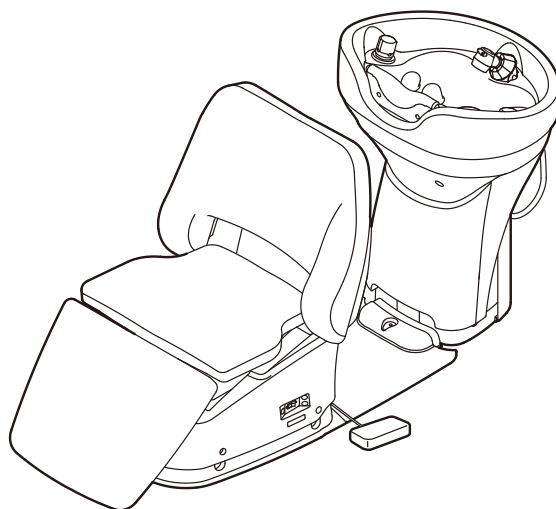


For details and safety information  
see the operating instructions.

<https://manual.tb-global.net/>




Seat lowering switch      Seat lifting switch

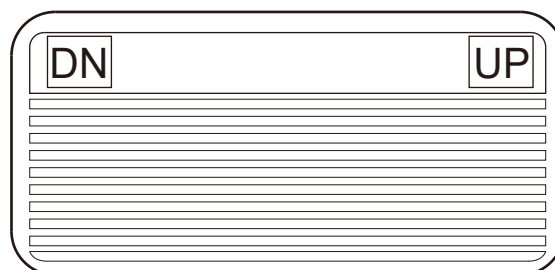

Seat lifting switch      Press one second or longer for preset position  
Press one second or less for manual mode

Seat lowering switch      Press one second or longer for initial position  
Press one second or less for manual mode

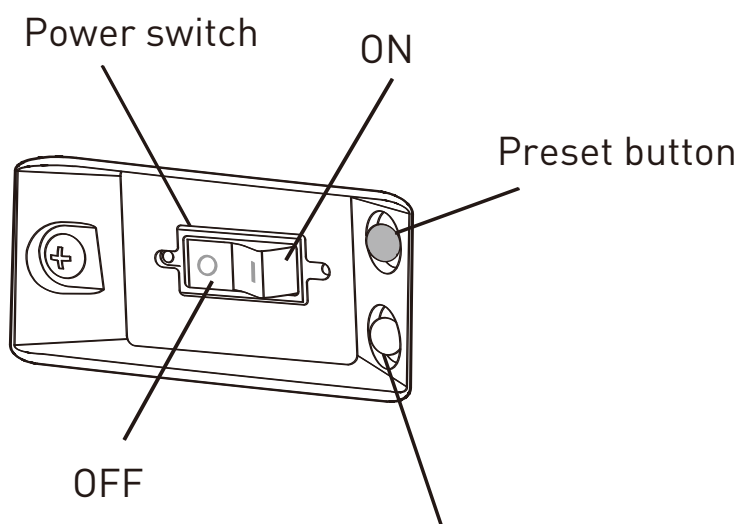


**Do not use this button**


How to set the preset position

- 1) Set the chair to the desired position
- 2) Turn off the power switch
- 3) While depressing the Preset Button, turn on the power switch
- 4) Keep depressing the Preset Button until the buzzer sounds, then release


### Shampoo Basin

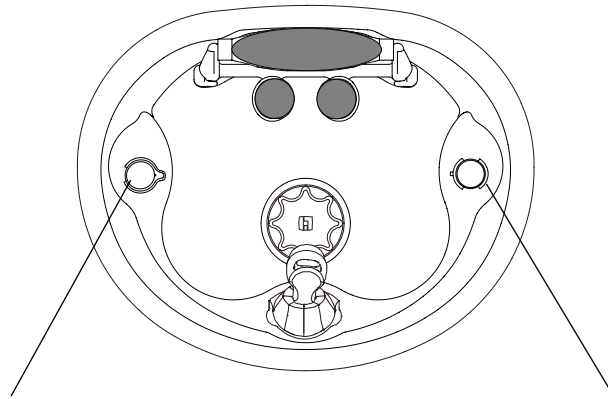

#### Tap

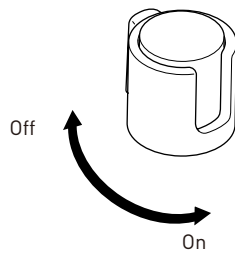


#### Thermostatic Control

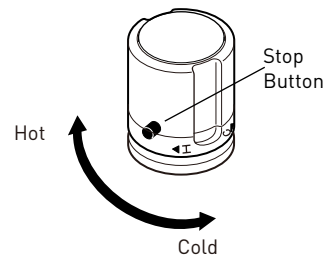


To adjust the temperature over 40 degrees,  
turn the knob while pressing the Stop Button

#### Drain Cap

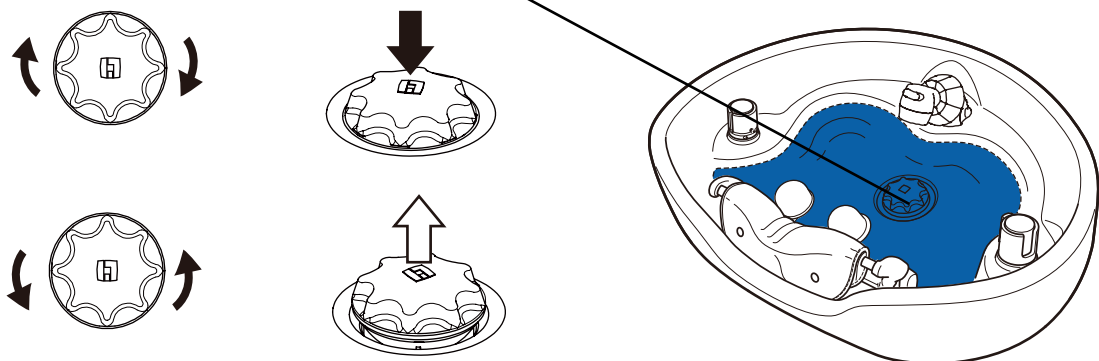

### 3 Dual Function Showerhead

#### <Dual Function Showerhead>


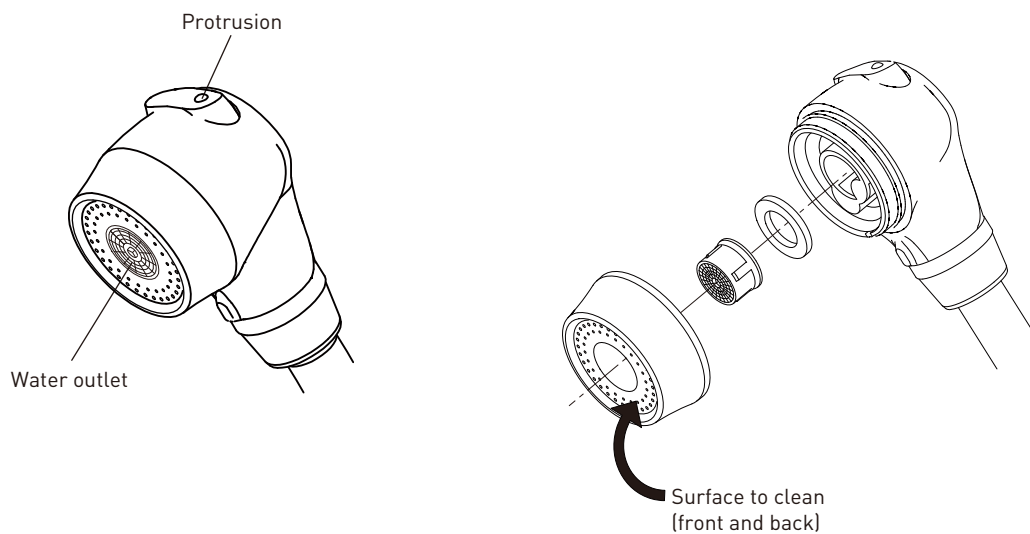


#### <Shower Mode>

##### <Shower Mode>




##### <Low-splash Mode>

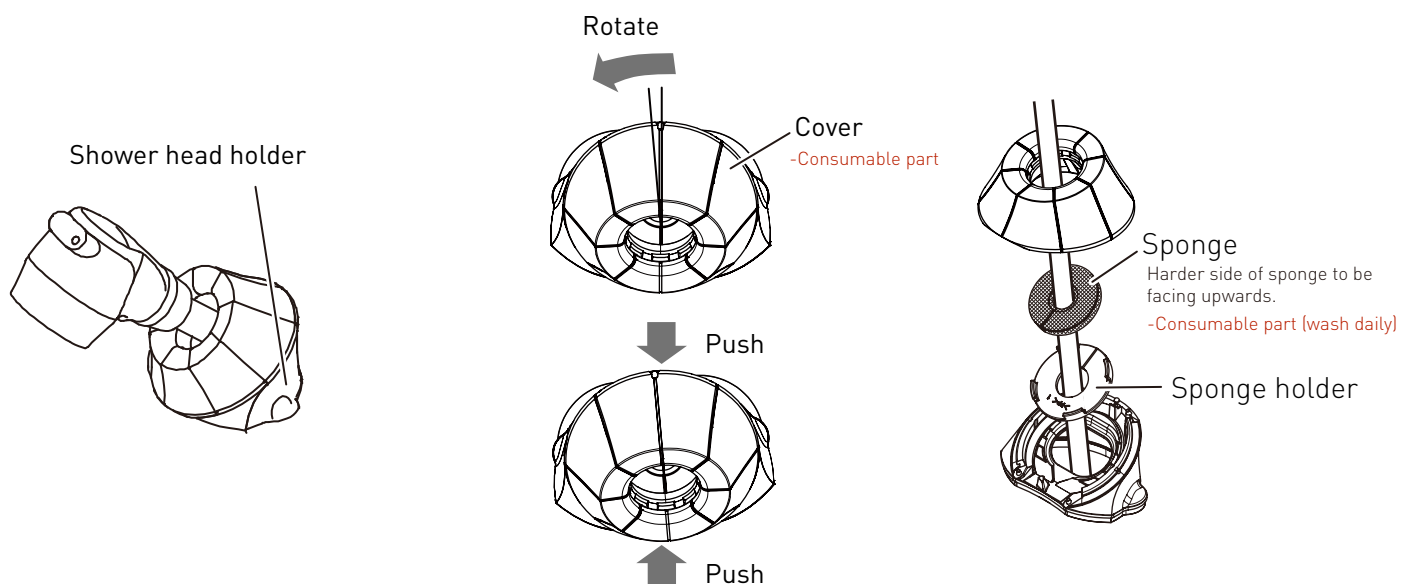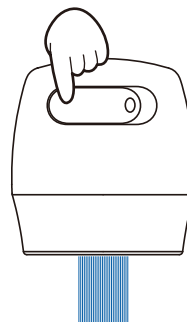


### Back wash basin (YUME basin)


#### 1 Attach the Neck Cushion and Head Pillow.

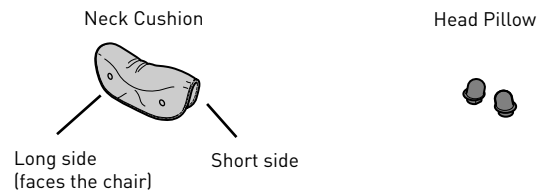


#### 2 Attach both sides of the Neck Cushion with the snap button.

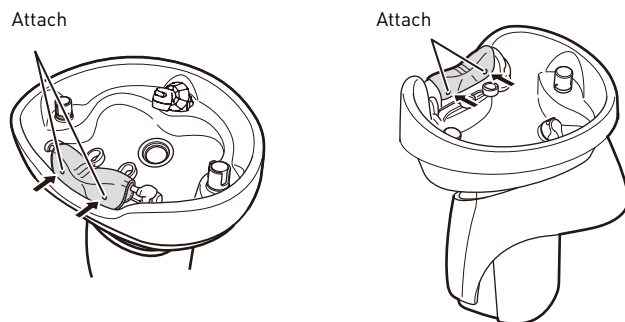


#### 3 Attach the Head Pillow as shown below.

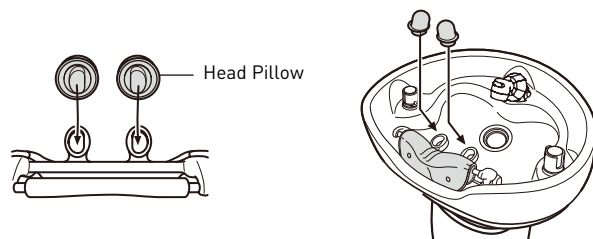


- 1 Turn on the power.

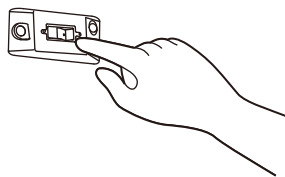


- 2 Press the seat lowering switch for 1 second or longer to bring the chair to its initial position.

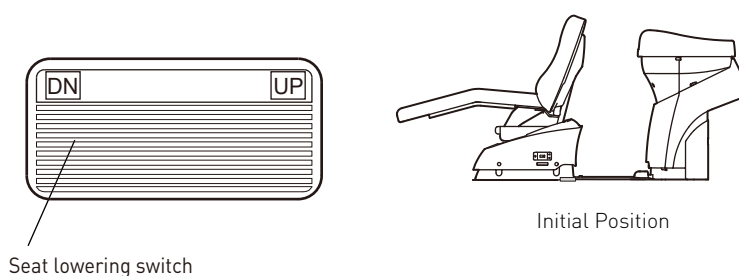

- 3 Instruct the customer to sit from the side, then face front.

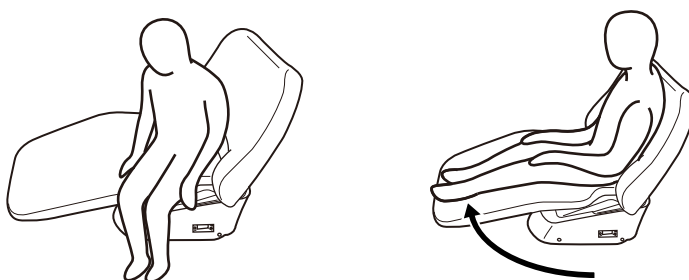


- 4 Press the seat lifting switch for 1 second or longer to bring the chair to its preset position.

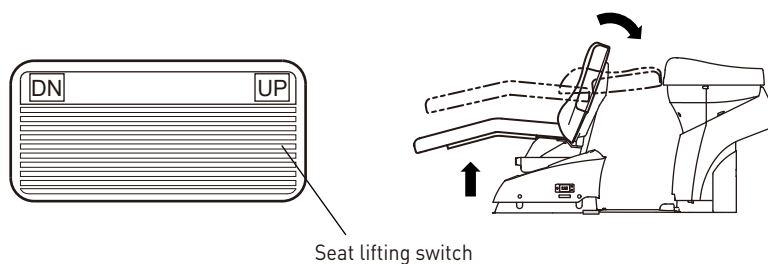




### 5 Adjust the chair height.

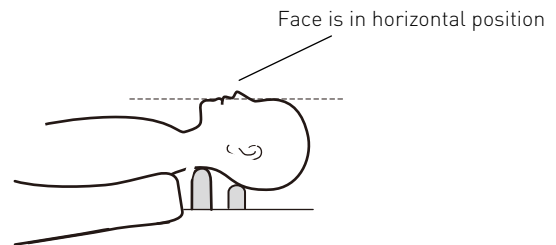

### CAUTION

Confirm that there are no objects/ people between the seat and the floor when operating the chair.

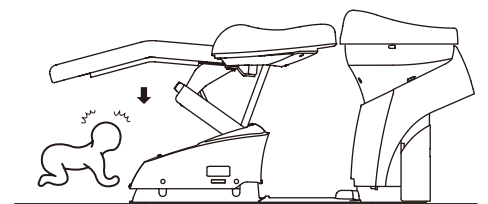

### <Shampooing Style>


Back wash shampoo  
(seated)



- 6 After the shampooing, return the chair to its initial position.





Seat lowering switch

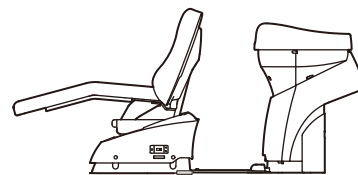


Initial Position

- 7 Wipe off the remaining water after use.

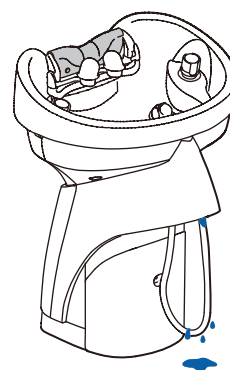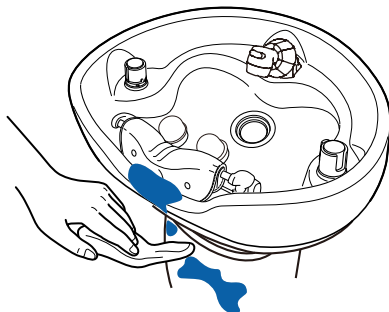

- 8 Clean the consumable parts.

Neck Cushion

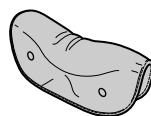


Head Pillow



Drain Cap



Hair Catcher

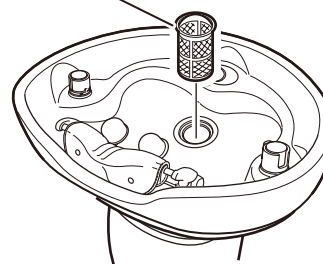





**TAKARA BELMONT CORPORATION**

2-1-1, Higashishinsaibashi, Chuo-ku, Osaka, 542-0083, Japan

TEL : 81-6-6213-5945

FAX : 81-6-6212-3680

