

Electric-powered esthetic salon bed

This product is intended for use in esthetic treatments, including facial and other care.

**TAKARA
BELMONT**

Model No.

SU-A66M (Upper Part)
SP-YC (Chair Base)

CAVARIER II

Operating Instructions



Table of Contents

Description of Warning Symbols	1
Safety Precautions	1
Part Names	3
How to Use	3
Maintenance Method	5
Specifications	5
Standard Period of Use	6
Consumable Goods	6
Disposal of the Product	6

Thank you for purchasing this Takara Belmont product.

Please read the Operating Instructions carefully before use and use the product appropriately.

Thereafter, please keep the Operating Instructions in a safe place and read them again whenever necessary. Failing to read the Operating Instructions before use may lead to accidents.

This product is an industrial appliance for use in esthetic salons and hairdressing salons. Do not use the product for any purpose other than esthetic or hairdressing services. The product must only be used by qualified professionals, such as estheticians and hair stylists.

Avoid adjusting or modifying the main unit under any circumstances as this may cause serious accidents. Please contact your local authorised Takara Belmont dealer for repair.

If you have any questions about the Operating Instructions or the product, please contact us. If the Operating Instructions become illegible due to stains and/or tears, or if this booklet is misplaced, please request a copy from Takara Belmont.

July 2024 (Version 1)

1A10Z1A0(Inquiry No.)


Description of Warning Symbols

The precautions shown on this page

are intended for the safe use of the product and to prevent harm and damage to you and other people. All of the precautions shown are important details related to safety. Please be sure to follow these precautions.

Detailed descriptions of symbols are provided below. Read and understand these symbols thoroughly before reading these instructions.






The precautions that must be complied with are categorized and explained using the following symbols.

 CAUTION	This symbol explains precautions that may result in mild or moderate injury or property damage
NOTICE	This symbol shows items that should be observed for safety reasons.

The precautions that must be complied with are categorized and explained using the following symbols.

Attention (Actions requiring attention)	Prohibition (Actions that are not allowed)	Mandatory (Actions that must be carried out)
 General cautions	 General prohibitions	 "Mandatory" actions that must be carried out

Safety Precautions

 CAUTION	
 <p>Install the product on a stable surface.</p>  <p>Install the chair on a level, solid floor. The chair may tip over.</p>	 <p>Take full caution when raising and lowering the seat.</p>  <p>When raising or lowering the seat, make sure that no one is under the chair. Serious injury may occur by pinching.</p>

⚠ CAUTION



When moving the chair, hold the chair base.



When moving the chair, make sure to hold firmly the chair base. Lifting only the upper part of the chair may cause the chair base to fall off and may cause serious injury.




Pay attention to the surroundings when rotating the chair.



When rotating the chair, make sure that no one is around. Serious injury may occur when the product hits someone.



Perform a monthly inspection on threaded parts.

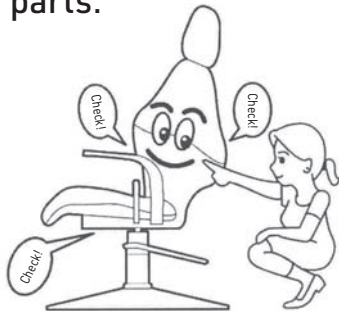

Long-term use may cause threads, nuts, bolts, etc., to become loose. Perform a monthly inspection on threaded parts to check for looseness. If any part is loose, tighten it firmly with a tool such as a screwdriver. If the part is still loose after retightening, please contact your local authorised Takara Belmont dealer.




Do not sit on the armrests.



Do not sit on the armrests. The chair may tip over.

Part Names

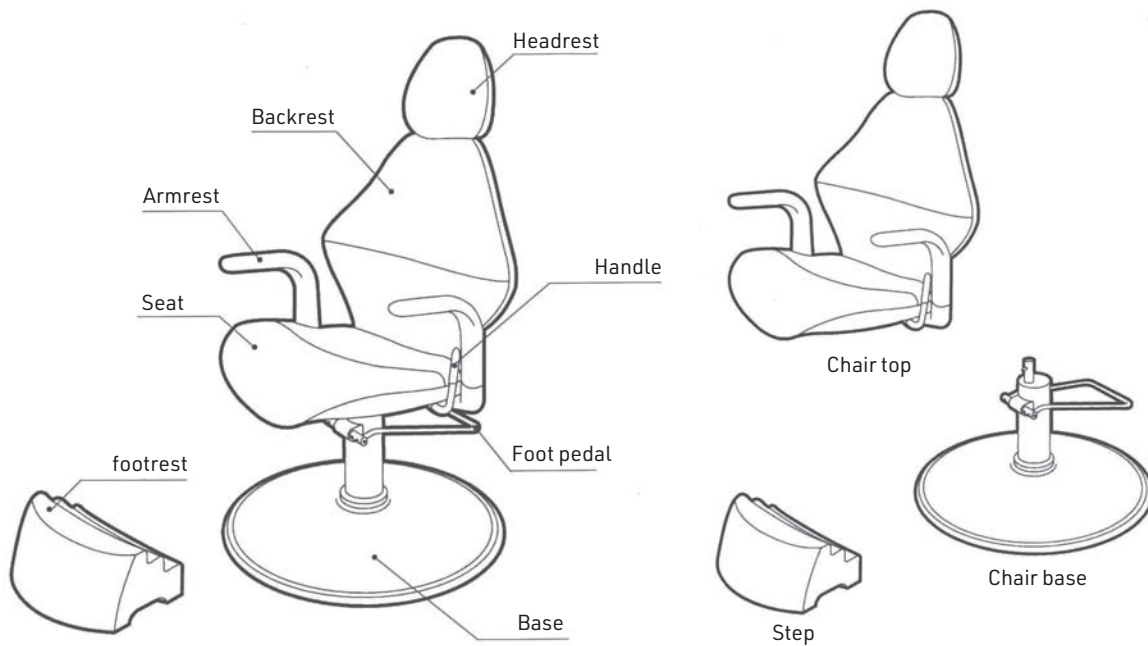


How to Use

Method of operating the backrest

1. To lower the backrest

While keeping the handle on the left side of the chair tilted forward, use your other hand to slowly lower the backrest.

If you release your hand from the handle midway through, the backrest will stop at that position.

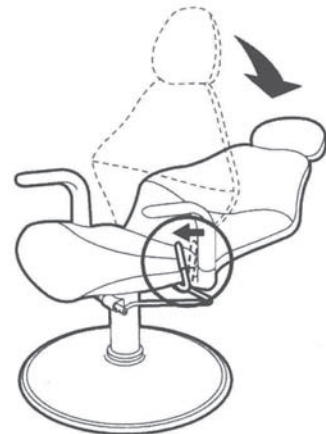


2. To raise the backrest

By tilting the handle on the left side of the chair toward you, the backrest will rise spontaneously by the power of the gas cylinder if the client is not lying on the chair.

If the client is lying on the chair, support and raise the backrest with your hand. This action needs some force.

If you release your hand from the handle midway through, the backrest will stop at that position.

*The backrest can be detached as needed.

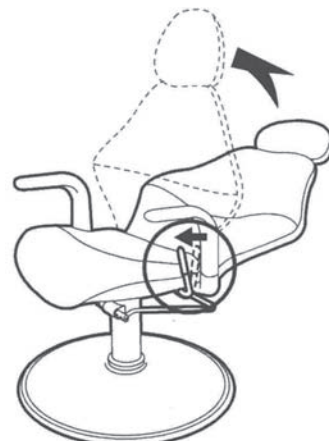

Raising and lowering the client (raising and lowering the chair)

1. Raise the chair. (Upward)

Pump the foot pedal several times within the range indicated by the arrow ① in the diagram below until the desired height is reached. When you pump the pedal once, the chair will rise approximately 12 mm.

IMPORTANT


If you pump the foot pedal firmly within the range indicated by the arrow ①, the chair will rise to the highest position after about 13 to 15 times.

2. Lower the chair. (Downward)

When the foot pedal is pumped to the lowest position in the direction indicated by the arrow ② in the diagram below, the chair will go down. If you release the foot pedal midway through descending, the chair will stop at that position.

3. Lock the chair. (Stop rotation)


When you kick the foot pedal upward in the direction indicated by the arrow ③ in the diagram below, the chair will be locked and stop rotating. To rotate the chair again, pump the foot pedal down to the standard position. This action will release the lock and enables the chair to be rotated.

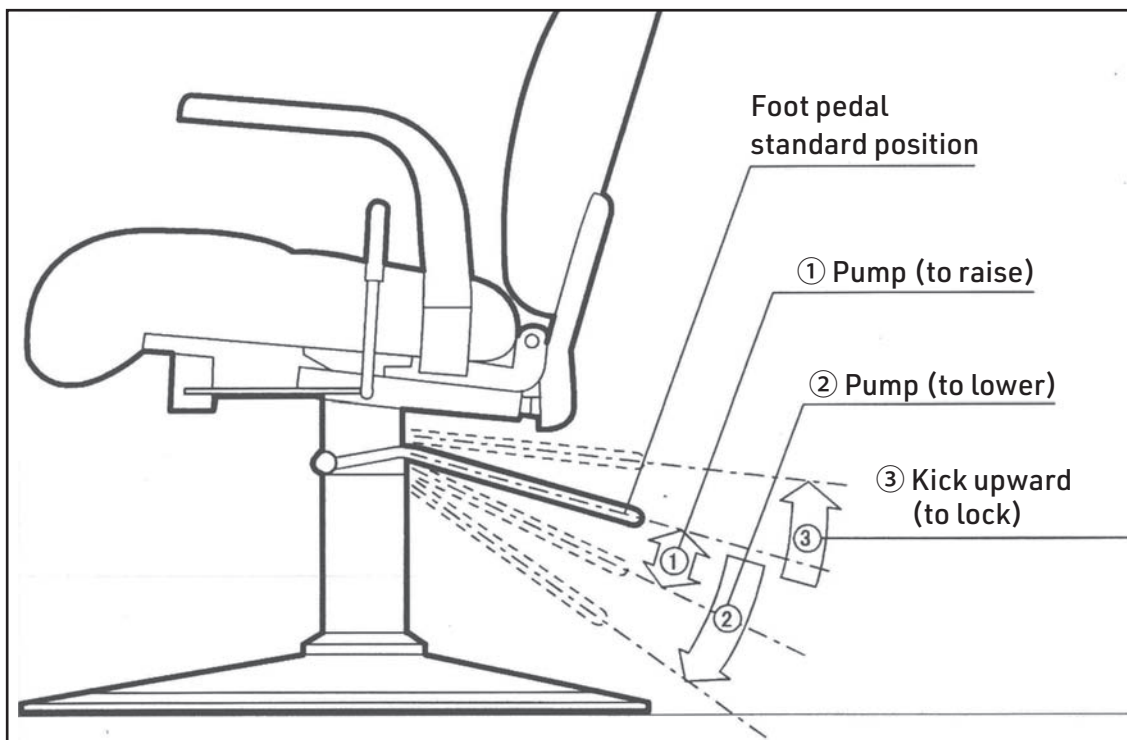

Maintenance Method

Vinyl leather parts/resin cover parts

Wipe with a damp, soft cloth.

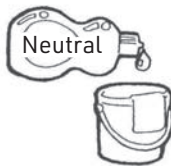

For severe staining

Wipe with a dilute neutral detergent.

Metal parts

Wipe with a dry, soft cloth without applying anything.




Avoid moisture and water.


The following materials must not be used:

Volatile chemicals, such as thinner, alcohol, gasoline, kerosene, wax containing abrasives, and sponges containing abrasives

CAUTION

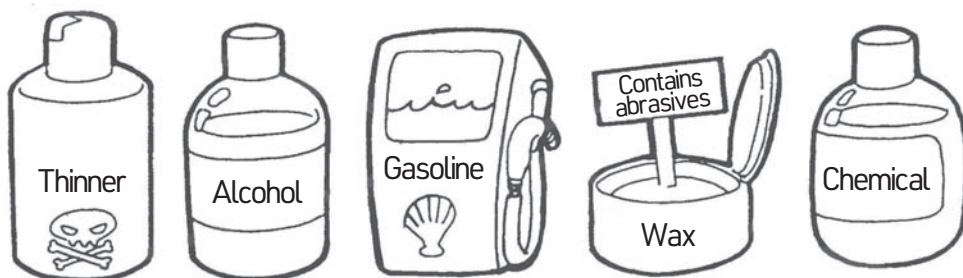

Specifications

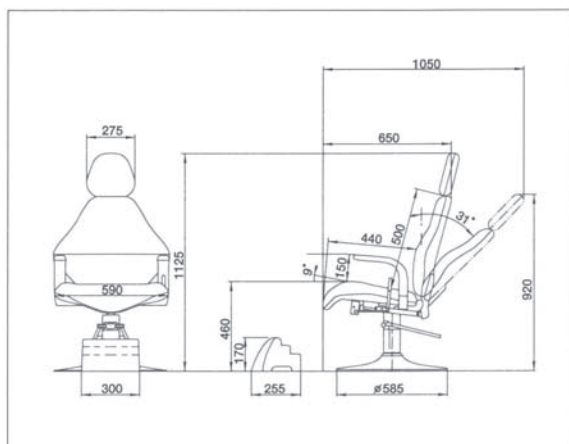

Chair top and base

Total length 1050 mm x total width 595 mm x total height 760-1125 mm

Footrest

Depth 255 mm x Width 300 mm x Height 170 mm

Seat height..... 460 mm

Weight 44 kg

Standard Period of Use

- The standard period of use for this product is seven years.
- Standard period of use is defined as "a guideline for the standard period of using the product without any problems in safety under standard conditions of product use with appropriate maintenance and inspection (including replacement of parts) performed." Please be advised that this is not an indication of the guarantee period, and the standard period will differ depending on the environment in which you use the product and the frequency of use. Please contact your local authorised Takara Belmont dealer for maintenance.

Consumable Goods

- "Consumable goods" refer to parts that are expected to undergo wear, deterioration, and changes/damage in appearance with use. Please be advised that the repair and replacement of consumable goods are not covered under the guarantee and will incur a charge.
(*Degree and timing of wear, deterioration, and damage vary depending on the environment and conditions under which the product is used.)
In the case of significant wear and deterioration or damage, inspection or replacement of the parts will be necessary. Please contact your local authorised Takara Belmont dealer immediately.

Consumable goods (The following parts are not covered by the guarantee and will incur a charge.)

- This model contains no parts designated as "parts not covered by the guarantee."

Also, scars, stains, deterioration, and discolouration on the outer surface of the exterior parts after use are not covered under the guarantee.

Disposal of the Product

When disposing of the product or replaced parts, waste should be processed appropriately according to current laws and regulations in your country.



TAKARA BELMONT CORPORATION

1-1, 2-Chome, Higashi-shinsaibashi, Chuo-ku, Osaka, Japan

TEL : +81-6-6213-5945

FAX : +81-6-6212-3680

Printed in Japan