


Yume Eyelash Device Set


Model number: **EA-YMELD/EA-YMELP**

Operating Instructions

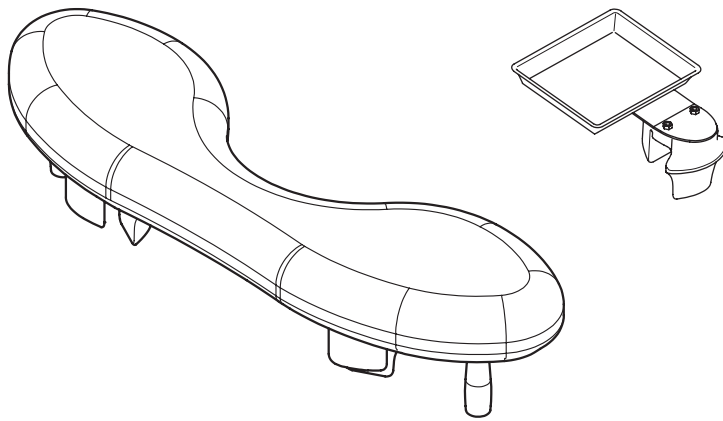

(The illustrations are EA-YMELD.)

Eyelash pillow

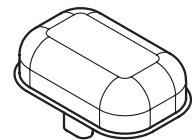

(The illustration is EA-YMELP.)
(sold separately)

Thank you for purchasing this Takara Belmont product.

Please read the Operating Instructions carefully before use and make sure to use the product correctly.

Thereafter, please keep the Operating Instructions in a safe place and read them again whenever necessary. Failing to read the Operating Instructions before use may lead to accidents.

This product is an industrial appliance for use in hairdressing salons. Do not use this product for any purpose other than eyelash extension. In addition, this product must only be used by properly trained professionals, such as qualified barbers or hairdressers.

If you have any questions about the Operating Instructions or the product, please contact your local authorised Takara Belmont dealer. If the Operating Instructions become difficult to read due to stains and/or tears, or if this booklet is misplaced, please request a copy from your local authorised Takara Belmont dealer.

Table of Contents

Introduction

Description of Warning Symbols	3
Safety Precautions	3
Precautions for Use	4
Cautions for Synthetic Leather Care	5
Accessories	5
Part Names	5

Preparation

Before Using the Product	6
--------------------------------	---

How to Use

Setting Up the Product	6
Fitting the Arm Support	7
Fitting the Tray Assembly	8
Fitting the Eyelash Pillow (Sold Separately)	9
Positioning the Client	9

Maintenance

Maintenance Method	10
--------------------------	----

Instructions to Read When Necessary

Daily Inspection	11
Standard Period of Use	11
Consumables	12
Disposal of the Product	12
Specifications	12
Product Dimensional Drawings	13

Description of Warning Symbols



■ Before using the product

Please be sure to read the Safety Precautions and Precautions for Use carefully, and use the product correctly.



■ Precautions shown on this page

These are intended for the safe use of the product and to prevent harm or damage to users or other people. All of the precautions shown are important details related to safety. Please be sure to follow these precautions. If an accident occurs due to failure to follow the Safety Precautions, Precautions for Use, and Cautions for Synthetic Leather Care, Takara Belmont shall not be responsible for any damage or risk to the person using this product or those around them due to an accident. In this case, the person failing to adhere to the Safety Precautions, Precautions for Use, or Cautions for Synthetic Leather Care will be responsible for any damage or risk incurred.

Detailed descriptions of symbols are provided below. Read and understand these symbols thoroughly before reading these instructions.

Symbols	Magnitude of harm/damage and urgency
 WARNING	The items explained under this symbol are precautions that may result in death or serious injury from the incorrect handling of the product if the warning is not followed.
 CAUTION	The items explained under this symbol are precautions that may result in mild or moderate injury or property damage from incorrect handling of the product if the caution is not followed.

Individual items that must be complied with are explained under the following symbols:

Symbols for prohibited items	Symbols for mandatory items
 Display for prohibition of disassembly, repair, and modification	 Display for general mandatory action by the user

Safety Precautions (items that must be followed)

WARNING

When using or handling the product



● **Avoid disassembling, repairing, or modifying the product.**

- The device must not be disassembled or repaired by anyone other than a qualified repair technician under any circumstances, as this may result in an accident or failure.
- Modification of the product is dangerous and must be avoided under any circumstances.



● **Discontinue use of this product if you notice damage to the leather.**

In the event of damage to the leather or anything abnormal, discontinue use of this product and immediately contact your local authorised Takara Belmont dealer.

● **Be sure to perform daily inspection.**

The use of the product without performing daily inspections may lead to injury and product damage.

Please refer to [page 11] for the daily inspection.

Precautions for Use

- **Use the equipment for hairdressing and beauty care purposes only.**

This product is an industrial appliance for use in hairdressing salons. This product must only be used by properly trained professionals, such as qualified barbers, hairdressers, and aestheticians.

- **Do not fit this product to any products other than those for which it is intended.**

Fitting this product to products other than those for which it is intended may result in inadequate installation, which may lead to personal injury or damage to the equipment.

- **Remove this product when not in use.**

Contact with this product while washing hair, etc., may result in personal injury.

- **Do not place heavy objects on the tray. (Load capacity: 10 N (1 kgf))**

Failure to observe this may cause the tray to deform or become detached.

- **Do not apply heat above 60°C.**

Deterioration or discolouration may result.

- **Do not apply steam directly to the leather.**

When using a steamer for treatment such as a head spa, make sure that the steam does not come into direct contact with the leather. Otherwise, it may deteriorate.

- **Do not cause a sharp object to come in contact with the leather.**

If a sharp object, such as a pair of scissors or a ring, comes in contact with the leather, the leather may tear.

- **If a chemical solution adheres to the product, wipe it off immediately.**

If a chemical solution adheres to the product, wipe it off immediately. Deterioration or discolouration may result.

- **Do not use peppermint oil or aromatic oils.**

Do not use peppermint or aromatic oils containing menthol. The leather may deteriorate.

- **Do not apply impact to this product.**

Personal injury may result due to damage to the product.

- **Do not use abrasives.**

Do not use abrasives for cleaning.

Use of hard cleaning tools, such as abrasives, abrasive sponges, or metal or nylon scrubbers, may leave scratches.

- **Do not use this product outdoors.**

This product is for indoor use only. Do not install it outdoors or in a vehicle. Be sure to use the product in a hairdressing salon. Otherwise, the equipment may not work properly or may break down.

Cautions for Synthetic Leather Care

● Stains from garment dyes


Clothing or belt colourings or dyes may discolour the synthetic leather of this product upon contact. In the event of such staining, wipe it off as quickly as possible using a soft damp cloth soaked with neutral detergent diluted to an approximately 1:10 ratio with water to avoid further penetration. Then wipe with a cloth wet with water, and wipe thoroughly with a dry cloth.

● Precautions against deterioration or colour transfer due to contact

- Contact with other resin parts or coated products, solvents, adhesive tapes, etc. may cause change in gloss, cracks, deformation, or delamination of the surface.
- Contact with newspaper or other printed matter may cause colour staining.
- Contact with printed fabrics, such as T-shirts, or jeans, etc. may cause colour staining of the leather due to dyes.
- If benzene, nail polish remover, alcohol, or oil come in contact with the product, discolouration, surface dissolution, change in gloss, hardening or softening, or delamination may occur.
- Using bleach or sheets washed in bleach may cause change in gloss or discolouration.
- If this product is placed in proximity to an extremely high-temperature heat source, such as an iron or a heater, deformation or discolouration may occur.
- Avoid direct sunlight by using curtains, etc. Otherwise, surface changes, contraction, discolouration, fading, etc. may occur.
- Placing a heavy object on the synthetic leather for an extended period may cause permanent dents or wrinkling.

Accessories



- ☐ L wrench ... 1 ☐ Protective sticker ... 1 ☐ Silicone sheet ... 1 ☐ Operating Instructions (this document) ... 1

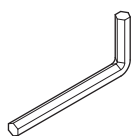


The eyelash pillow is sold separately.

Part Names


Arm support

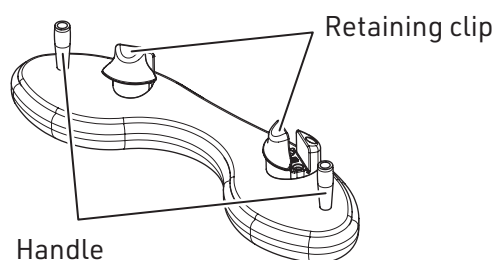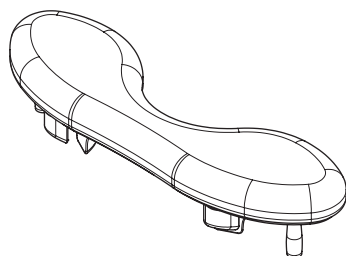

Tray assembly

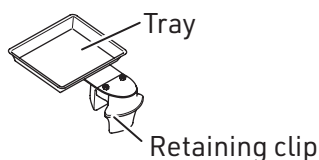

Eyelash pillow (sold separately)

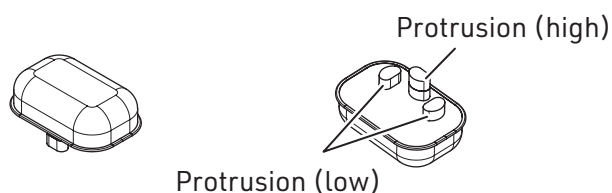

Setting Up the Product

This product is exclusively for the YUME series backwash basin type products.



WARNING


Do not fit this product to any products other than those for which it is intended. Fitting this product to products other than those for which it is intended may result in inadequate installation, which may lead to personal injury or damage to the equipment.

Products applicable to

- YUME
- YUME DX
- YUME ESPOIR Backwash basin type
- YUME SUITE Backwash basin type

Use this product by fitting each item to the basin of a YUME series product as shown in the diagram below.

* Set up the equipment according to the fitting procedures in the following sections.

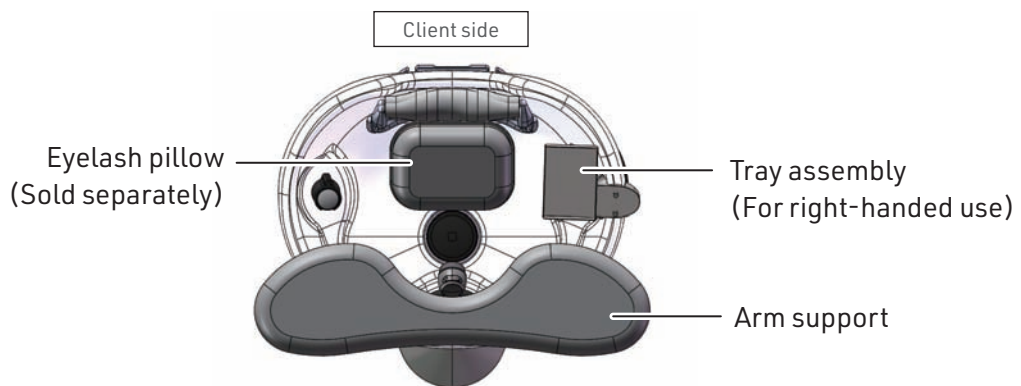

CAUTION

When setting it up, take care that the equipment does not come into contact with the client.

Fitting the Arm Support


1 Wipe the basin walls if they are wet.

⚠ WARNING Wet basin walls may result in inadequate installation and may cause personal injury.

2 With the concave side of the arm support facing the centre of the basin, align the centre of the arm support with the centre of the basin while checking the positions of the retaining clips.

⚠ WARNING

Check that the retaining clips are not loose or damaged. If there is any abnormality, stop using the product and contact your local authorised Takara Belmont dealer.

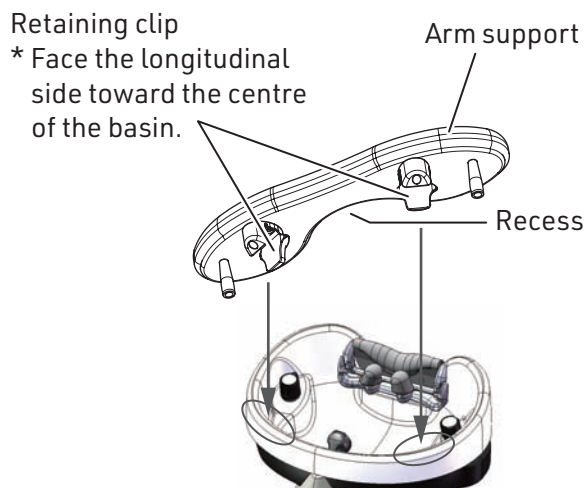



3 Place the retaining clips so that the longitudinal sides of the clips are at the centre of the basin, and press the arm support down from above to fit it.

⚠ CAUTION

- The basin is made of ceramic. Dropping the arm support on the basin may cause the basin to break.
- Do not allow the L wrench to hit the basin. The surface may be scratched.

If the arm support is not stable due to a large gap between the front and the rear, adjust the width by clamping the adjusting screw on each retaining clip with the L wrench provided.

[Retaining clip side view]

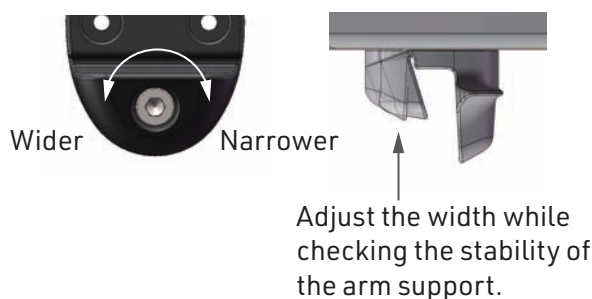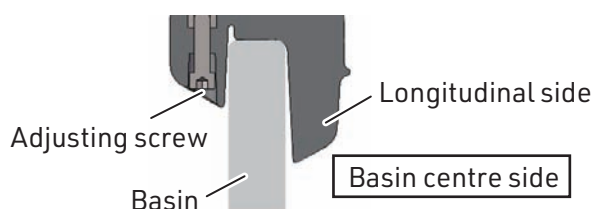

4 Check that the arm support is securely fixed and stable.

⚠ WARNING

There is a risk of personal injury if the arm support rattles. If there is any abnormality, stop using the product and contact your local authorised Takara Belmont dealer.

Fitting the Tray Assembly


1 Determine the fitting points.

Check the fitting points on either side of the basin and select the appropriate point for right-handed or left-handed use.

2 Place the retaining clip so that the adjusting screw side of the retaining clip is at the centre of the basin, and press the tray assembly down from above to fit it.



⚠ CAUTION

- The basin is made of ceramic. Dropping the tray assembly into the basin may cause the basin to crack or the tray to deform.
- Do not allow the L wrench to hit the basin. The surface may be scratched.

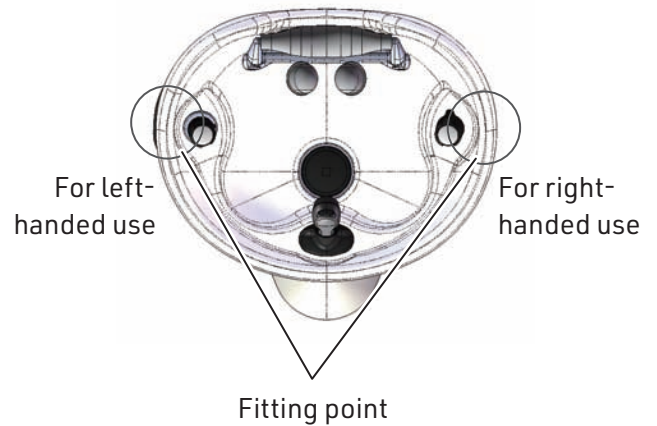

If the tray assembly is not stable due to a large gap between the left and right sides, adjust the width by clamping the adjusting screw on the retaining clip with the L wrench provided.

[Retaining clip side view]

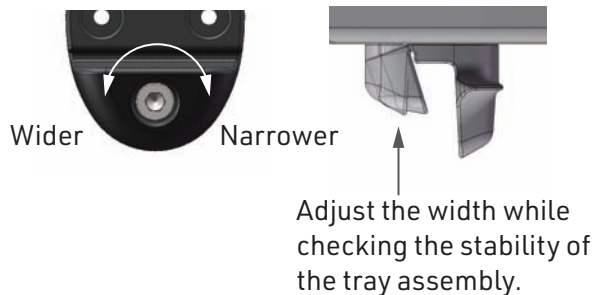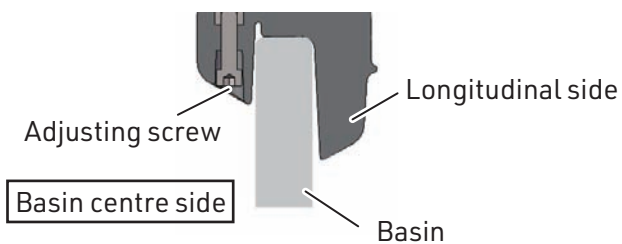


3 Place the silicone sheet on the tray.

4 Rotate the tray to the desired position.

⚠ CAUTION

Be careful not to allow the tray to hit the client when rotating it.

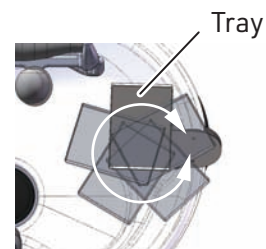





The tray rotates 360°.

Fitting the Eyelash Pillow (Sold Separately)

1 Remove the head pillows from the YUME neck device.

2 Insert the protrusions (low) of the eyelash pillow (on the back side) into the holes for the removed head pillows.

- Align the direction of the eyelash pillow with the fitting brackets and insert it.
- Insert the protrusions all the way and check that there is no rattling.

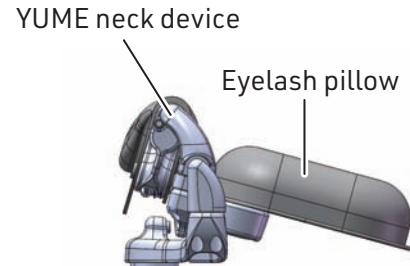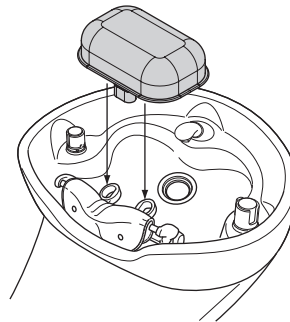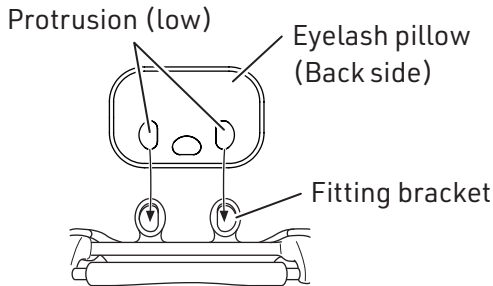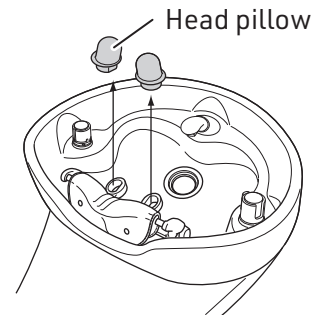

[When using the eyelash pillow]

WARNING

- If the low protrusions are not inserted all the way, the eyelash pillow may come off during the treatment and cause personal injury.
- Make sure that there are no abnormalities, such as damage or rattling of the eyelash pillow protrusions.

The eyelash pillow is a consumable.

When it becomes noticeably dirty or the surface deteriorates, replace it (for a charge).

To replace the eyelash pillow, please contact your local authorised Takara Belmont dealer.

Positioning the Client

Gently lower the client's head to the neck cushion while supporting the client's head.

WARNING

- During the eyelash treatment, be careful not to let the client or other people touch the foot switch of the shampoo equipment. Failure to do so may cause the chair to become activated, resulting in personal injury.
- Keep an eye on the client while using this product. If a client (especially a child) touches the control switch or causes the product to activate accidentally due to inadvertent contact, an unexpected accident may occur.
- Keep children away from the equipment during treatment.

CAUTION

- When reclining the backrest, support the client's head with your hand. Failure to do so may cause the client's head to hit the basin, arm support, or tray.
- Do not tip over or drop items in the tray.
- If any solution comes into contact with this product, wipe it dry immediately.

Maintenance Method

Maintenance should be performed after using the product to keep it clean at all times.
Stains left uncleaned may lead to the growth of mould.



CAUTION

Some metal parts and mechanical sections of the product have sharp edges. Take care not to injure your hands or fingers during cleaning.

Maintenance of Individual Parts

Leather parts Resin parts

Wipe them gently using a dry, soft cloth.

For severe staining

Wipe with a soft cloth wet with neutral detergent diluted about tenfold with water, followed by wiping with a cloth wet with water. Then carefully wipe with a dry cloth.

Metal parts

Wipe them using a soft, dry cloth.

Do not wipe them with a damp cloth. Moisture, let alone water, is harmful to these parts. If they become wet, wipe them dry immediately. Otherwise, rust or malfunction may result.

- The following materials must not be used:
Volatile chemicals, such as thinner, alcohol, remover, gasoline, or kerosene; acid, alkaline, or chlorine-based detergents; antiseptic solution strongly corrosive to metals (Povidone Iodine, sodium hypochlorite, etc.); waxes containing abrading agents; sponges containing abrading agents; or scrubbing brushes or other cleaning tools.
- Do not use brushes or scrubbing brushes for maintenance of the product because this may cause scarring and make stains more difficult to remove.
- Do not clean the leather parts using organic solvents, detergents containing abrasives, bleach, etc. The surface may deteriorate, and the texture and gloss may change.

When restarting use of this product after a long period of time, make sure to perform a thorough cleaning. After cleaning, make sure to confirm that the product operates correctly.

Daily Inspection

The following inspection should be performed for safe use of the product.



WARNING

Daily inspections must be performed according to the details shown below. Use without performing daily inspections may lead to injury or damage to the product, accessories, or facilities.

Daily inspection items

Inspection item	Inspection method	Action to be taken if the inspection result is "failure"
Is the arm support deformed?	Check that the arm support upholstery is not distorted.	Damage or accidents may result. Stop using the product and contact your local authorised Takara Belmont dealer.
	Hold both ends of the arm support upholstery to check that there is no unusual noise.	
Do the retaining clips of the arm support rattle?	Check that there is no rattling by holding the arm support upholstery and each retaining clip.	Damage or accidents may result. Stop using the product and contact your local authorised Takara Belmont dealer.
Do the handles of the arm support rattle?	Check that there is no rattling by holding the arm support upholstery and each handle.	Damage or accidents may result. Stop using the product and contact your local authorised Takara Belmont dealer.
Is any retaining clip damaged?	Check that there are no chips, cracks, or splits in the retaining clips.	Damage or accidents may result. Stop using the product and contact your local authorised Takara Belmont dealer.
Does the tray assembly rattle?	Check that there is no rattling by holding the tray and the retaining clip.	Damage or accidents may result. Stop using the product and contact your local authorised Takara Belmont dealer.
Do the protrusions of the eyelash pillow (sold separately) rattle?	Check that there is no rattling by holding the eyelash pillow and each protrusion.	Damage or accidents may result. Stop using the product and contact your local authorised Takara Belmont dealer.

Standard Period of Use

- The standard period of use for this product is three years.
- The "standard period of use" is defined as "a guideline for the standard duration of safe and effective use of the product under standard conditions, with the performance of appropriate maintenance and inspection, including replacement of parts." Please be advised that this is not an indication of the guarantee period, and the standard period will differ depending on the environment and frequency with which the client uses the product. Please contact your local authorised Takara Belmont dealer for maintenance after the standard period of use.

Consumables

"Consumables" refer to parts that are expected to undergo wear, deterioration, or changes or damage in appearance with use. Please be advised that the repair and replacement of consumable goods are not covered under the guarantee and will incur a charge.

(* The degree and timing of wear, deterioration, and damage varies depending on the environment and conditions in which the product is used.)

In the case of significant wear and deterioration or damage, inspection or replacement of the parts will be necessary. Please contact your local authorised Takara Belmont dealer immediately.

Consumables (The following items are not covered by the warranty and will incur a charge.)

- | | | | |
|---|-------------------------------|---|---|
| <input type="checkbox"/> Upholstery parts | <input type="checkbox"/> Tray | <input type="checkbox"/> Retaining clip | <input type="checkbox"/> Silicone sheet |
| <input type="checkbox"/> Eyelash pillow (sold separately) | | | |

Disposal of the Product

When disposing of the product or replaced parts, waste should be processed appropriately according to the current laws and regulations in your country.

Specifications


Model number	YUME Eyelash Device Set: EA-YMELD YUME Eyelash Pillow: EA-YMELP
Outer dimensions	Refer to "Product Dimensional Drawings" [page 13].
Usage environment	Temperature: 10 to 40°C Humidity: 95% max. (without condensation)
Weight	EA-YMELD: 2.0kg EA-YMELP: 0.6kg
Load capacity	Tray: 10 N (1 kgf)
Products applicable to	YUME series backwash basin type products (support for full-flat posture)

* Regarding the above specifications, there may be slight individual differences among the same products.


Product Dimensional Drawings

[In mm]


Arm support

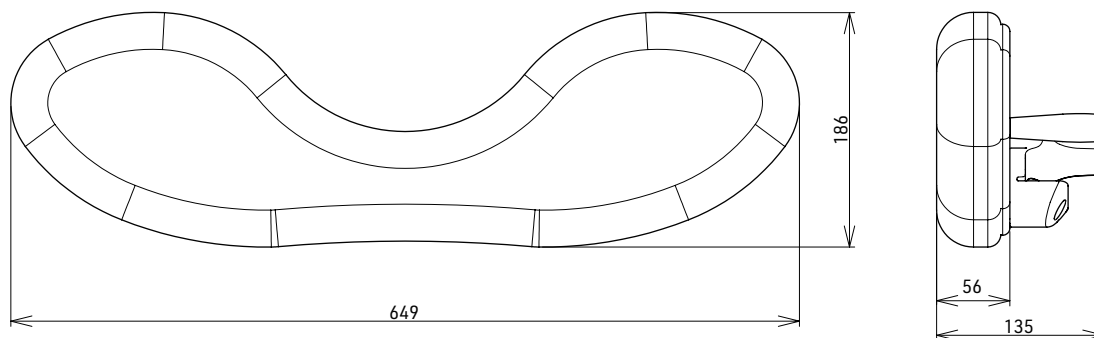

Tray assembly

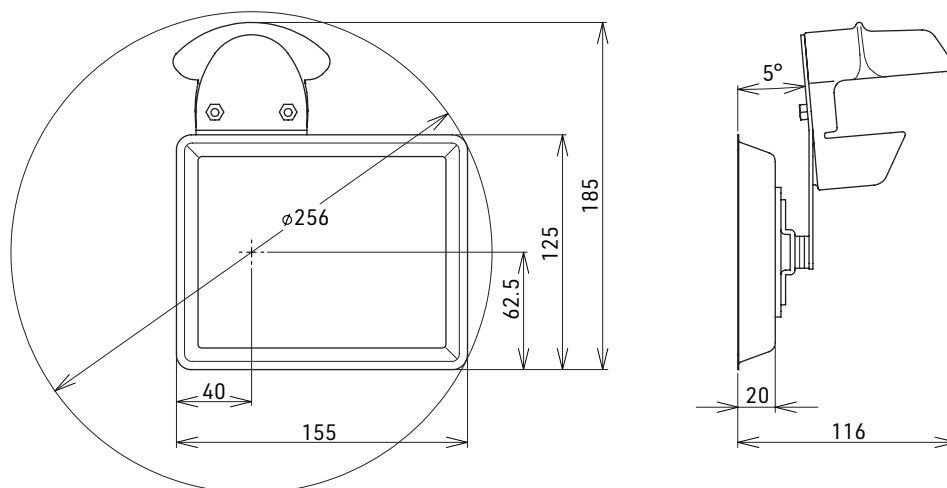

Eyelash pillow (sold separately)

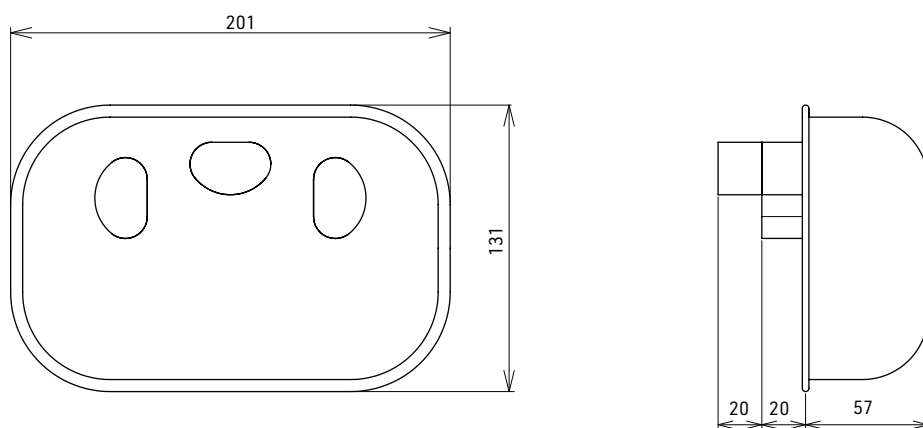

MEMO

MEMO



TAKARA BELMONT CORPORATION

1-1, 2-Chome, Higashi-shinsaibashi, Chuo-ku, Osaka, Japan

TEL : +81-6-6213-5945

FAX : +81-6-6212-3680

Printed in Japan