


Takara Belmont Esthetic Reclining Chair Bed


Comfort Chair Bed

Model No. SC-754

Operating Instructions

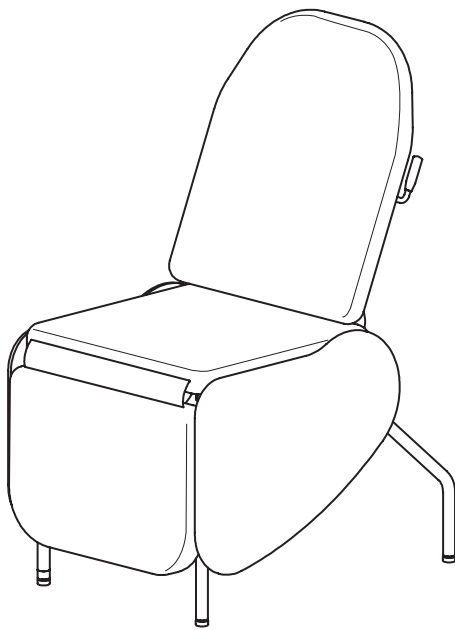

(Chair position)

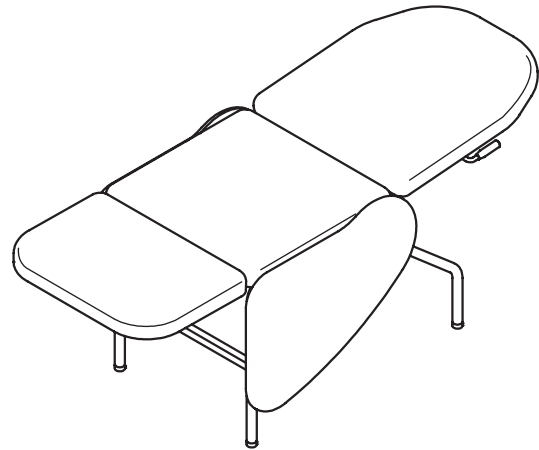

(Bed position)

Thank you for purchasing this Takara Belmont product.

Please read the Operating Instructions carefully before use and use the product appropriately. Thereafter, please keep the Operating Instructions in a safe place and read them again whenever necessary. Failing to read the Operating Instructions before use may lead to accidents.

Please note that this product is an industrial appliance for use in esthetic salons and hairdressing salons. Do not use the product for any purpose other than esthetic or hairdressing services. The product must only be used by qualified professionals, such as estheticians and hair stylists.

If you have any questions about the Operating Instructions or the product, please contact us. If the Operating Instructions become illegible due to stains and/or tears, or if this booklet is misplaced, please request a copy from Takara Belmont.

Table of Contents

Introduction

Description of Warning Symbols	3
Safety Precautions	4
Precautions for Use	6
Precautions for Synthetic (Natural) Leather Care	7
Warning Label Locations	7
Accessories	8
Part Names	8

Preparation

How to Install / Move	9
-----------------------------	---

How to Use

How to Use	10
------------------	----

Cleaning

Cleaning Instructions	11
-----------------------------	----

Information for Use when Needed

Daily Inspection	12
Standard Period of Use	13
Parts Not Covered by Warranty	13
Disposal of the Product	13
Specifications	14

Description of Warning Symbols

■ Before using the product

Please be sure to read the Safety Precautions and Precautions for Use carefully and use the product correctly.



■ The precautions shown on this page

These are intended for the safe use of the product and to prevent harm and damage to users and other people.




All of the precautions shown are important details related to safety. Please be sure to follow these precautions.

If an accident occurs due to failure to follow the Safety Precautions, the Precautions for Use, and/or the Precautions for Synthetic (Natural) Leather Care, Takara Belmont is not responsible for any damage or risk to the person using this product or those around them due to accidents. In this case, the person failing to adhere to the Safety Precautions, the Precautions for Use, and/or the Precautions for Synthetic (Natural) Leather Care will be responsible for any damage or risk incurred.

Detailed descriptions of symbols are provided below. Read and understand these symbols thoroughly before reading these instructions.

Symbols	Magnitude of harm/damage and urgency
 Warning	The items explained under this symbol are precautions that may result in death or serious injury from the incorrect handling of the product if the warning is not followed.
 Caution	The items explained under this symbol are precautions that may result in mild or moderate injury or property damage from the incorrect handling of the product if the caution is not followed.

Individual items that must be complied with are explained under the following symbols:

Symbols for prohibited items	Symbols for mandatory items
 Display for general prohibitions  Display for prohibition of disassembly, repair, and modification	 Display for general mandatory action by the user

Safety Precautions (Items That Must Be Followed)

Warning

Installation and moving




- **Precautions for installing this product**

- For installation of this product, refer to ""How to install/move"" [on page 9].
- Only qualified technicians (from Takara Belmont or Takara Belmont-designated contractors) are allowed to install the product.
- Make sure to install this product only on a flat, solid surface.
If this product is installed on a floor with a slope of 5° or more, it may tip over.
- Please install the chair bed in a place with adequate space and no obstacles around the chair bed.

- **Precautions for moving**

- When moving, hold the chair bed firmly by the legs.
Lifting the chair bed by anything other than the legs may damage the chair bed.
- Do not move the chair bed with a person on it.
A fall may cause damage to the chair bed or a person may fall and be injured.
- When lifting and transporting the chair bed, make sure to have two or more people hold the legs. Carrying the chair bed by anything other than the legs may cause the chair bed to accidentally activate and may cause injury.
This kind of action is strictly prohibited.

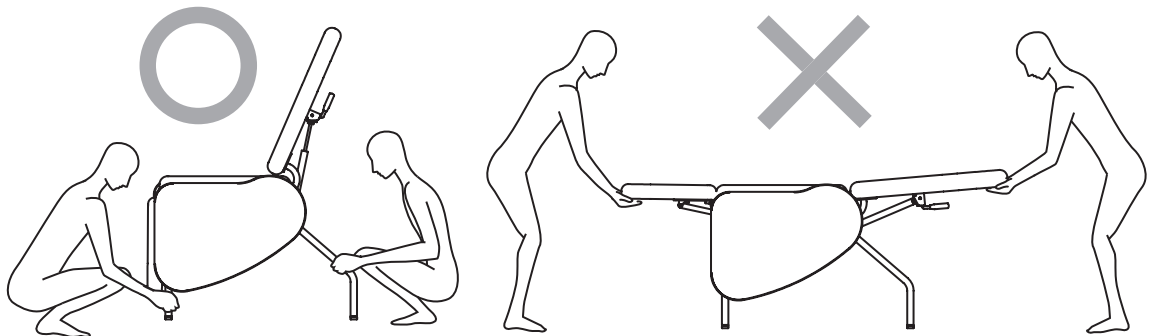

When using or cleaning ...



- **Keep hands, fingers and other body parts as well as the clothes of both the client and the user well away from the moving parts of the equipment and its surroundings.**


If caught, injury may result.

- **Do not stand on the chair bed.**

The chair bed may tip over, causing injury or damage to the chair bed, peripheral equipment, installations, etc.

- **Do not stand on the leg rest or backrest, or place excessive weight thereon.**

The chair bed may tip over, causing injury or damage to the chair bed, peripheral equipment, installations, etc.

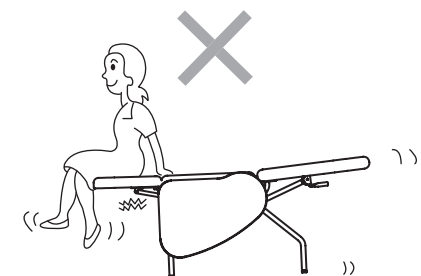

Safety Precautions (Items That Must Be Followed)

Warning

When using or cleaning ...



- **When getting on and off the chair bed, raise the backrest and get on and off from the seat.**

When getting on and off the chair bed, please get on and off from the seat while in the chair position. Getting on or off the chair bed from the backrest or the leg rest while in the bed position may cause the chair bed to tip over, and injury may result.

- **Precautions when changing the angle of the backrest.**

- When changing the angle of the backrest, be sure to check that there are no people or objects near the chair bed before operating. Collision may result in injury or damage to the chair bed. Also, please make sure that the client's arms and hands are not between the backrest and the seat before operating the product. When caught, injury may result.
- When changing the angle of the backrest, please notify the client. Injury due to unexpected client movement may result.

- **When changing the angle of the backrest, support the backrest firmly.**

To change the angle of the backrest while the client is leaning against it, firmly support the backrest with your hands and pull the angle lever backrest lever. When the angle lever backrest lever is pulled, the backrest gains force to return to the chair position, so if the backrest is not firmly supported, the backrest may rise forcefully and cause injury to the client and the user. When the desired angle is achieved, release your hands from the angle lever backrest lever and backrest.

- **Be sure to perform daily inspection**

The use of the product without performing daily inspections may lead to injury and product damage. Please refer to [page 12] for the daily inspection.



- **Avoid disassembling, repairing, and modifying the product**

The device must not be disassembled or repaired by people other than qualified repair technicians under any circumstances because this may result in accidents and/or failures. Modification of the product is dangerous and must be avoided under any circumstances.

Safety Precautions (Items That Must Be Followed)

Caution

Installation and moving

- **Moving**

When moving, dragging the chair bed may damage the floor surface or cause the chair bed to malfunction or be damaged.

When using or cleaning ...



- **Do not wipe with chemicals.**

Leather and resins may deteriorate or discolor. If a chemical does get on the surface, wipe it off immediately.

- **Do not get on the chair bed with more than one people.**

Do not get on the chair bed with more than one people. Also, please do not get on the chair bed if you are heavier than 135 kg. Malfunction of or damage to the chair bed may occur, and injury may result.



- **Keep an eye on the client and any children.**

Keep an eye on the client while using this product. If a client (especially a child) touches the angle lever backrest lever or causes the product to activate accidentally by inadvertent contact, an unexpected accident may occur.

- Please keep anyone other than those receiving treatment away from this product.

Precautions for use

- **If a chemical solution attaches to the product, wipe it off immediately.**

If a chemical solution gets on the leather or resin, wipe it off immediately.
Deterioration or discoloration may result.

- **Do not apply heat.**

Applying heat may cause deterioration or discoloration of the leather or resin.

- **Do not place anything other than people on the chair bed.**

Deformation, tear, and/or corrosion of the leather may result.

- **Do not use for any purpose other than aesthetic treatment.**

This product is an industrial appliance for use in esthetic salons.
The product must only be used by estheticians.

- **Do not use the product outdoors.**

Failure to do so may result in malfunction.

- **Maximum load is 1350 N (135 kgf).**

Make sure that the weight placed on the bed is not more than 135 kg. Otherwise, malfunction or damage of the chair bed may occur.

- **Do not cause a sharp object to come in contact with the leather.**

If a sharp object, such as a key, comes in contact with the leather, the leather may tear.

Precautions for Synthetic (Natural) Leather Care


- **Stain from garment dyes**

The synthetic leather of this product may incur color transfer due to contact with the user's clothing or belt. If such color transfer occurs, wipe with a soft cloth moistened with neutral detergent diluted about tenfold with water, followed by wiping with a cloth moistened with water, then carefully wipe with a dry cloth as quickly as possible to avoid further penetration.

- **Precautions against deterioration and color transfer due to contact**

- Contact with other resin parts or coated products, solvents, adhesive tapes, etc. may cause change in gloss, cracks, deformation, or delamination of the surface.
- Contact with newspaper or other printed matters may cause color transfer.
- Contact with printed fabrics, such as T-shirts, jeans, etc. may cause color transfer onto the leather due to dyes.
- If benzine, nail polish remover, alcohol, or oil comes in contact, discoloration, surface dissolution, change in gloss, hardening or softening, or delamination may occur.
- Using bleach or sheets washed in bleach may cause change in gloss or discoloration.
- If this product is placed in proximity to an extremely high-temperature heat source, such as an iron or a heater, deformation or discoloration may occur.
- Avoid direct sunlight by using curtains, etc. Surface changes, contraction, discoloration, fading, etc. may occur.
- Placing a heavy object on the synthetic leather for extended periods may cause permanent dents or wrinkling.


Warning Label Locations

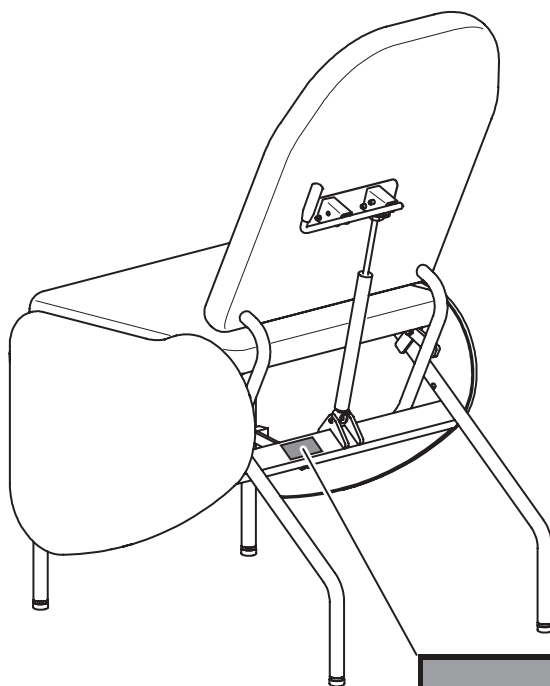

Accessories

- Operating Instructions (this document)
- Request regarding bed use during treatment (1 sheet)


Part Names

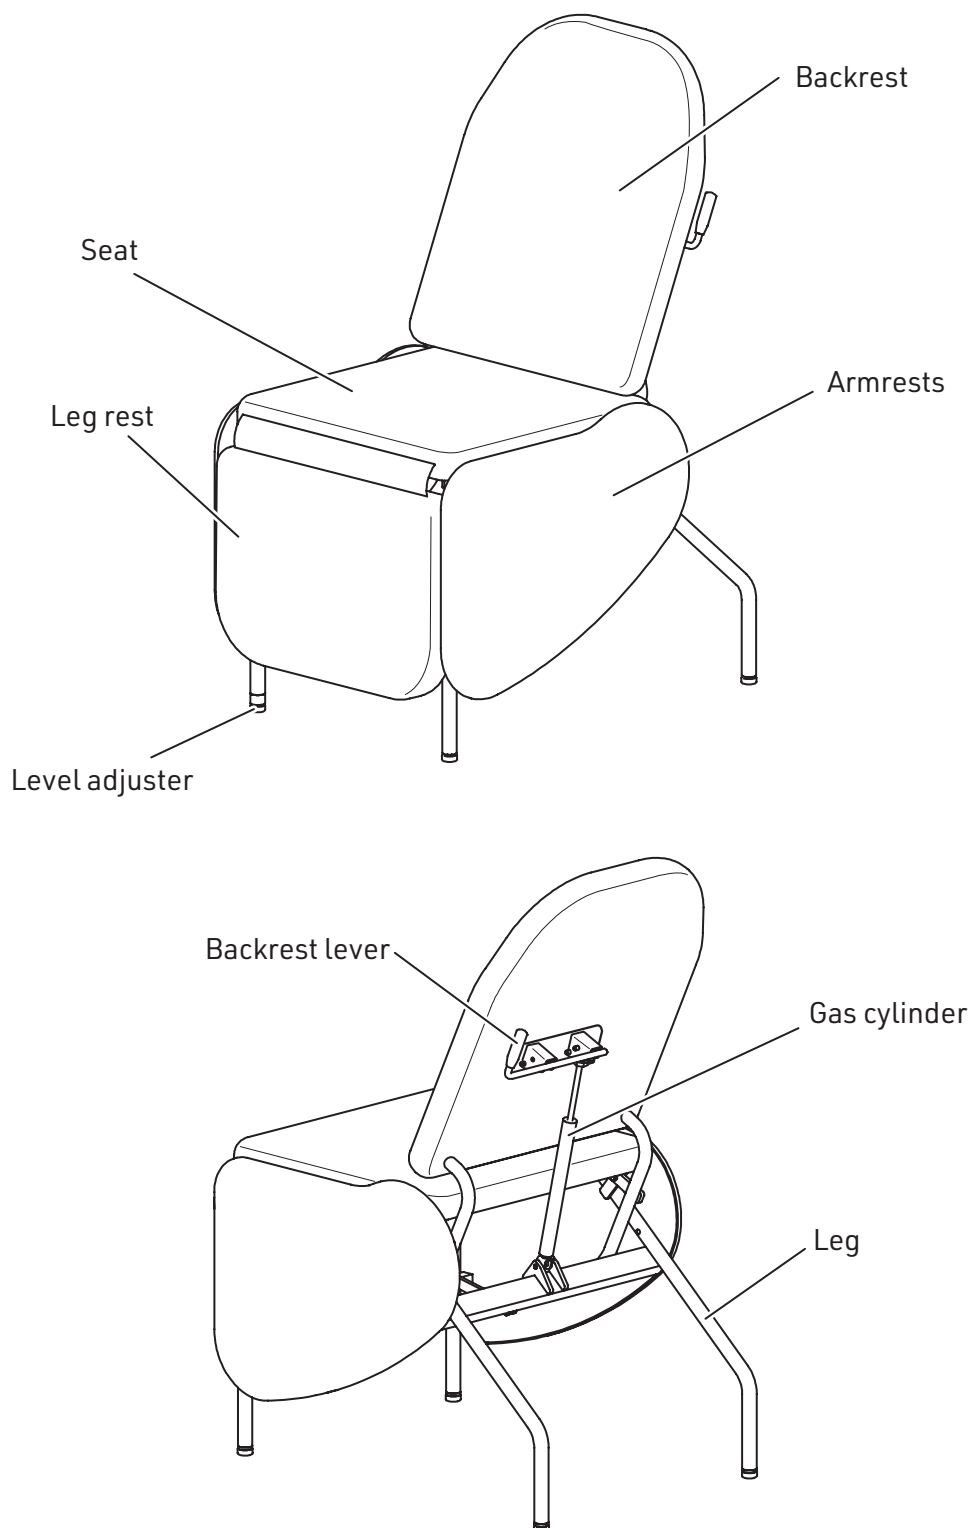

How to Install / Move

When installing or moving the chair bed

- When installing or moving, hold the chair bed firmly by the legs. Lifting the chair bed by anything other than the legs may damage the chair bed.

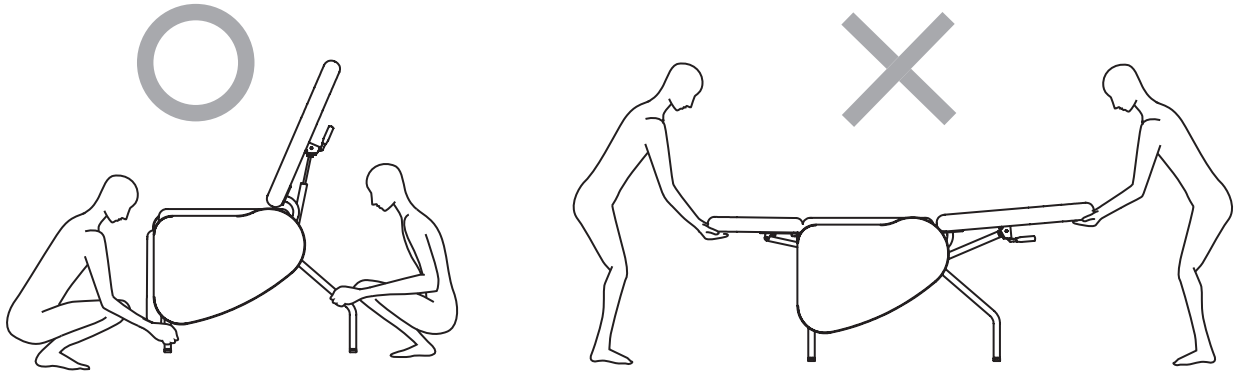

Warning


- Do not move the chair bed with a person on it. A fall may cause damage to the chair bed or a person may fall and be injured.
- When lifting and transporting the chair bed, make sure to have two or more people hold the legs. Carrying the chair bed by anything other than the legs may cause the chair bed to accidentally activate, and may cause injury. This kind of action is strictly prohibited.

Caution

When moving, dragging the chair bed may damage the floor surface or cause the chair bed to malfunction or be damaged.

Use of a level adjuster

If this product is not stably placed due to a gap between the floor and the leg, use a level adjuster.

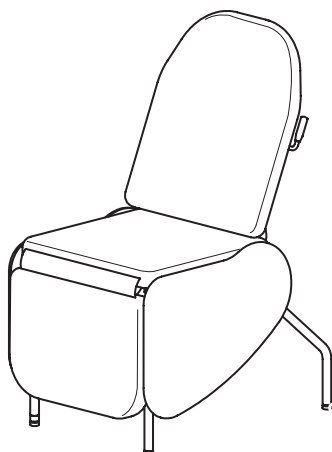


The level adjuster is extended by turning the level adjuster knob clockwise. The adjuster is retracted by turning the knob counterclockwise.



How to Use

1 Welcoming a client


Guide the client to the chair bed.
Make sure the chair bed is in its initial position (chair position), and have the client sit on the seat from the front of the chair bed and sit all the way to the back.

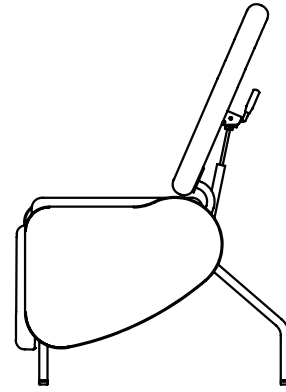

Initial position (chair position)

2 Changing the angle of the backrest (leg rest)

The leg rest moves simultaneously with the backrest, so when the backrest is lowered, the leg rest is raised.

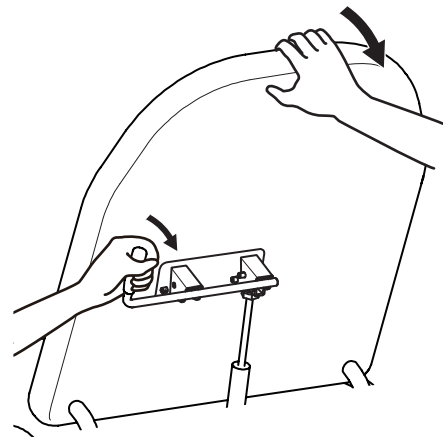

3 Locking the backrest (leg rest)

When the desired angle is achieved, release your hands from the backrest lever and backrest.


4 Raise the client and return the chair bed to the initial position (chair position).

The leg rest moves simultaneously with the backrest, so when the backrest is raised, the leg rest is lowered.

Warning

- When changing the angle of the backrest, be sure to check that there are no people or objects near the chair bed before operating.
- Please make sure that the client's arms and hands are not between the backrest and the seat before operating the product.
- When the client shifts from face down to face up or face up to face down during treatment, make sure that the client does not sit on the backrest or leg rest.

Sitting on the backrest or leg rest may cause the chair bed to tip over, causing injury or damage to the chair bed, peripheral equipment, installations, etc.

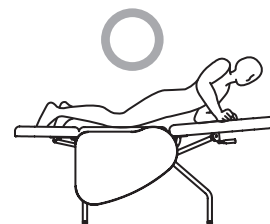

Cleaning Instructions

Maintenance should be performed after using the product to keep it clean at all times.
Stains left uncleaned may lead to the growth of mold.



Caution

Some metal parts and mechanical sections of the product have sharp edges. Take caution not to injure your hands or fingers during cleaning.

Maintenance of Individual Parts

Leather part/ Resin part

Gently wipe the product with a dry, soft cloth.

For severe staining

Wipe with a soft cloth moistened with neutral detergent diluted about tenfold with water, followed by wiping with a cloth moistened with water, then carefully wipe with a dry cloth.

Metal parts

Wipe these parts with a soft, dry cloth.

Please do not wipe with water. If the product becomes wet with water or a chemical solution, wipe it dry immediately. Failure to do so may cause rust to occur.

The following materials must not be used: Volatile chemicals such as thinner, alcohol, nail-polish remover, gasoline, or kerosene; acid, alkaline, or chlorine-based detergents; antiseptic solutions that corrode metals (e.g., povidone iodine, known as "Isodine," or sodium hypochlorite); or abrasive wax or sponges.

- Do not use brushes or scrubbing brushes for maintenance of the product because this may cause scarring and make the stains more difficult to remove.
- Do not clean the leather part with cleaners containing organic solvents or abrasives, or bleach, etc. The surface may deteriorate, and the texture and gloss may change.

When restarting to use this product after a long period of time, make sure to perform cleaning. After cleaning, make sure to confirm that the product operates appropriately.

Daily Inspection

The following inspection should be performed for safe use of the product.



Warning

Daily inspections must be performed according to the details shown below. Use without performing daily inspections may lead to injury and damage to the product, peripheral equipment, installations, etc.

Daily inspection items

Inspection item	Inspection method	Action to take if the inspection result is "Fail"
Check to make sure that the entire chair bed, backrest, and leg rest are not loose.	Check that there is no wobbling by gently pushing or shaking the chair bed back and forth and from side to side.	A "Fail" result may cause malfunction or damage to the chair bed or a fall accident. Please stop using the product and contact our call center.
	Check that there is no wobbling by gently pushing or shaking the top of the back rest and the end of the leg rest back and forth and from side to side.	
Check to make sure the angle lever is not loose.	Check that there is no wobbling by gently pushing or shaking the lever back and forth and from side to side.	A "Fail" result may cause malfunction or damage to the chair bed or a fall accident. Please stop using the product and contact our call center.
Check if the angle of the backrest can be changed.	Make sure that there is no looseness or abnormal noise during each operation.	A "Fail" result may cause malfunction or damage to the chair bed or a fall accident. Please stop using the product and contact our call center.

Standard Period of Use

- The standard period of use for this product is seven years.
- Standard period of use is defined as "a guideline for the standard period of using the product without any problems in safety under standard conditions of product use with appropriate maintenance and inspection (including replacement of parts) performed." Please be advised that this is not an indication of the warranty period, and the standard period will differ depending on the environment in which you use the product and the frequency of use. Please contact your local authorized Takara Belmont dealer for maintenance after completion of the standard period of use.

Parts Not Covered by Warranty

Parts not covered by warranty refer to parts that are expected to wear, deteriorate, change in appearance, or be damaged due to use.

Please be advised that the repair and replacement of consumable goods are not covered under the warranty and will incur a charge.

(*Degree and timing of wear, deterioration, and damage vary depending on the environment and conditions under which the product is used.)

In the case of significant wear and deterioration or damage, inspection or replacement of the parts will be necessary. Please contact your local Takara Belmont dealer immediately.

Parts not covered by warranty

- This product contains no parts designated as "parts not covered by warranty".

Also, scars, stains, deterioration, and discoloration on the outer surface of the exterior parts are not covered under the warranty.

- Sewn parts
- Metal painted parts (pipes, sheet metal, etc.)
- Resin parts (adjusters)


Disposal of the Product

When disposing of the product or replaced parts, waste should be processed appropriately according to current laws and regulations in your country.

Specifications

Product number SC-754
 Weight 35 kg
 Maximum load 1350 N (135 kgf)
 Usage environment temperature 0 to 40°C
 Humidity 10 to 95%
 Atmospheric pressure 700-1060 hPa

SC-754

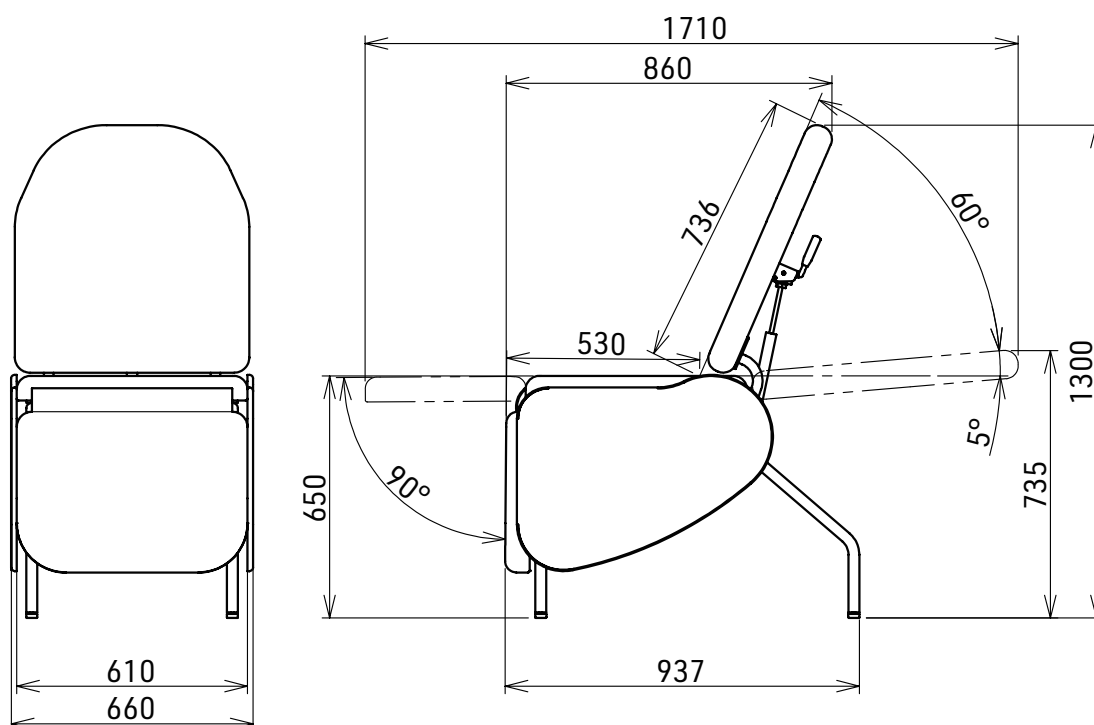

- Unit: mm
- The dimensions and specifications given here are subject to change for improvement without notice.

MEMO



TAKARA BELMONT CORPORATION

1-1, 2-Chome, Higashi-shinsaibashi, Chuo-ku, Osaka, Japan

TEL : +81-6-6213-5945

FAX : +81-6-6212-3680

Printed in Japan